

Control and Visualization Terminal BTV01.3

Servicing Guidelines

DOK-SUPPL*-BTV01.3*HDD-MA02-EN-P





Title	Control and Visualization Terminal BTV01.3
Type of documentation	Servicing Guidelines
Document code	DOK-SUPPL*-BTV01.3*HDD-MA02-EN-P
Internal file reference	BTV01.3-Servicing Guidelines120-2100-B313-02/EN
The purpose of this documentation	This documentation supports

• servicing on BTV01.3

Editing sequence

Document designations of	Status	Comments
previous editions		
109-0911-4116-00	09.97	new issue
120-2100-B313-02/EN	07.99	corrections, changeover $DOZ \Rightarrow DOK$

Copyright	© INDRAMAT GmbH, 1999
	Copying this document and giving it to others and the use and communication of the contents hereof without express authority, are forbidden. Offenders are liable for the payment of damages. All rights reserved in the event of the grant of a patent or registration of a utility model or design. (DIN 34-1)
Validity	All rights reserved in the event of a change in documentation and product delivery.
Published by	INDRAMAT GmbH • BgmDrNebel-Str. 2 • D-97816 Lohr a. Main
	Telefon 09352/40-0 • Tx 689421 • Fax 09352/40-4885
	Dept. ESM (JA)
Attention	This documentation is printed on chlorine-free paper.

Contents

1 Exchanging the Hard Disk in the BTV01.3	1-1
1.1 Removing the Hard Disk	
1.2 Mounting the Hard Disk	
1.3 Entering the New Hard Disk in the BIOS	
1.4 Installing the Pre-Installed Hard Disk	
1.5 BIOS – Settings	
Window 1: Standard Setup Options Menu	
Window 2: Advanced Feature Control Menu	
2 Figures	2-1

3 Index

3-1





1 Exchanging the Hard Disk in the BTV01.3

Attention: Hard Disks are highly sensitive to shock and vibrations! The Hard Disk may only be replaced after **dismantling** and if **no power** is being applied to the BTV01.3!

1.1 Removing the Hard Disk

- Switch machine off, dismantle and place it on its front.
- After removing the three mounting screws as illustrated in Figure 1-1, remove the Hard Disk holder and lay it on the right hand side on the back wall of housing.



Fig. 1-1: Loosen the Hard Disk holder



Loosen the mounting screws of the four spring components (Fig.1-2)

Fig. 1-2: Loosen the four spring components



• Pull the spring components as shown in Fig. 1-3 out somewhat and now remove the cover.



Fig. 1-3: Remove the cover

• After removing the four plastic screws, as it shown in Fig. 1-4, remove the carrier panel of the mounting panel and then pull the cable away from the mounting panel.



Fig. 1-4: Removing the mounting panel

1.2 Mounting the Hard Disk

- Clip the cable onto the Hard Disk ensuring that the orientation is correct (pin 1).
- Scew Hard Disk onto carrier panel. (Fig.1-4)

Attention: Do not forget the insulating Disc! Fasten the plastic screws carefully!

- Put cover into place and hook the spring components into place. (Fig.1-3)
- Mount the spring components onto the cover. (Fig.1-2)
- Bring the Hard Disk mounting panel back into place and fasten it. (Fig.1-1)

1.3 Entering the New Hard Disk in the BIOS

- Start the PC.
- Call up the BIOS setup by pressing the keys **Ctrl + Alt + S** during BIOS startup.
- Set values for new Hard Disk (Fixed Disk C:) in: window 1: Standard Setup Options Menu (see 1.5.1)

Attention: The values are specified in the data sheet of the Hard Disk.

Alternativly, the values of numerous Hard Disks can be automatically determined by selecting Hard Disk types "49" and "F1".

- Check all other BIOS settings
 - (see 1.5.2 as per window 2: Advanced Feature Control Menu)
- Prior to leaving the setup menu, store all settings! (F10)

1.4 Installing the Pre-Installed Hard Disk

1.4.1 DOS

- The Hard Disks are delivered with an operable DOS.
- Additional pre-installations can be ordered.
- Additional software must be installed by the user as per software instructions.

1.4.2 Windows-NT 3.51

- The Hard Disks are delivered directly with an operable Windows NT 3.51.
- Additional pre-installations can be ordered.
- Additional software must be installed by the user as per software instructions.



1.5 BIOS – Settings

Window 1: Standard Setup Options Menu

Chips and Technologies, Inc. System Configuration Utility				
Time: Date:	current time entered current date	Processor: entered by system Coprocessor: entered by system		
Disk A: Disk B:	3.5 Inch, 1.44 MB Not Installed	Cyl Hd Pre LZ Sec Size		
Fixed Disk C: Fixed Disk D:	Type 49 Not Installed	values determined automatically with Fi		
Base Memory: Extended Memory:	640 KB as entered on right	BIOS Found: entered by system		
Display:	EGA or VGA			
$\uparrow \downarrow \leftarrow \rightarrow$ to select entries				
+ and - to change a ESC to exit without	n entry saving	PgDn for Advanced Feature Control F10 to save then exit		

Fig. 1-5: window 1: Standard Setup Options Menu

Window 2: Advanced Feature Control Menu

Chips and Technologies, Inc. System Configuration Utility			
NumLock:	On		
External Cache: Internal Cache: DRAM Timing: Shadow System BIOS: Shadow Video BIOS: Boot Divice Order: IDE 0 Transfer Mode: IDE 1 Transfer Mode: Password:	Write Back Write Back 4-3-3-3 Enabled enabled C:,A: Slowest (Default) Slowest (Default) Disabled	in V1.2: Write Through in V1.2: Write Through in V1.2 ff not visible in V1.4 ff not visible in V1.4 ff not visible	
$ \uparrow \downarrow \leftarrow \rightarrow \text{to select entr} $ + and - to change an entresc to exit without saving entremption of the second secon	ries try ng	PgUp for Standard Setup Options PgDn for 82C721/735 Configuration F10 to save then exit	Abb-6.fh5

Fig. 1-6: window 2: Advanced Feature Control Menu



2 Figures

Fig. 1-1: Loosen the Hard Disk holder	1-1
Fig. 1-2: Loosen the four spring components	1-1
Fig. 1-3: Remove the cover	1-2
Fig. 1-4: Removing the mounting panel	1-2
Fig. 1-5: window 1: Standard Setup Options Menu	1-4
Fig. 1-6: window 2: Advanced Feature Control Menu	1-4





3 Index

Α

Additional software 1-3

В

BIOS - Settings 1-4

С

carrier panel 1-2 cover 1-2

Η

Hard Disk holder 1-1

I

Installing 1-3

Μ

Mounting 1-3 mounting panel 1-2

Ρ

pre-installations 1-3

R

Removing 1-1

S

shock 1-1 spring components 1-1

V

vibrations 1-1

W

window 1 Standard Setup Options Menu 1-4 window 2 Advanced Feature Control Menu1-4



(0) nach Landeskennziffer weglassen!!

Kundenbetreuungsstellen - Sales & Service Facilities

Deutschland – Germany

from abroad: don't dial (0) after country code! SALES SALES \boxtimes sales Vertriebsgebiet Mitte Vertriebsgebiet Ost Vertriebsgebiet West Vertriebsgebiet Nord Service Germany Centre Service Germany East Germany West Service Germany North Service INDRAMAT GmbH INDRAMAT GmbH INDRAMAT GmbH INDRAMAT GmbH Bgm.-Dr.-Nebel-Str. 2 Beckerstraße 31 Harkortstraße 25 Kieler Straße 212 D - 97816 Lohr am Main D - 09120 Chemnitz D - 40849 Ratingen D - 22525 Hamburg +49 (0)9352/40-0 Telefon: +49 (0)371/35 55-0 Telefon: +49 (0)2102/43 18-0 Telefon: +49 (0)40/85 31 57-0 Telefon: +49 (0)9352/40-4885 +49 (0)371/35 55-333 +49 (0)2102/41 315 +49 (0)40/85 31 57-15 Telefax: Telefax: Telefax: Telefax: Vertriebsgebiet Süd **INDRAMAT Service-Hotline** Gebiet Südwest SALES SALES Germany South Germany South-West X Service Service INDRAMAT GmbH INDRAMAT GmbH INDRAMAT GmbH +49 (0)172/660 04 06 Telefon: Böblinger Straße 25 Ridlerstraße 75 oder/or D-71229 Leonberg D-80339 München Telefon: +49 (0)171/333 88 26 Telefon: +49 (0)89/540138-30 Telefon: +49 (0)7152/9 72-6 Telefax: +49 (0)89/540138-10 Telefax: +49 (0)7152/9 72-727

Kundenbetreuungsstellen in Deutschland - Service agencies in Germany

vom Ausland:





Europa – Europe

vom Ausland: (0) nach Landeskennziffer weglassen, from abroad: don't dial (0) after country code,

0 nach Landeskennziffer mitwählen! dial 0 after country code!

Austria 🛛 SALES 🗖 Service	Austria 🛛 SALES 🗆 Service	Belgium 🛛 SALES 🖾 Service	Denmark 🛛 SALES 🖾 Service
Mannesmann Rexroth Ges.m.b.H. Geschäftsbereich INDRAMAT Hägelingasse 3 A - 1140 Wien	Mannesmann Rexroth G.m.b.H. Geschäftsbereich INDRAMAT Industriepark 18 A - 4061 Pasching	Mannesmann Rexroth N.VS.A. Geschäftsbereich INDRAMAT Industrielaan 8 B-1740 Ternat	BEC AS Zinkvej 6 DK-8900 Randers
Telefon: +43 (0)1/9852540-400 Telefax: +43 (0)1/9852540-93	Telefon: +43 (0)7221/605-0 Telefax: +43 (0)7221/605-21	Telefon: +32 (0)2/5823180 Telefax: +32 (0)2/5824310	Telefon: +45 (0)87/11 90 60 Telefax: +45 (0)87/11 90 61
England 🛛 SALES 🖾 Service	Finland SALES Service	France SALES Service	France SALES Service
Mannesmann Rexroth Ltd. INDRAMAT Division Broadway Lane, South Cerney GB - Cirencester, Glos GL7 5UH Telefon: +44 (0)1285/863000 Telefax: +44 (0)1285/863030	Rexroth Mecman OY INDRAMAT division SF-017 40 Vantaa Telefon: +358 (0)9/84 91 11 Telefax: +358 (0)9/84 91 13 60	Mannesmann Rexroth S.A. Division INDRAMAT Parc des Barbanniers 4, Place du Village F-92632 Gennevilliers Cedex Telefon: +33 (0)141 47 54 30 Telefax: +33 (0)147 94 69 41 Hotline: +33 (0)6 08 33 43 28	Mannesmann Rexroth S.A. Division INDRAMAT 270, Avenue de Lardenne F - 31100 Toulouse Telefon: +33 (0)5 61 49 95 19 Telefax: +33 (0)5 61 31 00 41
France SALES Service	Italy SALES Service	Italy X SALES Service	Italy X SALES Service
Mannesmann Rexroth S.A. Division INDRAMAT 91, Bd. Irène Joliot-Curie F - 69634 Vénissieux – Cedex Telefon: +33 (0)4 78 78 53 65 Telefax: +33 (0)4 78 78 52 53	Mannesmann Rexroth S.p.A. Divisione INDRAMAT Via G. Di Vittoria, 1 I - 20063 Cernusco S/N.MI Telefon: +39 02/92 36 52 70 Telefax: +39 02/92 36 55 12	Mannesmann Rexroth S.p.A. Divisione INDRAMAT Via Borgomanero, 11 I - 10145 Torino Telefon: +39 011/7 71 22 30 Telefax: +39 011/7 71 01 90	Mannesmann Rexroth S.p.A. Divisione INDRAMAT Via del Progresso, 16 (Zona Ind.) I - 35020 Padova Telefon: +39 049/8 70 13 70 Telefax: +39 049/8 70 13 77
Italy IsALES Service	Italy X SALES Service	Netherlands 🛛 SALES 🗖 Service	Netherlands SALES Service
Mannesmann Rexroth S.p.A. Divisione INDRAMAT Via de Nicola, 12 I - 80053 Castellamare di Stabia NA Telefon: +39 081/8 72 30 37 Telefax: +39 081/8 72 30 18	Mannesmann Rexroth S.p.A. Divisione INDRAMAT Viale Oriani, 38/A I - 40137 Bologna Telefon: +39 051/34 14 14 Telefax: +39 051/34 14 22	Hydraudyne Hydrauliek B.V. Kruisbroeksestraat 1 (P.O. Box 32) NL - 5281 RV Boxtel Telefon: +31 (0)411/65 19 51 Telefax: +31 (0)411/65 14 83	Hydrocare B.V. Kruisbroeksestraat 1 (P.O. Box 32) NL - 5281 RV Boxtel Telefon: +31 (0)411/65 19 51 Telefax: +31 (0)411/67 78 14
		e-mail: indramat@hydraudyne.nl	
Poland SALES Service	Russia SALES Service	Spain SALES Service	Spain 🛛 SALES 🖾 Service
Mannesmann Rexroth Sp.zo.o. Biuro Poznan ul. Dabrowskiego 81/85 PL – 60-529 Poznan Telefon: +48 061/847 67 99 Telefax: +48 061/847 64 02	Tschudnenko E.B. Arsenia 22 RUS - 153000 Ivanovo Rußland Telefon: +7 093/223 96 33 oder/or +7 093/223 95 48 Telefax: +7 093/223 46 01	Mannesmann Rexroth S.A. Divisiòn INDRAMAT Centro Industrial Santiga Obradors s/n E-08130 Santa Perpetua de Mogoda Barcelona Telefon: +34 937 47 94 00 Telefax: +34 937 47 94 01	Goimendi S.A. División Indramat Jolastokieta (Herrera) Apartado 11 37 E - 20017 San Sebastian Telefon: +34 9 43/40 01 63 Telefax: +34 9 43/39 17 99
Sweden SALES Service	Slowenia 🛛 SALES 🖾 Service	Turkey 🛛 SALES 🖾 Service	
Rexroth Mecman Svenska AB INDRAMAT Division Varuvägen 7 S - 125 81 Stockholm Telefon: +46 (0)8/727 92 00 Telefax: +46 (0)8/647 32 77	INDRAMAT elektromotorji d.o.o. Otoki 21 SLO - 64 228 Zelezniki Telefon: +386 64/61 73 32 Telefax: +386 64/64 71 50	Mannesmann Rexroth Hidropar AS. Fevzi Cakmak Cad No. 3 TR - 34630 Sefaköy Istanbul Telefon: +90 212/541 60 70 Telefax: +90 212/599 34 07	
Switzerland SALES -East- Service	Switzerland SALES -West- Service		
Mannesmann Rexroth Schweiz AG Geschäftsbereich INDRAMAT Gewerbestraße 3 CH-8500 Frauenfeld Telefon: +41 (0)52/720 21 00 Telefax: +41 (0)52/720 21 11	Mannesmann Rexroth Suisse SA Département INDRAMAT Rue du village 1 CH-1020 Renens Telefon: +41 (0)21/632 84 20 Telefax: +41 (0)21/632 84 21		

Europäische Kundenbetreuungsstellen (ohne Deutschland) European Service agencies (without Germany)

Außerhalb Europa - outside Europe

vom Ausland: from abroad:

(0) nach Landeskennziffer weglassen! don't dial (0) after country code!

Argentina 🛛 SALES 🗍 Service	Argentina 🛛 Sal ES 🖾 Service	Australia 🛛 SALES 🖾 Service	Australia 🛛 Sal ES 🗍 Service
Mannesmann Rexroth S.A.I.C. Division INDRAMAT Acassusso 48 41/7 RA - 1605 Munro (Buenos Aires) Telefon: +54 (0)1/756 01 40 +54 (0)1/756 01 36	NAKASE Servicio Tecnico CNC Calle 49, No. 5764/66 RA - 1653 Villa Balester Prov Buenos Aires Telefon: +54 (0) 11/4768 36 43 Telefax: +54 (0) 11/4768 24 13 e-mail: Fehler! Textmarke nicht definiert.net nakase@infovia.com.ar	AIMS - Australian Industrial Machinery Services Pty. Ltd. Unit 3/45 Horne ST Campbellfield , VIC 3061 AUS - Melbourne Telefon: +61 (0)3/93 59 02 28 Telefax: +61 (0)3/93 59 02 86	Mannesmann Rexroth Pty. Ltd. 35, Cleeland Road Oakleigh South, VIC 31 67 AUS - Melbourne Telefon: +61 (0)3/95 43 33 55 Telefax: +61 (0)3/95 43 89 19
Brazil 🛛 SALES 🖾 Service	Brazil SALES Service	Canada 🛛 SALES 🖾 Service	China SALES Service
Mannesmann Rexroth Automação Ltda. Divisão INDRAMAT Rua Georg Rexroth, 609 Vila Padre Anchieta BR - 09951-270 Diadema-SP [Caixa Postal 377] [BR-09901-970 Diadema-SP] Telefon: +55 (0)11/745 90 60 +55 (0)11/745 90 70 Telefax: +55 (0)11/745 90 50	Mannesmann Rexroth Automação Ltda. Divisão INDRAMAT Rua Umberto Pinheiro Vieira, 100 Distrito Industrial BR - 09220-390 Joinville - SC [Caixa Postal 1273] Tel./Fax: +55 (0)47/473 55 833 Mobil: +55 (0)47 974 6645 e-mail: prochnow@zaz.com.br	Basic Technologies Corporation Burlington Division 3426 Mainway Drive Burlington, Ontario Canada L7M 1A8 Telefon: +1 905/335 55 11 Telefax: +1 905/335-41 84	Mannesmann Rexroth (China) Ldt. Shanghai Parts & Service Center 199 Wu Cao Road, Hua Cao Minhang District PRC - Shanghai 201 103 Telefon: +86 21/62 20 00 58 Telefax: +86 21/62 20 00 68
China SALES Service	China 🛛 SALES 🗆 Service	Hongkong 🛛 SALES 🖾 Service	India 🛛 SALES 🖾 Service
Mannesmann Rexroth (China) Ldt. 15/F China World Trade Center 1, Jianguomenwai Avenue PRC - Beijing 100004 Telefon: +86 10/65 05 03 80 Telefax: +86 10/65 05 03 79	Mannesmann Rexroth (China) Ldt. A-5F., 123 Lian Shan Street Sha He Kou District PRC - Dalian 116 023 Telefon: +86 411/46 78 930 Telefax: +86 411/46 78 932	Rexroth (China) Ldt. 1/F., 19 Cheung Shun Street Cheung Sha Wan, Kowloon, Hongkong Telefon: +852 22 62 51 00 Telefax: +852 27 44 02 78	Mannesmann Rexroth (India) Ltd. INDRAMAT Division Plot. 96, Phase III Peenya Industrial Area IND - Bangalore - 560058 Telefon: +91 (0)80/8 39 73 74 Telefax: +91 (0)80/8 39 43 45
India 🛛 SALES 🖾 Service	Indonesia 🛛 _{SALES} 🗆 _{Service}	Japan 🛛 _{SALES} 🛛 _{Service}	Japan 🛛 _{SALES} 🛛 _{Service}
Mannesmann Rexroth (India) Ltd. INDRAMAT Division Plot. A-58, TTC Industrial Area Thane Turbhe Midc Road Mahape Village IND - Navi Mumbai - 400 701 Telefon: +91 (0)22/7 61 46 22 Telefax: +91 (0)22/7 68 15 31	PT. Rexroth Wijayakusuma JI. Raya Bekasi Km 21 Pulogadung RI - Jakarta Timur 13920 Telefon: +62 21/4 61 04 87 +62 21/4 61 04 88 Telefax: +62 21/4 60 01 52	Rexroth Automation Co., Ltd. Nagoya Service Center Yutakagaoka 1810 Meito-ku, NAGOYA 465-0035 Japan Telefon: +81 (0)52/777 88 41 +81 (0)52/777 88 53 +81 (0)52/777 88 79 Telefax: +81 (0)52/777 89 01	Rexroth Automation Co., Ltd. INDRAMAT Division 1F, I.R. Building Nakamachidai 4-26-44 Tsuzuki-ku, YOKOHAMA 224-0041 Japan Telefon: +81 459/42-72 10 Telefax: +81 459/42-03 41
Mexico SALES Service	Korea 🛛 SALES 🖾 Service	Korea 🛛 SALES 🖾 Service	South Africa 🛛 _{SALES} 🖾 _{Service}
Rexroth Mexico S.A. de C.V. Calle Neptuno 72 Unidad Ind. Vallejo MEX - 07700 Mexico, D.F. Telefon: +52 5 754 17 11 +52 5 754 36 84 +52 5 754 12 60 Telefax: +52 5 754 50 73 +52 5 752 59 43	Mannesmann Rexroth-Seki Co Ltd. 1500-12 Da-Dae-Dong ROK - Saha-Ku, Pusan, 604-050 Telefon: +82 (0)51/2 60 06 18 Telefax: +82 (0)51/2 60 06 19	Seo Chang Corporation Ltd. Room 903, Jeail Building 44-35 Yeouido-Dong Yeoungdeungpo-Ku C.P.O.Box 97 56 ROK - Seoul Telefon: +82 (0)2/7 80 82 08 +82 (0)2/7 80 82 09 Telefax: +82 (0)2/7 84 54 08	HYTEC Automation (Pty) Ltd. 28 Banfield Road,Industria North RSA - Maraisburg 1700 Telefon: +27 (0)11/673 20 80 Telefax: +27 (0)11/673 72 69
Taiwan 🛛 SALES 🗆 Service			
Rexroth Uchida Co., Ltd. No.1, Tsu Chiang Street Tu Cheng Ind. Estate Taipei Hsien, Taiwan, R.O.C. Telefon: +886 2/2 68 13 47 Telefax: +886 2/2 68 53 88			

Kundenbetreuungsstellen außerhalb Europa - Service agencies outside Europe



Außerhalb Europa

/ USA - outside Europe / USA

USA 🛛 SALES 🖾 Service	USA SALES Service	USA SALES Service	USA SALES Service
Mannesmann Rexroth Corporation INDRAMAT Division 5150 Prairie Stone Parkway USA -Hoffman Estates, IL 60192-3707 Telefon: +1 847/6 45 36 00 Telefax: +1 847/6 45 62 01	Mannesmann Rexroth Corporation INDRAMAT Division Central Region Technical Center USA - Auburn Hills, MI 48326 Telefon: +1 248/3 93 33 30 Telefax: +1 248/3 93 29 06	Mannesmann Rexroth Corporation INDRAMAT Division Southeastern Technical Center 3625 Swiftwater Park Drive USA - Suwanee Georgia 30174 Telefon: +1 770/9 32 32 00 +1 770/9 32 19 03	Mannesmann Rexroth Corporation INDRAMAT Division Northeastern Technical Center 99 Rainbow Road USA - East Granby, Connecticut 06026 Telefon: +1 860/8 44 83 77 +1 860/8 44 85 95
USA SALES Service			
Mannesmann Rexroth Corporation INDRAMAT Division Charlotte Regional Sales Office 14001 South Lakes Drive USA - Charlotte, North Carolina 28273			
Telefon: +1 704/5 83 97 62 +1 704/5 83 14 86			

Kundenbetreuungsstellen außerhalb Europa / USA Service agencies outside Europe / USA

Notes



