

BK MIKRO 7

Control System for Tool, Object
and Free Space Monitoring

Operating Instructions
Issue 2.01 dated 5.2.2007

MSC Tuttlingen GmbH

Rudolf-Diesel-Straße 17
78532 Tuttlingen
Germany

Tel. +49 7461 925-276

Fax +49 7461 925-268

E-Mail sales-tut@msc.de

www.msc-tuttlingen.de



General Notice

Safety guidelines

These operating instructions contain notices which you should observe to ensure your own personal safety, as well as to protect the product and connected equipment. These notices are highlighted in the manual by a warning triangle and are marked as follows according to the level of danger:

**Immediate danger**

to life and limb of personnel and others.
Non-compliance may cause death or serious (crippling) injury.

**Hazardous situation**

to life and limb of personnel and others.
Non-compliance may cause death or serious injury.

**Potentially hazardous situation**

Non-compliance may cause slight injury;
possible damage to property.

**Notes on correct handling**

Non-compliance may cause damage to the product
and/or damage to parts/items in the vicinity.

**Environmental protection**

Non-compliance may have an impact on the environment.

Intended use



BK MIKRO is a control system suitable for tool as well as for object and free space monitoring applications. It may only be used for the applications described in the technical documents, and only in connection with devices or components from other manufacturers which have been approved or recommended by us.
This product can only function correctly and safely if it is transported, stored, set up, and installed correctly, and operated and maintained as recommended.

Qualification of personnel

Only qualified personnel may carry out the following activities on the control system: installation, commissioning, operation, maintenance.

Qualified persons in accordance with the safety guidelines are defined as persons who are authorized to commission, to ground, and to tag circuits, equipment, and systems in accordance with established safety practices and standards.

Disclaimer of liability

We have checked the contents of this document for agreement with the hardware and software described. Since deviations cannot be precluded entirely, we cannot guarantee full agreement. However, the data in this manual are reviewed regularly and any necessary corrections included in subsequent editions. Suggestions for improvement are welcomed.

EEC directive EMC 89/336/EEC

The following applies to BK MIKRO control system:



Products which carry the CE symbol meet the requirements of the EEC directive 89/336/EEC on electromagnetic compatibility.

The EEC declarations of conformity and the related documentation will be maintained at the following address for inspection by the responsible officials in accordance with article 10(1) of the above stated EEC directive:

MSC Tuttlingen GmbH
Rudolf-Diesel-Straße 17
78532 Tuttlingen

BK MIKRO 7 corresponds the specification of UL 508.

Areas of use

Control systems of the BK MIKRO series meet the applicable, harmonized, European standards for the respective area of applications.

Fitting conditions

The fitting conditions and safety notes in the operating instructions must be adhered to when commissioning and operating the devices.

Copyright

These operating instructions are intended for the operator and the operator's personnel only. This document and its contents may not be disclosed to third parties, either in full or in part, by reproduction, transmission or any other means without express written authority.

Non-compliance may lead to prosecution under criminal law.

Contents

1	Characteristics	3
2	System Components	4
2.1	Control unit	4
2.1.1	Characteristic properties	4
2.1.2	Technical data	5
2.1.3	Connections	6
2.1.4	Light-emitting diodes	8
2.1.5	Rotary switches	9
2.1.6	Toggle switches.....	10
2.2	Scanner	12
2.2.1	Characteristic properties	12
2.2.2	Technical data	13
2.2.3	How to change	13
2.3	Connection cable.....	14
3	Mode of Operation	15
3.1	Scanning process.....	15
3.2	Output of results.....	16
3.3	Return travel monitoring.....	16
4	BK MIKRO 7 with scanner TK7A – Scanning in one direction	17
4.1	Teach mode = monitoring with learning function	18
4.1.1	"Teach-in", the learning cycle.....	18
4.1.2	"Start", the real scanning process	18
4.2	Switch mode = monitoring with setting scanning range	19
4.2.1	Control operation "Object monitoring"	19
4.2.2	Control operation "Free space monitoring"	19
4.2.3	Deflection of wand.....	20
4.2.4	Examples for range settings.....	20
5	BK MIKRO 7 with scanner TK7RL – Scanning in both directions.....	21
5.1	Teach mode = monitoring with learning function	22
5.1.1	"Teach-in", the learning cycle	22
5.1.2	"Start", the real scanning process	23
5.2	Switch mode = monitoring with setting scanning ranges	24
5.2.1	Reference procedure	24
5.2.2	Control operation "Object monitoring"	25
5.3	Scanning in one direction with scanner TK7RL.....	25
6	Cycle Times	26
7	Status Indication	27
7.1	Yellow LED	27
7.2	Red LED / Green LED.....	27
7.3	Error messages – Flashing red and green LED.....	28
8	Installation Notes	29
8.1	Control voltage connection.....	29
8.2	Mounting bracket.....	30
8.3	Interference prevention	30
9	Ordering Information	31

Table of Figures

Fig. 2-1: Control unit – Connections	4
Fig. 2-2: Control unit – Dimensions	5
Fig. 2-3: Control unit – Light-emitting diodes	8
Fig. 2-4: Control unit – Rotary switches	9
Fig. 2-5: Control unit – Toggle switches	10
Fig. 2-6: Definition of the rotation direction	11
Fig. 2-7: Range of tolerance	11
Fig. 2-8: Scanner	13
Fig. 2-9: Connection cable – Pin configuration	14
Fig. 3-1: "Start" cycle for scanning in one direction	15
Fig. 4-1: Handling BK MIKRO 7 with scanner TK7A.....	17
Fig. 4-2: "Teach-in" for scanning in one direction	18
Fig. 4-3: Range settings using rotary switches for scanning in one direction	20
Fig. 5-1: Handling BK MIKRO 7 with scanner TK7RL	21
Fig. 5-2: "Teach-in" for scanning in both directions	22
Fig. 5-3: "Start" cycle for scanning in both directions.....	23
Fig. 5-4: Range setting using rotary switches for scanning in both directions	25
Fig. 8-1: Control voltage connection	29
Fig. 8-2: Mounting bracket	30

Purpose



These operating instructions are part of the documentation of the BK MIKRO 7. They provide service personnel and system advisors with the information required to install, commission, operate and maintain the system BK MIKRO 7.

© Copyright MSC Tuttlingen GmbH, 78532 Tuttlingen, 2006
 These operating instructions are available as article no. **68 36 231**.
 Subject to change without notice.

1 Characteristics

BK MIKRO 7 is a control system suitable for tool as well as for object and free space monitoring applications.

The complete BK MIKRO 7 system comprises

- a control unit,
- a sensor (scanner),
- a connection cable.

BK MIKRO 7 is based on existing BK MIKRO 4 design concepts for tool, object and free space monitoring and can be used universally for different types of monitoring by the integration of multifarious functions:

- Tool monitoring
Monitoring of the scanning position whose precise location has been previously entered by "Teach-in", e.g. to carry out a tool check before each working cycle.
- Object monitoring, free space monitoring
Monitoring a scanning range freely selectable via two adjusting switches, e.g. to carry out tool checks for tools with varying diameters (object monitoring), or for ejection checks (free space monitoring).

Two types of scanners are available for various demands.
From this two different monitoring systems result.

TK7A : Scanner with mechanical backstop.

TK7RL : Scanner without mechanical backstop.

Principle of operation

The wand of the scanner scans tools, objects or critical process spaces free of potential, in line with machine cycles.

A control unit equipped with a micro-computer triggers the movement of the wand upon an external signal and passes the scanning result on to the machine control via relay contacts.

The galvanically isolated inputs and outputs guarantee a high degree of operational safety and protection against interferences.

Further features

- Scanning in one direction or in both directions
- Scanning in clockwise (CW) or counter-clockwise (CCW) direction
- Two steps for scanning intensity
- Output relay contacts selectable as normally open or normally closed
- Two ranges of tolerance for "O.K." message
- Indication of the scanning result by two LEDs "O.K." and "K.O." on the control unit
- Detection of cable breaks

2 System Components

2.1 Control unit

2.1.1 Characteristic properties

The control unit is available in three models preconfigured for **different supply voltages**. The relevant version will be marked on the rating plate: 24 VDC, 120 VAC, 230 VAC.

On its front panel, the control unit is fitted with plug-in screw terminals to connect all machine inputs and outputs, supply voltage, and the scanner.

- The screw terminals have been arranged on two plug-in terminal blocks. These blocks are keyed so that they cannot be accidentally plugged into the wrong socket.
- When in operation, plastic caps cover the screws in the front. Wires to be connected are routed from the top or bottom of the unit.

The scanner will be connected via a 6-wire cable to the scanner socket of the control unit.

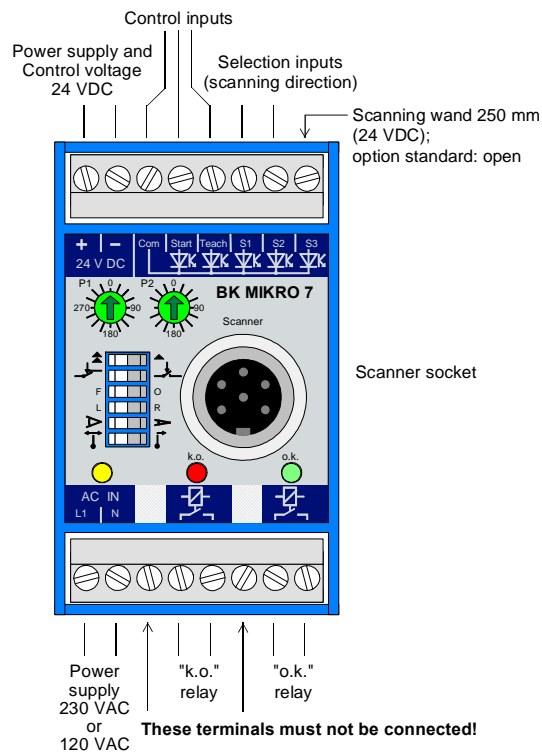


Fig. 2-1: Control unit – Connections



Note:

These plugs may only be inserted or removed when the power supply has been disconnected.

Unmarked terminals must not be connected.



Note:

The nominal tightening torque for the clamping screws of the terminal connectors should be 0,5-0,6 Nm or 4,4-5,3 pound-inches (lbf in).

2.1.2 Technical data

Housing	Insulating material housing, protection class II, built-in unit	
Protection type	IP 20	
Dimensions (W x H x D)	45 mm x 75 mm x 107.5 mm	
Case mountings	Sectional rail, 35 mm, to DIN EN 50022	
Power supply voltage (depending on model)	24 VDC $\pm 20\%$ PELV ¹⁾ 120 VAC 230 VAC	$I_{\max} = 0.25 \text{ A}$ $I_{\max} = 0.05 \text{ A}$ $I_{\max} = 0.025 \text{ A}$
Power consumption	6 VA max.	
Control voltage (int./ext.)	24 VDC $\pm 20\%$ PELV ¹⁾	
Inputs	Galvanically isolated	
– Input current	5 mA approx.	
– Pulse duration	6 ms min.	
Switched outputs	2 x 250 VAC / 30 VDC, 2 A max.	
Making/breaking capacity	500 VA / 60 W (max.), 10 mA min. at 10 V	
Operational life of relay	5×10^7 switching cycles	
Connections	Plug-in screw terminals for connecting – power supply – control inputs – selection inputs – relay outputs Scanner socket to DIN 45322, 6 pin	
Climatological conditions	Classification 3K3 under EN 50178	
Ambient temperature	0 °C to +50 °C	
Storage temperature	–25 °C to +80 °C	

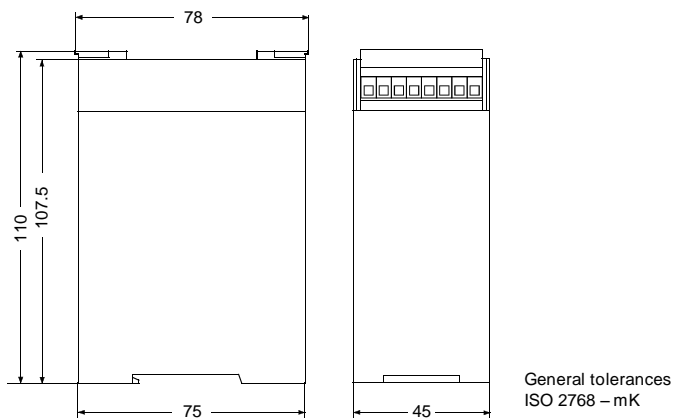


Fig. 2-2: Control unit – Dimensions



Note:

The control unit of BK MIKRO 7 is a built-in unit (DIN EN 60950)! The system is explicit approved for operation in closed rooms (control cabinet)!

¹⁾ PELV = Protected Extra Low Voltage

The voltage applied must meet the requirements for an extra low function potential with safe disconnection (PELV).

2.1.3 Connections

Power supply

"24 VDC" model:

- "+" 24 VDC terminal
Supply voltage input 24 VDC
- "-" 24 VDC terminal
Reference potential of 24 VDC supply voltage

"120 VAC" and "230 VAC" models ²⁾:

- "L1" terminal
Supply voltage input,
depending on model: 120 VAC or 230 VAC
- "N" terminal
Supply voltage input,
depending on model: 120 VAC or 230 VAC
- "+" 24 VDC terminal
Control voltage for "Start" and "Teach" controlling inputs
24 VDC unregulated, output current 0.1 A max.

If an external control voltage is applied, this terminal is not connected.

- "-" 24 VDC terminal
When using the internal control voltage, this terminal must be connected to the "Com" control inputs terminal.

If an external control voltage is applied, this terminal is not connected.



Note:

²⁾ Alternatively, "120 VAC" and "230 VAC" models may also be supplied with 24 VDC.

In this case, "L1" and "N" terminals must not be connected.

"+24 VDC" and "-24 VDC" terminals are to be connected as described above for "24 VDC" model.



Note:

The secondary voltage (24V) of the 120/230V Versions can be used to supply the control inputs. It is not allowed to supply other accessories which are located outside the overall enclosure.

Control inputs

- "Com" terminal
Reference potential for control inputs and selection inputs
- "Start" terminal
An input level of +24 VDC relative to "Com" terminal will trigger a "Start" cycle (the real scanning process).
- "Teach" terminal
An input level of +24 VDC relative to "Com" terminal will trigger a learning cycle (the "Teach-in").

Selection inputs

- "S1" terminal
 "S2" terminal
 "S3" terminal

The input signal (static) of +24 VDC relative to "Com" terminal must be stable during 10 ms min. before "Teach" or "Start".



The input S3 must be connected at a wand length of 250 mm. Concerning shorter wands, S3 remains unconnected. By connecting S3, the wand is slower and therefore it oscillates less.

S1/S2 selection inputs determine scanning direction!

The direction of scanning depends on connected scanner with corresponding switch position.

The meaning of "Clockwise/Counter-clockwise" toggle switch position on control unit may be changed by corresponding S1/S2 input signals.

S1 and S2 may be open. Then is: S1=0, S2=0.

			Scanner TK7A 	Scanner TK7RL 
Default setting →			Scanning	Scanning
S1	S2	„CW/CCW“		
0	0	R	CW	CW-CCW
0	0	L	CCW	CCW-CW
1	0	R	CW	CW ²⁾
1	0	L	CW ¹⁾	CW ^{1) 2)}
0	1	R	CCW ¹⁾	CCW ^{1) 2)}
0	1	L	CCW	CCW ²⁾
1	1	R	CCW ¹⁾	CCW-CW ¹⁾
1	1	L	CW ¹⁾	CW-CCW ¹⁾



Note:

Default setting: S1 and S2 are not connected.

¹⁾ Scanning direction differs from "CW/CCW" switch setting: S1/S2 inputs change meaning of toggle switch.

²⁾ Stop position must be defined by a "Teach-in" in both directions or by a reference procedure in both directions. Missing stop position causes an error message, and pulses on control inputs are ignored.

2.1.5 Rotary switches

The two rotary switches P1 and P2 on the control unit front panel are used to

- select the scanning mode ("Teach" or "Switch").
- set the angular positions of the ranges, noted in degrees, that are controlled by object monitoring or free space monitoring.

The position settings are possible in steps of 22.5°.

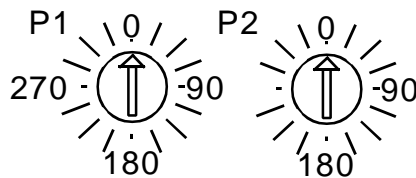




Fig. 2-4: Control unit – Rotary switches

The figure shows the setup on delivery.

The meaning of the rotary switches is determined by the selected scanner together with the corresponding "Scanner" switch position.

Toggle switch	Rotary switch	Meaning
for scanner TK7A: 	P1=0 P2=0	Scanning using teach mode
	P1 ≥ 0 P2 > P1 P2 ≤ 270	Scanning after setting scanning range (object monitoring and free space monitoring), at which: P1=start position (without tolerance) P2=end position (without tolerance)
for scanner TK7RL: 	P1=0 P2=0	Scanning using teach mode
	0 < P1 < 360 0 < P2 < 360	Scanning after setting scanning ranges (only object monitoring, no free space monitoring), at which: P1=range CW (rotation from stop position) P2=range CCW (rotation from stop position) Ranges of tolerance selectable: ±3° and ±10°



Illegal switch settings

- P1=0 and P2 ≠ 0 Error
- P1 ≠ 0 and P2=0 Error

will cause flashing red and green LED.

Minimum angle = 5°

The minimum distance between the object and the wand must be an angle of this value, so that scanning can start really, otherwise a "K.O." fault message will be indicated.

2.1.6 Toggle switches

Using the six toggle switches arranged next to each other on the control unit front panel, the following functions may be set.

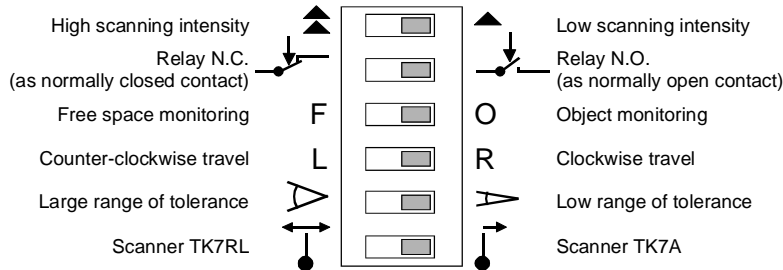


Fig. 2-5: Control unit – Toggle switches



Note:

Setup on delivery: All switches are toggled to the right !
 When using scanner TK7RL: "Scanner" switch to the left !

"Scanning intensity" switch

Speed and force of scanner's wand in its scanning range.

For "Teach-in" and "Start" cycle, in case of a good message, they amount to:

"Scanning intensity" switch position	Impact forces
▲	approx. 200 mN
▲▲	approx. 500 mN

The values are valid for a wand of 150 mm length, measured on its scanning tip.



Note:

If this switch is in the "low" position, the lower impact force of the scanner will protect the wand from wear and tear.

"Normally open contact / Normally closed contact" switch

Mode of operation for the two output relays (see section "Relay outputs").

"Object monitoring / Free space monitoring" switch

"O.K." result for

- finding an object (object monitoring) or
- not finding an object (free space monitoring) in the scanning window.



Note:

Free space monitoring is admissible only in combination with range setting by rotary switches P1 and P2 and connected scanner TK7A with toggle switch set to "TK7A".

"Clockwise / Counter-clockwise" switch (CW/CCW)

Direction of rotation, i.e. direction to which scanner moves starting from stop position.



Clockwise = When rotating to the right

Scanner viewed from behind (the connection side), looking up length of scanner.

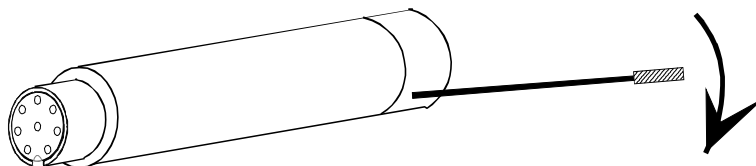


Fig. 2-6: Definition of the rotation direction



Note:

Switch position may be changed by selection inputs S1, S2 and S3 (see table in section "Selection inputs").

"Tolerance range" switch

Range of tolerance for "O.K." message referred to the desired position, i.e. position learned by "Teach-in" or set by switches:

small	$\pm 3^\circ$
great	$\pm 10^\circ$

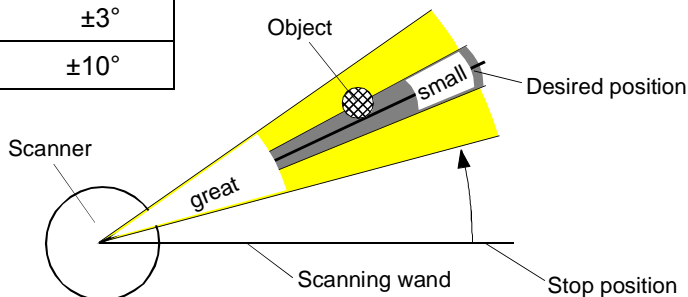


Fig. 2-7: Range of tolerance



Note:

No range of tolerance exists for scanning in one direction using switch mode.

"Scanner" switch

Selection of the scanner.

TK7A	Scanner TK7A (scanner with mechanical backstop)
TK7RL	Scanner TK7RL (scanner without mechanical backstop)

2.2 Scanner

2.2.1 Characteristic properties

The scanner housing is cylindrical and smooth, thus permitting easy installation (e.g. by using the mounting bracket). The scanner is designed for easy access for servicing and changing the wand. Aligning the scanner is easy and requires no additional instruments or aids.

We offer two types of scanners for the different applications.

The sole difference between the two scanners is that the rotary movement of TK7A's wand is limited by a screw inside the housing, the mechanical backstop.

TK7A – Scanner with mechanical backstop

Requirement: "Scanner" switch on control unit set to "TK7A"

Scanner for scanning in one direction: clockwise or counter-clockwise

When a supply voltage is applied, the scanner will always move to its mechanical backstop, the so-called stop position. The scanner will be held in this position by applying a low voltage until a pulse on the "Teach" or "Start" screw triggers a scanning cycle.

TK7RL – Scanner without mechanical backstop

Requirement: "Scanner" switch on control unit set to "TK7RL"

Scanner for scanning in both directions: CW-CCW or CCW-CW, in special cases for scanning in one direction: CW or CCW

When a supply voltage is applied, the scanner persists in its momentary position. It can be turned to an other position by hand. Only after a pulse on the "Teach" or "Start" screw, it moves into its stop position, that was calculated just now, and will be held there by applying a low voltage.

Using scanners TK7A and TK7RL with a different control unit than BK MIKRO 7 may damage the scanner and control unit.



Note:

- Due to its small diameter, a wand is easily overlooked.
- Your wand is a wearing part! Each contact with a rotating object will cause corresponding wear on the wand. This may even lead to the metal wand breaking.

Due to the injury hazard this causes, users should exercise particular caution within any BK MIKRO rotating area.

2.2.2 Technical data

Housing	Anodized aluminum
Protection type	IP 67
Wand length	165 mm (standard), exchangeable wand
Scanning angle – TK7A – TK7RL	270° max. (scanner with mechanical backstop) 360° max. (scanner without mechanical backstop)
Control unit connection	Small circular connector, M12x1, 8 pin
Ambient temperature	0 °C to +80 °C
Storage temperature	–25 °C to +85 °C
Scanning cycles	> 5 million at minimum scanning intensity

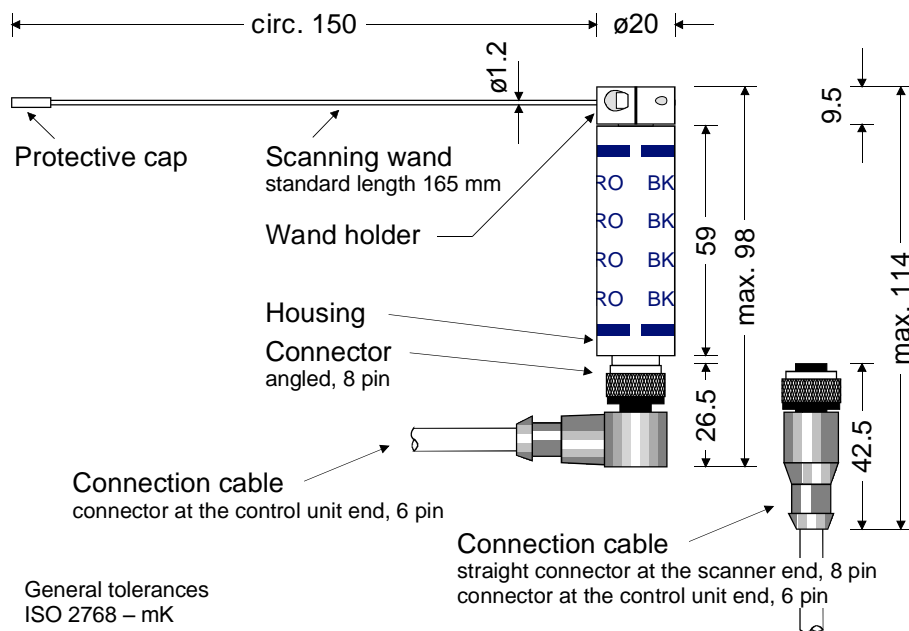


Fig. 2-8: Scanner



Note:

To prevent injury, your wand will be supplied complete with a protective cap.

2.2.3 How to change

After undoing hollow screw (M3), the wand can easily be removed from its holder. Insert new wand into holder and tighten.

2.3 Connection cable

Control unit and scanner are connected by a 8-wire PUR-cable:

- 6 pin small circular connector to DIN 45322 at the control unit end.
- 8 pin molded plug at the scanner end.
- Length 5 m, can be extended to a maximum length of approximately 25 m with extension cables.

Pin configuration (at the control unit end)

Small circular connector to DIN 45322, 6 pin

1	wh	white
2	br	brown
3	gn	green
4	ye	yellow
5	gr	gray
6	pi	pink

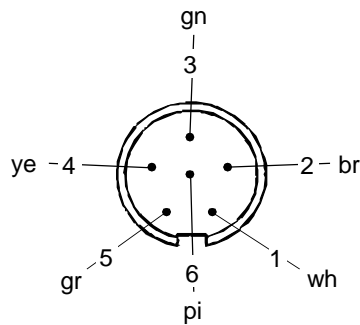


Fig. 2-9: Connection cable – Pin configuration



Note:

To increase the operational life of this cable, it should not be subject to more than a minimum amount of movement during operating cycles.

If this plug needs to be removed during fitting, please ensure that this pin configuration is followed on reassembly.

3 Mode of Operation

BK MIKRO 7 can be operated in different ways:

- Scanning in one direction
 - Scanning in both directions
 - Monitoring with learning function (Teach mode)
 - Monitoring with setting scanning range (Switch mode)
 - Monitoring as object monitoring or free space monitoring
- All modes allow return travel monitoring.

3.1 Scanning process

Applying a pulse to "Start" or "Teach" terminal will trigger a scanning cycle. During scanning operation, both relay outputs will be inactive (LED "O.K." and "K.O." not illuminated).

For the real scanning process, i.e. after a "Start" pulse, initially, the scanner will travel at maximum speed to the start of a given monitoring range. However, its motor will slow down to a preselected scanning speed in time before a learned position using teach mode or a preselected angle set by rotary switch using switch mode is reached.

The monitoring range will then be traversed at the preset scanning speed and its related force which is to be used to scan an object or range. During the entire operation, all pulses generated by the scanner's internal encoder will be continuously processed.

If the system detects that the scanner no longer moves or has exceeded the end of the monitoring range, the direction of rotation immediately changes, and the scanner will return at maximum speed into its stop position.

Depending on the result of scanning the corresponding relay will be activated, and the LED belonging to will indicate the result at the control unit.

"Start" cycle with CW travel

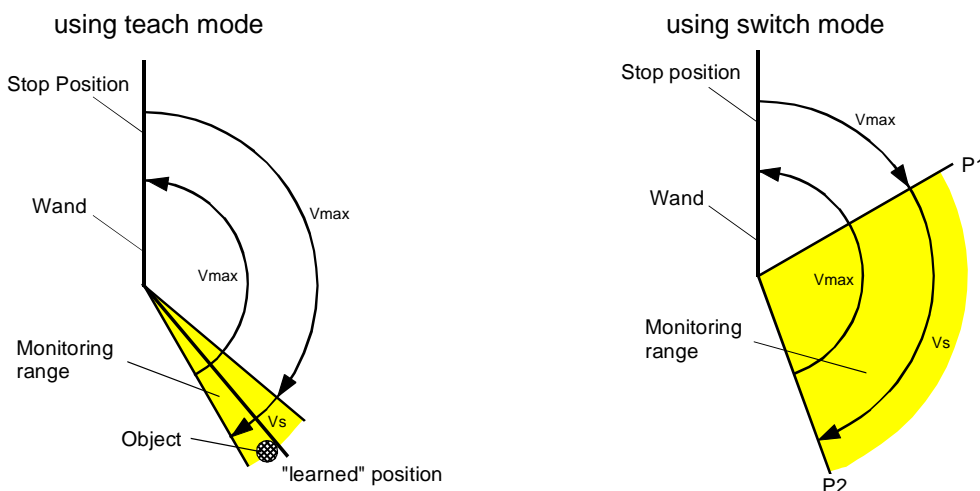


Fig. 3-1: "Start" cycle for scanning in one direction

Monitoring range = Range of tolerance for "O.K." message

Vmax = max. speed of scanner

Vs = speed of scanner preset by "Scanning intensity" toggle switch

3.2 Output of results

- Fault message (K.O.)

A fault message will be output immediately on detection.
The scanner will return to its stop position.

- Good cycle message (O.K.)

– without return travel monitoring:
Results will be indicated on reaching the scanner's stop position.



Note:

Its return travel will not influence scanning results.

– with return travel monitoring:
On reaching the stop position, scanning process results will be indicated.
This ensures that the scanner will have left the monitoring range at the time the results are output and that there are no further waiting periods to be considered.

In the **"O.K." state**, the "O.K." relay will be active, while the "K.O." relay remains inactive.

In **all other cases**, "K.O." will be indicated, i.e. the "O.K." relay will be inactive, the "K.O." relay will be active.



Note:

"K.O." will not only be indicated when a tool has broken but also when the scanner cannot leave its stop position for any reason (e.g. mechanical "sticking", cable break etc.).

The results of a scanning cycle will remain latched until the following cycle starts.

3.3 Return travel monitoring

BK MIKRO 7 allows monitoring the return travel of the wand.

The signal length on "Start" input determines whether the return travel will be monitored:
Before return travel begins, i.e. in the reversing point of the scanner (in the second reversing point for scanning in both directions), the system will re-read the current "Start" signal status.

- Return travel monitoring enabled, if "Start" signal is still present in reversing point.
- Return travel monitoring off, if "Start" signal has already been removed in reversing point.



Return travel monitoring will detect malfunctions!

Example for suitable use of return travel monitoring: BK MIKRO 7 has successfully monitored the object. But the wand is stopped by an obstacle on its return travel, cannot return into its stop position, and will block the transport of the tool.

Result with return travel monitoring	"K.O."	Machine stops!
Result without return travel monitoring	"O.K."	Damage of object/machine!

4 BK MIKRO 7 with scanner TK7A – Scanning in one direction



Note:

"Scanner" toggle switch set to "TK7A" =

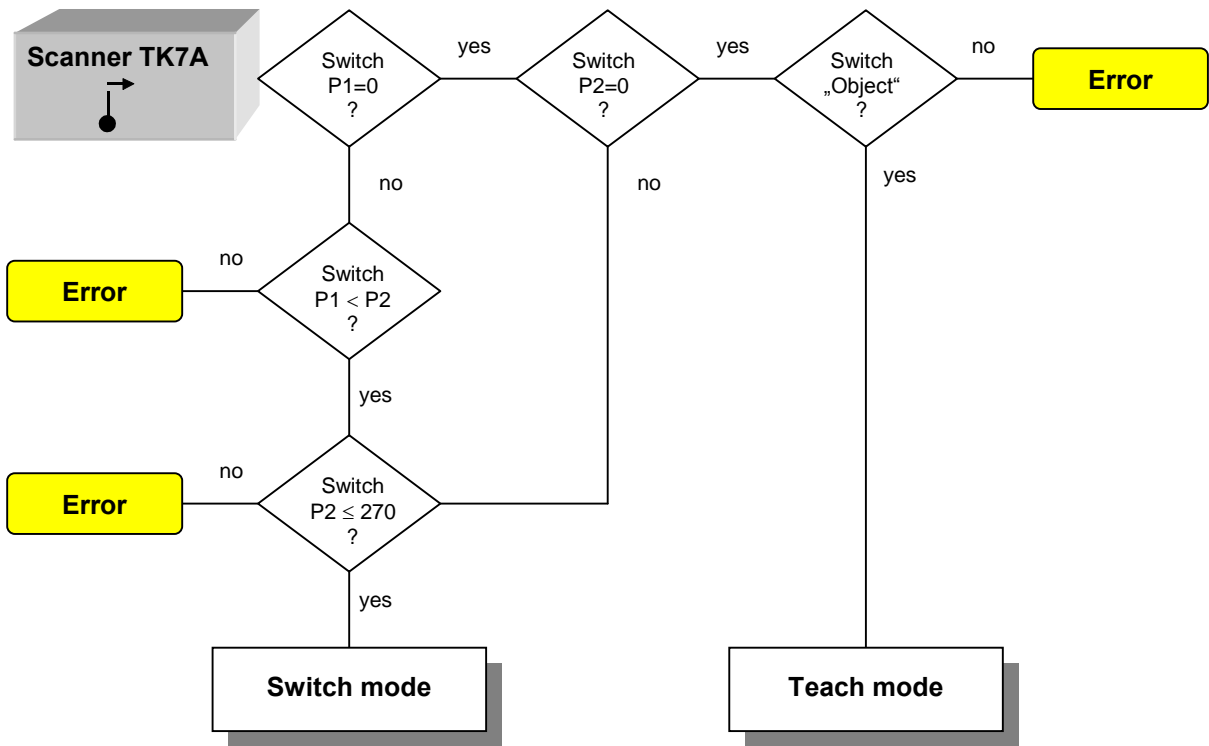


Fig. 4-1: Handling BK MIKRO 7 with scanner TK7A



Note:

The selection inputs S1 and S2

- influence in deed the rotation direction of the scanner,
- but do not cause any error messages.

Error messages will be indicated by flashing red and green LED.

4.1 Teach mode = monitoring with learning function

Requirement: Rotary switches P1=0 and P2=0

The scanning range will be determined by a learning cycle (external control signal).


This mode of operation is the typical mode for **tool detection** applications:
The system will check for the presence of the tool at the learned position

4.1.1 "Teach-in", the learning cycle

The scanner will travel in its preset direction of rotation with its preset speed.

- If a tool is detected, its position will be stored, and the scanner returns to its stop position with maximum speed. In addition, the "O.K." relay will be activated.
- If the scanner rotates to a maximum of 270° without detecting any tool, the "K.O." relay will be activated.
Following "Start" pulses will detect "K.O.".

Learning cycle with CCW travel

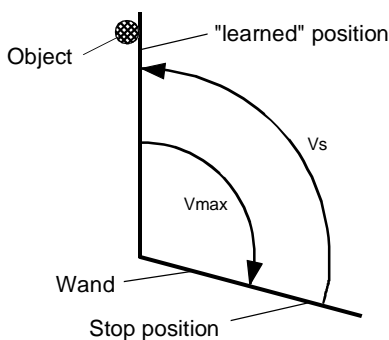

The figure shows a learning cycle with setting:
Switch "L" and S1=0, S2=0, i.e. CCW travel of the scanner.

V_{max} = max. speed of scanner
 V_S = speed of scanner preset by
"Scanning intensity" toggle switch

Fig. 4-2: "Teach-in" for scanning in one direction



Note:

A **position** learned during "Teach-in" **will remain stored**, even after removal of power to the unit.

No changes after "Teach-in" and before "Start" mode, concerning:

- Tool geometry (layout and dimensions)
- S1/S2 selection inputs
- "CW/CCW" toggle switch

4.1.2 "Start", the real scanning process

The scanner will travel to the previously "learned" position of the object to check for its presence.

- If the tool is within the monitoring range, the "O.K." relay will be activated.
- If the tool is not detected, i.e. either it is missing or there is an obstacle within the scanner rotating area, the "K.O." relay will be activated.

4.2 Switch mode = monitoring with setting scanning range

Requirement: Rotary switches $0 \leq P1 < P2 \leq 270$

Rotary switch P1 and P2 settings will define the scanning range.

In this mode of operation, BK MIKRO 7 is suitable for **monitoring tools** with differing diameters (object monitoring) as well as for **ejection monitoring** (free space monitoring):

Two rotary switches are used to define a scanning range which is to be monitored before each working cycle.



Note:

A Pulse on the "Teach" terminal do not take effect.

4.2.1 Control operation "Object monitoring"

Using "Object monitoring", the control unit will change into an "O.K." state, i.e. it will issue a good message, if during a scanning cycle the operation sequence described below is followed:

- The scanner leaves its stop position.
- The angle preset via rotary switch P1 has been exceeded.
- The angle preset via rotary switch P2 has not been reached.

4.2.2 Control operation "Free space monitoring"

The control operation "Free space monitoring" differs from the object monitoring mode in that within its monitoring range no object must be detected.

Its "O.K." state is characterized by:

- The scanner leaves its stop position.
- The angle preset via rotary switch P2 has been exceeded.



Caution:

When performing "Free space monitoring", **broken wand** will always trigger an **"O.K." signal**.



Note:

- "Scanning intensity" toggle switch set to "high" will enable scanning operation at a higher speed.
- Life expectancy of the wand will not be reduced, since the unit will rarely contact a part using "Free space monitoring".

4.2.3 Deflection of wand

Rotation angles will be detected by scanner encoder pulses. These pulses are derived from the rotation of the motor. For scanning, a metal needle (wand) is used which, depending on the scanning force, can be deflected. As the scanner motor is still turning when the end of this wand has already come to a stop, differences between the set and actual rotation ranges will result.

For all speeds, wand deflection is compensated to a range of less than 10°. Deflection will depend, however, on wand length.

4.2.4 Examples for range settings


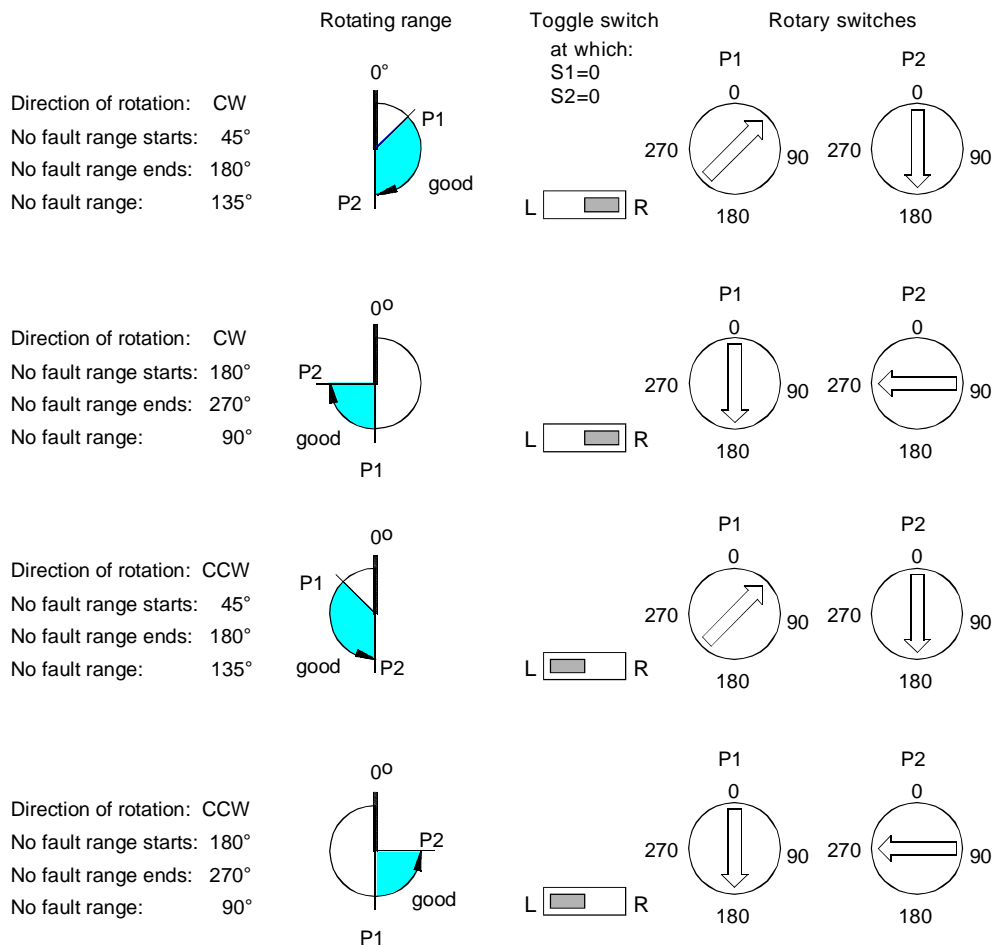


Fig. 4-3: Range settings using rotary switches for scanning in one direction

 5 BK MIKRO 7 with scanner TK7RL – Scanning in both directions



Note:

"Scanner" toggle switch set to "TK7RL" = 
 Only object monitoring, no free space monitoring!
 Special cases make possible scanning in one direction!

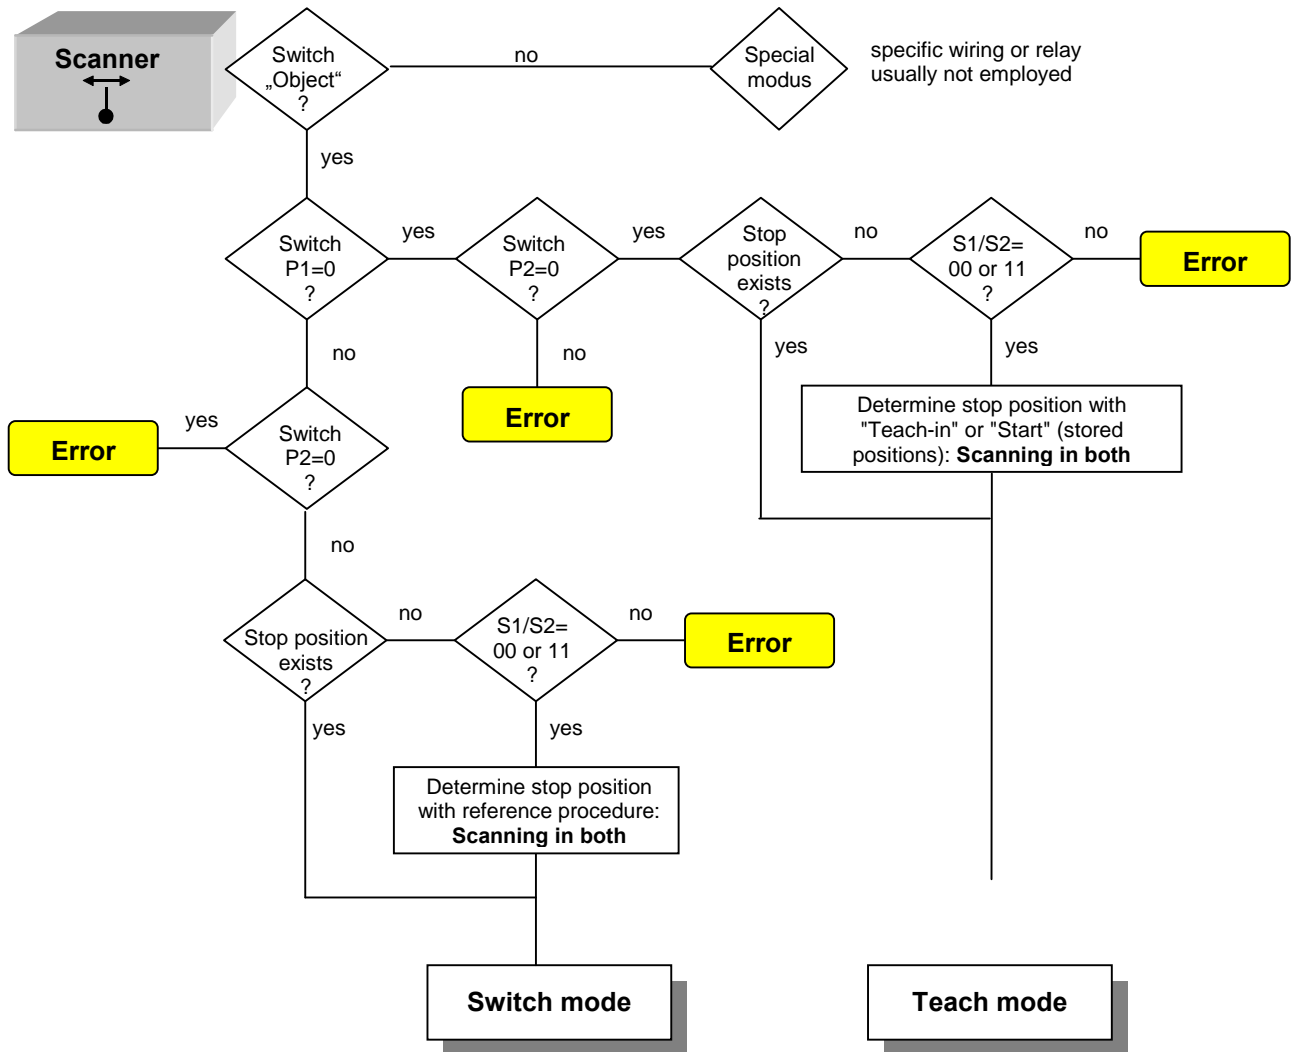


Fig. 5-1: Handling BK MIKRO 7 with scanner TK7RL



Note:

- The stop position of the wand must be determined by scanning in both directions (S1/S2 = 00 or 11), whether with learning function or with reference procedure.
- After that a scanning in one direction (S1/S2 = 01 or 10) is possible, even a "Teach-in" in one direction for only one object.
- Error messages will be indicated by flashing red and green LED.

5.1 Teach mode = monitoring with learning function

Requirement: Rotary switches P1=0 and P2=0

The scanning ranges will be determined by a learning cycle (external control signal).

This mode of operation is the typical mode for **tool detection** applications:
The system will check for the presence of the tools at the learned positions.

5.1.1 "Teach-in", the learning cycle

The scanner will first travel from its initial position with its selected speed in the preset direction.

If a tool is detected, its position will be stored.


Then the wand will travel in opposite direction with its preset speed to determine the position of the second tool, and also store this position.

- Using this two positions the system will calculate the new zero position of the wand as the center between the two tools.

Finally the wand will turn into its zero position, the stop position, and will be held there by applying a low voltage. In addition the "O.K." relay will be activated.

- If the system can detect only one tool or not a single one, the "K.O." relay will be activated.
After such a faulty learning action, the wand will return to its old stop position.
Following "Start" pulses will detect "K.O.".

Learning cycle with CW-CCW travel

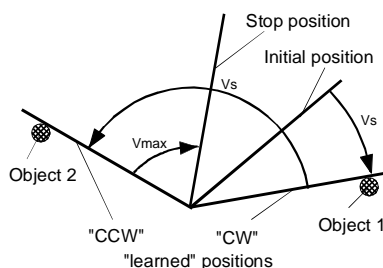

The figure shows a learning cycle with setting:
Switch "R" and S1=0, S2=0, i.e.
first CW travel, then CCW travel of the scanner.

V_{max} = max. speed of scanner
 V_s = speed of scanner preset by
"Scanning intensity" toggle switch

Fig. 5-2: "Teach-in" for scanning in both directions



Note:

Positions learned during "Teach-in" **will remain stored**, even after removal of power to the unit.

No changes after "Teach-in" and before "Start" mode, concerning:

- Tool geometry (layout and dimensions)


Changes of S1/S2 selection inputs or "CW/CCW" toggle switch are allowed after "Teach-in".

5.1.2 "Start", the real scanning process

The scanner will travel to the previously "learned" positions of the objects to check for their presence. In so doing, the wand will first move in the preset direction, then in opposite direction.

- If the tools are within the monitoring ranges, the "O.K." relay will be activated.
- If one of the two tools is not detected, (i.e. either it is missing or there is an obstacle within the scanner rotating area) the "K.O." relay will be activated.

"Start" cycle with CW-CCW travel using teach mode

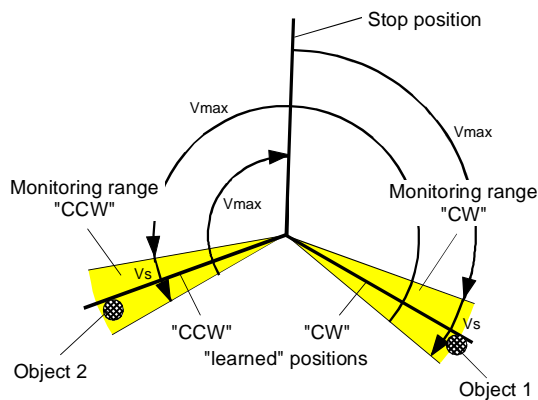

The figure shows a "Start" cycle with setting: Switch "R" and S1=0, S2=0, i.e. first CW travel, then CCW travel of the scanner.

V_{max} = max. speed of scanner
 V_s = speed of scanner preset by "Scanning intensity" toggle switch

Fig. 5-3: "Start" cycle for scanning in both directions



Note:

The rotation sequence of "Start" cycle may differ from that of learning cycle. Scanning in one direction is possible (select corresponding inputs S1, S2), when stop position is detected.

5.2 Switch mode = monitoring with setting scanning ranges

Requirement: Rotary switches 0 < P1 < 360 and 0 < P2 < 360

Rotary switch P1 and P2 settings will define two scanning ranges.

In this mode of operation, BK MIKRO 7 allows **only object monitoring**:

Two rotary switches are used to define two scanning ranges which are to be monitored before each working cycle.



Note:

A Pulse on the "Teach" terminal do not take effect.

5.2.1 Reference procedure

The first "Start" cycle after supply voltage has been applied, finds out the stop position of the scanner by a so-called reference procedure.



Note:

Carry out reference procedure with "Scanning in both directions".

1. After "Start" pulse the scanner rotates to the first object with selected speed in preset direction.
2. From there it moves back in opposite direction for the preset value of the selected direction to the so-called stop position, e.g. P1 means CW rotation.
3. Without stop it travels on at most towards the second value into the reversing point, when a second object is not found before.
4. After that the scanner will return to its stop position.

Result:

"O.K."	Both objects detected	Movement as described above.
"K.O."	No object detected	Rotation towards 360°, back to initial position, that becomes stop position.
	First object detected, no second object within the preset range	Movement as described above, stop position is determined by the detected first object.

Reference procedure is necessary:

- after interruption of power supply
- after changing the switch settings P1 or P2
- after changing the "Scanner" switch from "TK7A" back to "TK7RL"



Note:

Only after a reference procedure the scanner persists in its stop position while power supply is applied.

The S1/S2 selection inputs and the "CW/CCW" toggle switch determine the sequence of rotation directions.

Changes of S1/S2 selection inputs or of toggle switch "CW/CCW" are allowed after reference procedure.


5.2.2 Control operation "Object monitoring"

The second "Start" pulse starts the real scanning process of object monitoring within two ranges.

The control unit will change into an "O.K." state, i.e. it will issue a good message, if during a scanning cycle the operation sequence described below is followed:

- The scanner leaves its stop position.
- Both objects are detected within the rotation ranges P1 and P2.

"Start" cycle with CW-CCW travel using switch mode

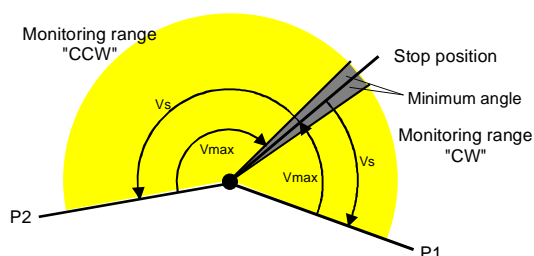

The figure shows a "Start" cycle with setting: Switch "R" and S1=0, S2=0, i.e. first CW travel, then CCW travel of the scanner.

V_{max} = max. speed of scanner
 V_s = speed of scanner preset by "Scanning intensity" toggle switch

Fig. 5-4: Range setting using rotary switches for scanning in both directions

5.3 Scanning in one direction with scanner TK7RL



Requirement:

As soon as the stop position has been detected (i.e. after a "Teach-in" with scanning in both directions or a reference procedure with scanning in both directions) the scanning in one direction is possible with scanner TK7RL, too.

For scanning in one direction set the selection inputs S1 and S2 corresponding to the description in table of section "Selection inputs".

Do not change setting of "Scanner" switch.

Teach mode

- Scanning in one direction of already "learned" objects
 A "Start" will monitor both of the known objects individually:
 Scanning in CW direction or in CCW direction.
- Scanning in one direction of "new" objects
 Scanning in one direction allows also learning the position of unknown objects.
 Stop position remains valid: The wand will return to its stop position, determined by "Teach-in" in both directions, in any case.

Switch mode

- Scanning in one direction of the preset monitoring ranges
 A "Start" pulse will monitor both of the monitoring ranges individually:
 Scanning in CW direction or in CCW direction.

6 Cycle Times

Scanning times

The following **cycle times** hold for systems with scanner TK7A or TK7RL:

"Intensity" Switch	TK7A – Scanning in one direction			TK7RL – Scanning in both direction		
	Angle	"Teach"	"Start"	Angle	"Teach"	"Start"
▲	15°	210 ms	150 ms	±15°	320 ms	260 ms
▲▲	15°	170 ms	120 ms	±15°	210 ms	190 ms
▲	90°	580 ms	280 ms	±45°	720 ms	370 ms
▲▲	90°	330 ms	250 ms	±45°	360 ms	300 ms
▲	180°	1000 ms	390 ms	±90°	1200 ms	470 ms
▲▲	180°	520 ms	370 ms	±90°	550 ms	410 ms
▲	270°	1440 ms	510 ms	±180°	2400 ms	720 ms
▲▲	270°	700 ms	470 ms	±180°	1100 ms	630 ms



Note:

"Cycle" time means: wand returned to stop position.

"Measuring time" for "K.O." in a "Start" cycle \approx ½ cycle time when using scanner TK7A, i.e. for scanning in one direction.

Times hold for setting "Tolerance" switch to "small", switch set to "great" will slightly increase "Start" cycle times!

7 Status Indication

7.1 Yellow LED

Fast flashing = Self-test

After power-up, the system will carry out a self-test indicated by fast flashing of this yellow LED.

Steady illumination = Ready to operate

Following its self-test, the system is ready to operate. The LED stops flashing and remains steady.

Slow flashing = Scanner fault

The system has detected a scanner fault:

- Scanner is missing or has motor fault.
- Control cable is not correctly connected, e.g. even cable break.

Outputs will be switched inactive, the unit will remain in its present state, indicated by slow flashing of this yellow LED.

7.2 Red LED / Green LED

Steady illumination = Indication following scanning cycle

The red LED indicates a fault message.

The green LED indicates a no fault message.

Flashing = Illegal settings

A flashing red and green LED simultaneously indicates that one or more of the switches is incorrectly set, and/or the S1/S2 selection inputs have been connected incorrectly.

7.3 Error messages – Flashing red and green LED

Check the following settings to remove the error messages.

- "Scanner" toggle switch (TK7A/TK7RL)
- "Object monitoring / Free space monitoring" toggle switch (O/F)
- Rotary switches P1 and P2
- Selection inputs S1 and S2

The error messages are distinguished by connected scanner with corresponding setting of toggle switch to "TK7A" or "TK7RL".



Scanner TK7A, "Scanner" switch set to TK7A

Teach mode [requires: P1=0, P2=0]	Error	Correction
no free space monitoring, only object monitoring	F	O

Switch mode [requires: 0 ≤ P1 < P2 ≤ 270]	Error	Correction
Signal to "Teach" without effect, only "Start" pulse !		
for object monitoring or free space monitoring	P1 ≥ P2	P1 < P2
	P2 > 270	P2 ≤ 270



Scanner TK7RL, "Scanner" switch set to TK7RL


Teach mode [requires: P1=0, P2=0]	Error	Correction
no free space monitoring, only object monitoring	*	O
Determination of stop position only with "Teach-in" in both directions: Selection inputs S1/S2 = 00 or 11 Having determined the stop position "Teach-in" in one direction is also possible besides scanning in one direction. Note: Stop position will not change!	S1/S2=01	00 or 11
	S1/S2=10	00 or 11

Switch mode [requires.: P1 > 0, P2 > 0]	Error	Correction
Signal to "Teach" without effect, only "Start" pulse !		
no free space monitoring, only object monitoring	*	O
for object monitoring	P1=0, P2 > 0	P1 > 0
	P2=0, P1 > 0	P2 > 0
Determination of stop position only with reference procedure in both directions: Selection inputs S1/S2 = 00 or 11 Having determined the stop position scanning in one direction is also possible.	S1/S2=01	00 or 11
	S1/S2=10	00 or 11

* Special function of the relays


8 Installation Notes

8.1 Control voltage connection

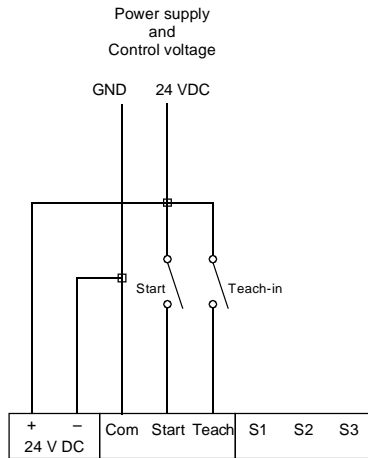


AC IN	IN		k.o.		o.k.
L1	N		C NO/NC		C NO/NC

BK MIKRO 7
24 VDC
common power and control voltage supply

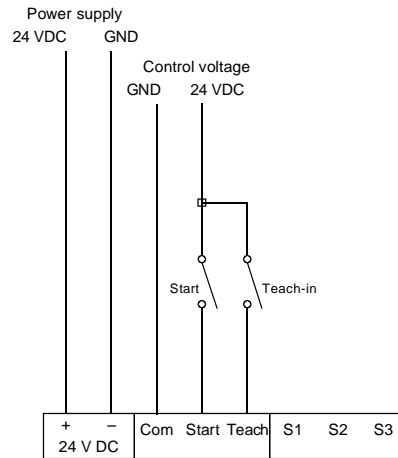


AC IN	IN		k.o.		o.k.
L1	N		C NO/NC		C NO/NC

BK MIKRO 7
24 VDC
separate control voltage

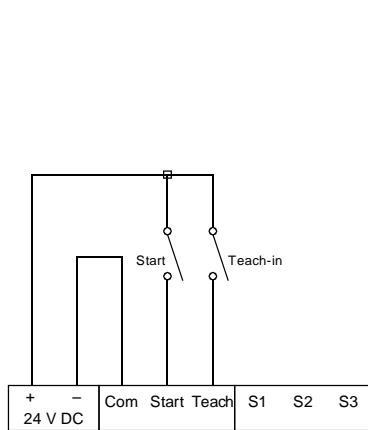

AC IN	IN		k.o.		o.k.
L1	N		C NO/NC		C NO/NC

Power supply
BK MIKRO 7
230 VAC (120 VAC)
internal control voltage

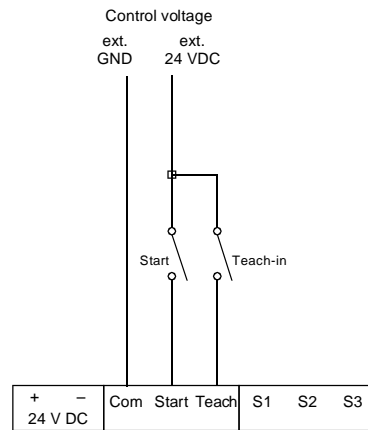

AC IN	IN		k.o.		o.k.
L1	N		C NO/NC		C NO/NC

Power supply
BK MIKRO 7
230 VAC (120 VAC)
external control voltage

Fig. 8-1: Control voltage connection

8.2 Mounting bracket

The delivering program offers a mounting bracket for the scanner as accessories.

Article no. 61 07 165 contains the following parts:

Designation	Material	Part no.
Mounting bracket	AlCuMgPb, F 38, thickness 8, naturally anodized	1, 2
2 cheese head screws with hexagonal hole M3x40	8.8 zincd	3
2 self-securing nuts M3	8 zincd	4

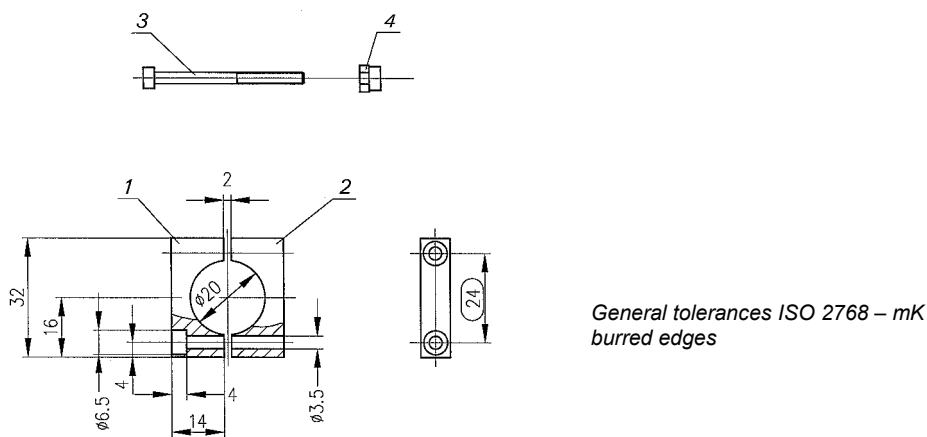


Fig. 8-2: Mounting bracket

8.3 Interference prevention

All inputs are opto-decoupled and thus maximally protected against interference voltage peaks, as caused, for example, by inductive sources.

Relay outputs are protected by varistors against inductive interference voltage peaks. Depending on the type of load used, further interference suppression measures may be necessary.

To ensure optimum operational safety, suppression measures, if required, must be taken at source, i.e. directly where interference is caused.



Possible additional noise filters:

- RC combination (included in the contactor suppliers' product ranges)
- Varistors
- Diodes

9 Ordering Information

Control unit	Article no.
BK MIKRO 7 24 VDC	63 04 220
BK MIKRO 7 120 VAC	63 04 222
BK MIKRO 7 230 VAC	63 04 221

Scanner	Article no.
TK7A (scanner with mechanical backstop)	63 04 234
TK7RL (scanner without mechanical backstop)	63 04 235

Connection BK MIKRO 7: Control unit – Scanner	Length	Article no.
Control cable "Conprox", straight connector	5 m	62 04 248
Control cable "Conprox", straight connector	15 m	62 04 250
Control cable "Conprox", angled connector	5 m	62 04 249
Extension cable	5 m	62 04 210
Extension cable	10 m	62 04 211
Extension cable	15 m	62 04 212
Extension cable incl. mounting socket	2 m	62 04 213

Accessories and spare parts	Article no.
Scanning wands BK MIKRO 7:	
– Length 165 mm (standard)	10 pieces 62 04 022
– Length 250 mm	10 pieces 62 04 216
– HSS, length 165 mm	1 piece 62 04 215
– HSS, length 250 mm	1 piece 62 04 231
Wand holder for short breakable chips incl. wand	1 piece 62 04 263
Wand holder incl. wand	1 piece 62 04 026
Mounting bracket	61 07 165

Operating Instructions	Article no.
BK MIKRO 7	68 36 231

