

# Fieldbus System (Gateway Decentralised Type)



**New** GW Unit which supports PROFINET added.  
M12 connector type Input Unit added.

## Decentralised valve installation

## Valves can be installed near the actuators!

GW Unit (Gateway Unit)




Reduced  
piping space  
and piping  
materials

Reduced  
wiring  
space

No need to set the  
address for the  
valve manifold and  
Input Unit.

Description	Compatible protocol	Number of inputs/outputs	Number of valve manifold and Input Unit connections	Branch cable length	New function
Gateway Decentralised System 2 <a href="#">Page 8</a>	 EtherNet/IP	128 inputs/ 128 outputs	Max. 16 Units	Max. 20 m	<b>Web server function</b> • Valve operation test • Connection diagnostic • Short-circuit diagnostic <a href="#">Page 2</a>
Gateway Decentralised System <a href="#">Page 48</a>	 PROFIBUS	64 inputs/ 64 outputs	Max. 8 Units	Max. 10 m	—

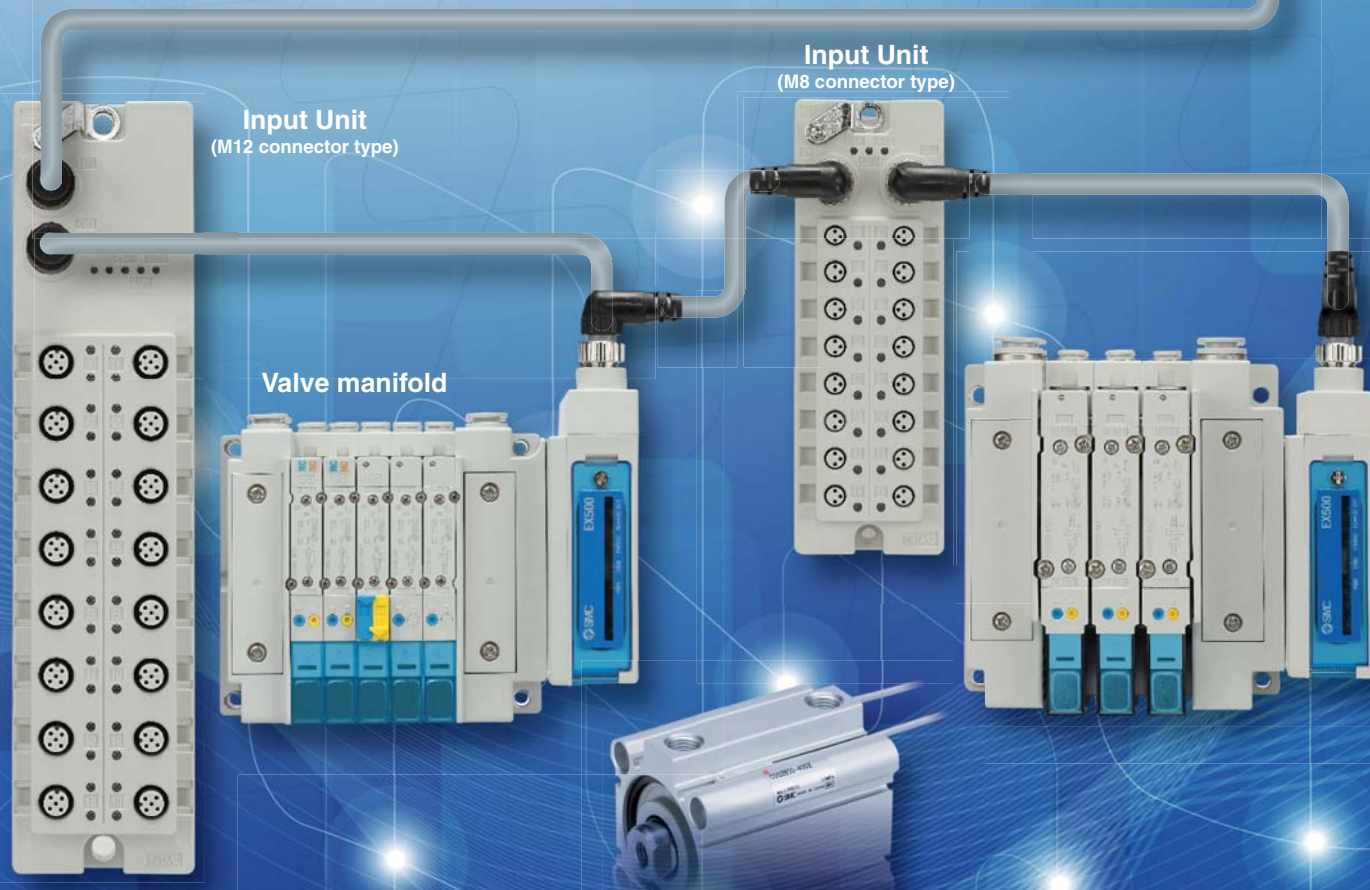

## Series EX500

## Gateway Decentralised System 2 (128 Points)

● Number of branch ports: 4

**Number of inputs/outputs** → **128 inputs/128 outputs**

● Number of inputs/outputs per branch: Max. 32 inputs/32 outputs

**Number of valve manifold connections** → Max. **8 Units\***


**Number of Input Unit connections** → Max. **8 Units**

● Number of valve manifold connections per branch: Max. 2 Units\*

● Number of Input Unit connections per branch: Max. 2 Units

**Total cable length per branch** → Max. **20 m**


\* When the number of outputs is set to "16 outputs" using a built-in setting switch of the SI Unit.

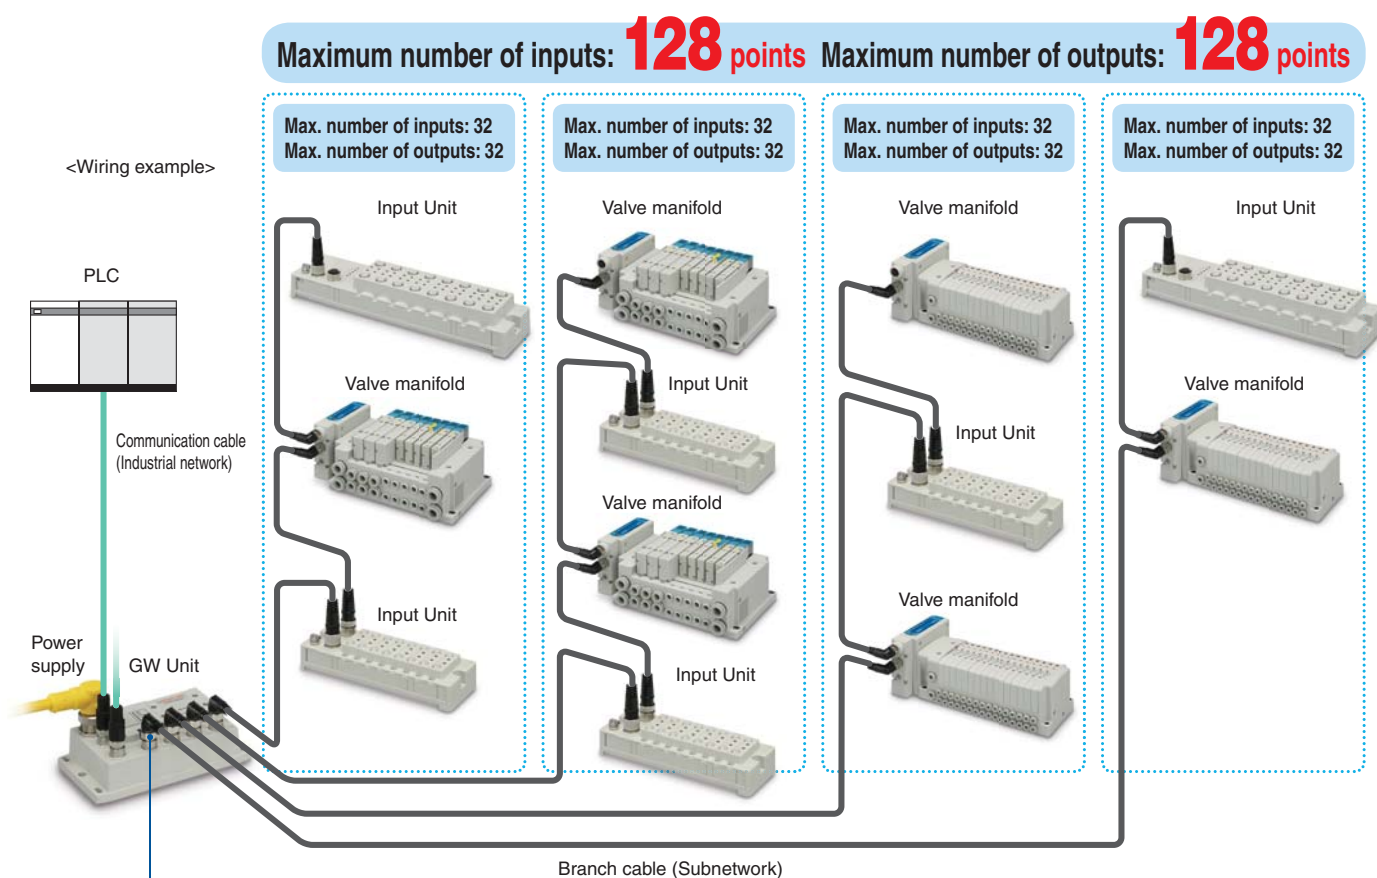

Branch port

### Two valve manifolds can be connected to one branch port.

SI Unit has a built-in setting switch which switches the number of outputs (32 points / 16 points) of the valve manifold connected to the SI Unit. By setting the number of outputs to 16 points, two valve manifolds can be installed to one branch port.

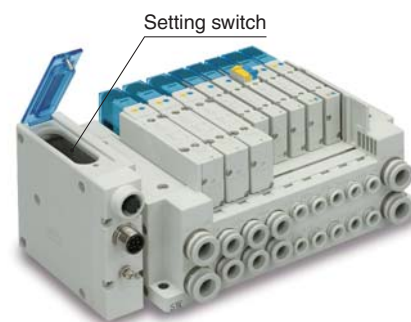

SI Unit



## Web server function

Valve operation test (ON/OFF), connection diagnostic between valve manifold and Input Unit, and short-circuit diagnostic of input device can be performed on a Web browser.

A password can be used for the valve operation test (ON/OFF) for security.




The location of the error can be identified. Details of the error can be identified on a Web browser.

\* WEB display example




RJ-45 connector

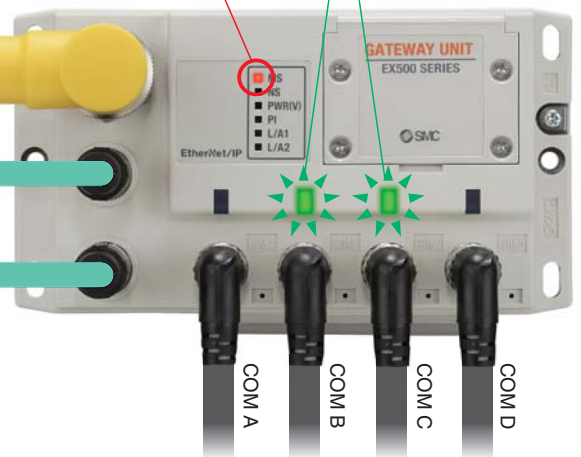

Red LED ON

Green LED flashing  
These ports are in error.

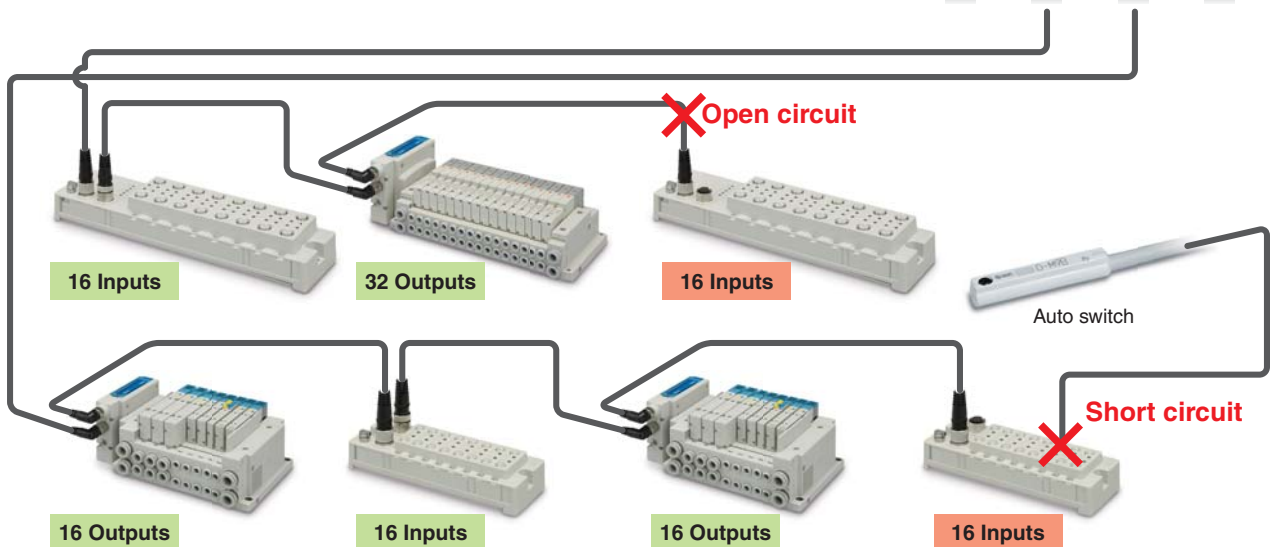

## No need to set the address

I/O mapping for the SI Unit and Input Unit is set by the Gateway Unit automatically.

The Unit installation order is not specified.

(The upper limit of the inputs / outputs is 32 points for one branch port.)



# Gateway Decentralised System 2 (128 Points)

## Reduced wiring

The amount of communication and power supply wiring for the I/O device can be reduced.

## Reduction of number of communication nodes

By reducing the number of communication nodes, the load on the network is reduced.

## Accessories can be ordered together.

Page 13 Page 56

Accessories including cables and connectors can be ordered together to SMC. Time for selecting parts, ordering and managing lead time can be reduced.



## Flexibly copes with changes in the protocol.

Previously, it was necessary to change the part number of the slave unit, return the slave unit, and make arrangements once again to obtain a new unit (additional quotation, delivery period control).




Only the GW Unit needs to be changed.

## Applicable to output devices other than valve manifold.

Page 16


By using output block, lights and buzzers can be operated.

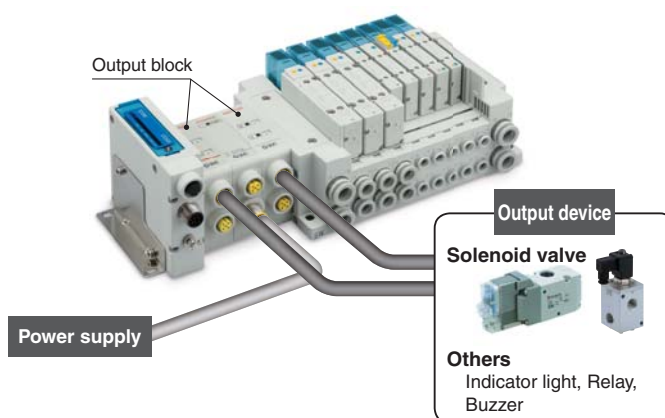

## Specified valve manifold can be controlled by supplying power from a different system.



Page 15

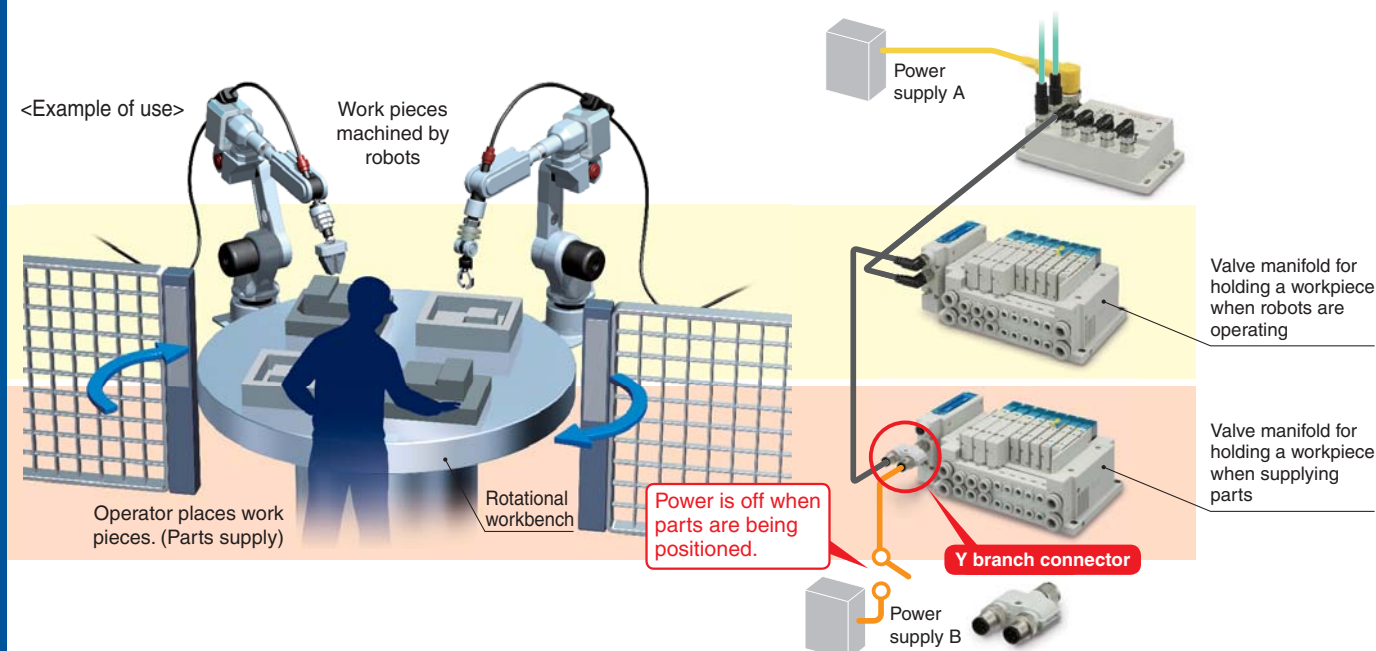By using a Y branch connector, power from a different system can be supplied to the SI Unit (valve manifold).


















## System Comparison Table

	Gateway Decentralised System 2	Gateway Decentralised System (Current model)
Protocol	 EtherNet/IP <sup>®</sup>	DeviceNet 
Number of inputs/outputs (Number of inputs/outputs per branch)	128 inputs/128 outputs (32 inputs/32 outputs)	64 inputs/64 outputs (16 inputs/16 outputs)
Number of valve manifold connections (Number of connections per branch)	Max. 8 Units* (Max. 2 Units)	Max. 4 Units (1 Unit)
Number of Input Unit connections (Number of connections per branch)	Max. 8 Units (Max. 2 Units)	Max. 4 Units (1 Unit)
Branch cable length	Max. 20 m	Max. 10 m
Enclosure	GW Unit: IP65 SI Unit: IP67 Input Unit: IP67	GW Unit: IP65 SI Unit: IP67 Input Unit: IP65
Function	Web server function (Valve operation test, Connection diagnostic, Short-circuit diagnostic)	—
Page	8	48

\* When the number of outputs is set to "16 outputs" using a built-in setting switch of the SI Unit.

## Applicable Valve Series

Series		Flow rate characteristics (4/2→5/3)			Maximum number of solenoids	Power consumption [W]	Enclosure	International standard	Page
		C [dm <sup>3</sup> /(s·bar)]	b	Note 2) Q [l/min (ANR)]					
	SY3000	1.6	0.19	381	32	0.35 (Standard) 0.1 (With power saving circuit) [Inrush 0.4, Holding 0.1]			19
	SY5000	3.6	0.17	848					
	SY7000	5.9	0.20	1413					
	VQC1000	1.0 Note 1)	0.30 Note 1)	254	24	0.4 (Standard)  0.95 (Standard) 0.4 (Low-wattage type)			27
	VQC2000	3.2 Note 1)	0.30 Note 1)	814					
	VQC4000	7.3 Note 1)	0.38 Note 1)	1958					
	VQC5000	17.0 Note 1)	0.31 Note 1)	4350					
	S0700	0.37	0.39	100	32	0.35			39
	SV1000	1.1	0.35	289	32	0.6		 	42
	SV2000	2.4	0.18	568					
	SV3000	4.3	0.21	1036					

Note 1) Values for 2-position single, rubber seal type

Note 2) These values have been calculated according to ISO 6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.


# Series SY3000/5000/7000

Piping on the top or the bottom makes the footprint smaller to realise dramatic space-saving.




## Valve piping direction variations

- Piping is possible from 3 directions.

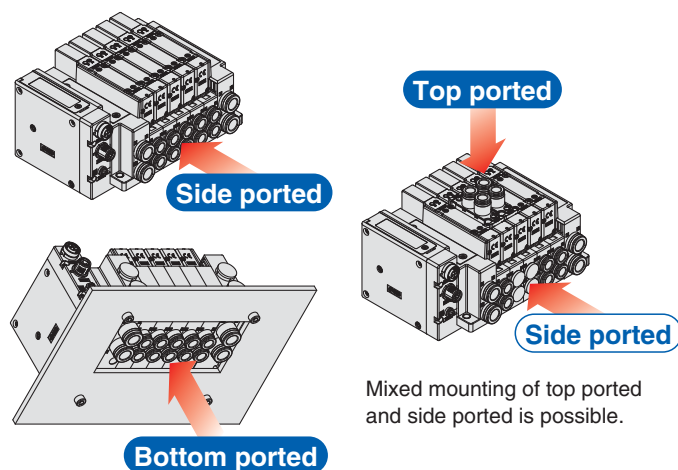

## Max. 24 stations connectable

- It is possible to connect only the number of valves required, from 1 to 24 stations, to suit the application. (Maximum number of solenoids: 32)

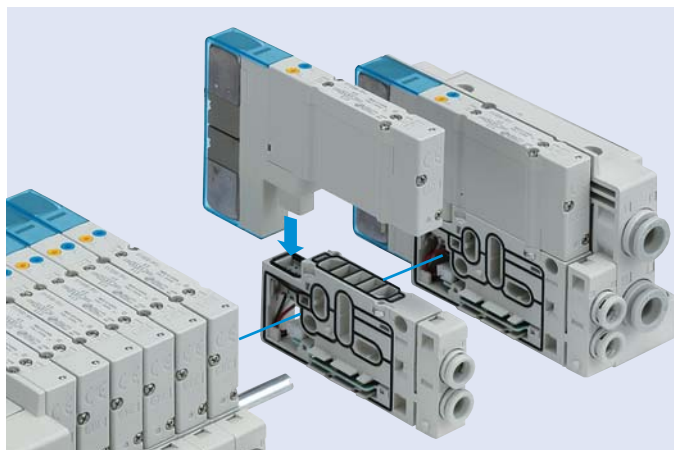


## Mixed valve sizes manifold

It is also possible to install a combination of different-sized valves on the same manifold. (SY3000 and SY5000, or SY5000 and SY7000)

This facilitates reduction in the installation space and number of units/cables.

- Example: For SY5000 and SY3000

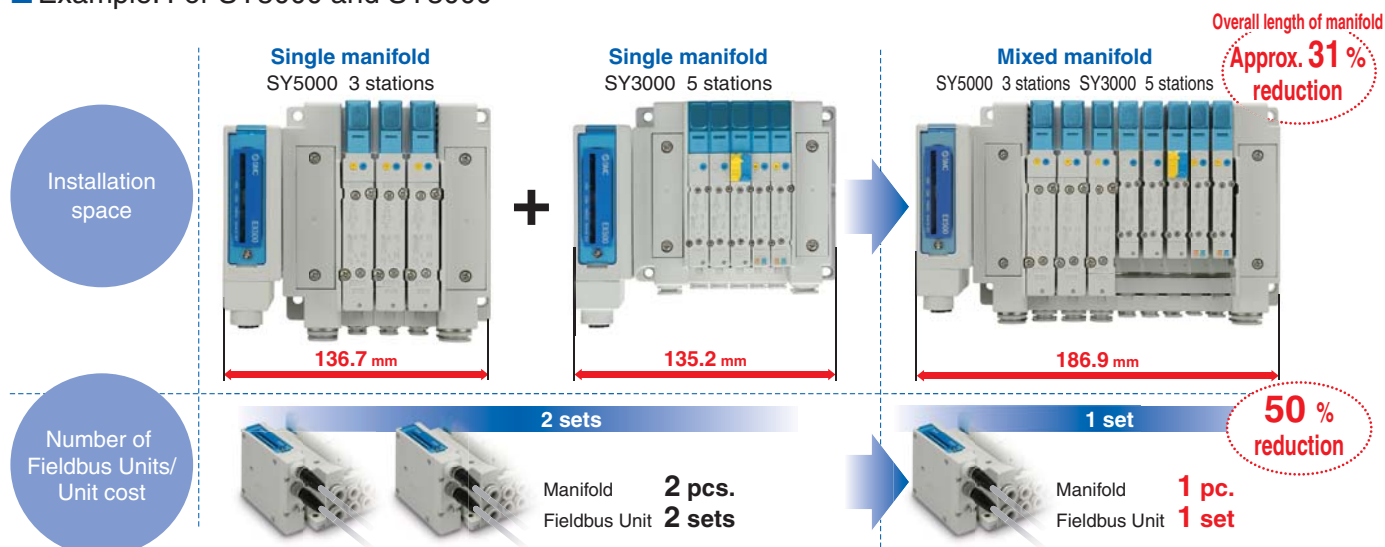

## Fieldbus System (Gateway Decentralised Type) Series EX500


Series EX500 Gateway Decentralised System 2 (128 Points) Page 8





## Gateway Decentralised System 2 (128 Points)

- ★ Valve manifold and Input Unit can be connected around the GW (Gateway) Unit.
- ★ Number of inputs/outputs = 128 points/128 points. The number of outputs (solenoids) per branch is 32 points.
- ★ Number of valve manifold connections = Max. 8 Units, Number of Input Unit connections = Max. 8 Units, Branch cable length = Max. 20 m
- ★ Web server function (Valve operation test, connection diagnostic of Units, short-circuit diagnostic of input devices)
- ★ No need to set the address for the valve manifold and Input Unit.

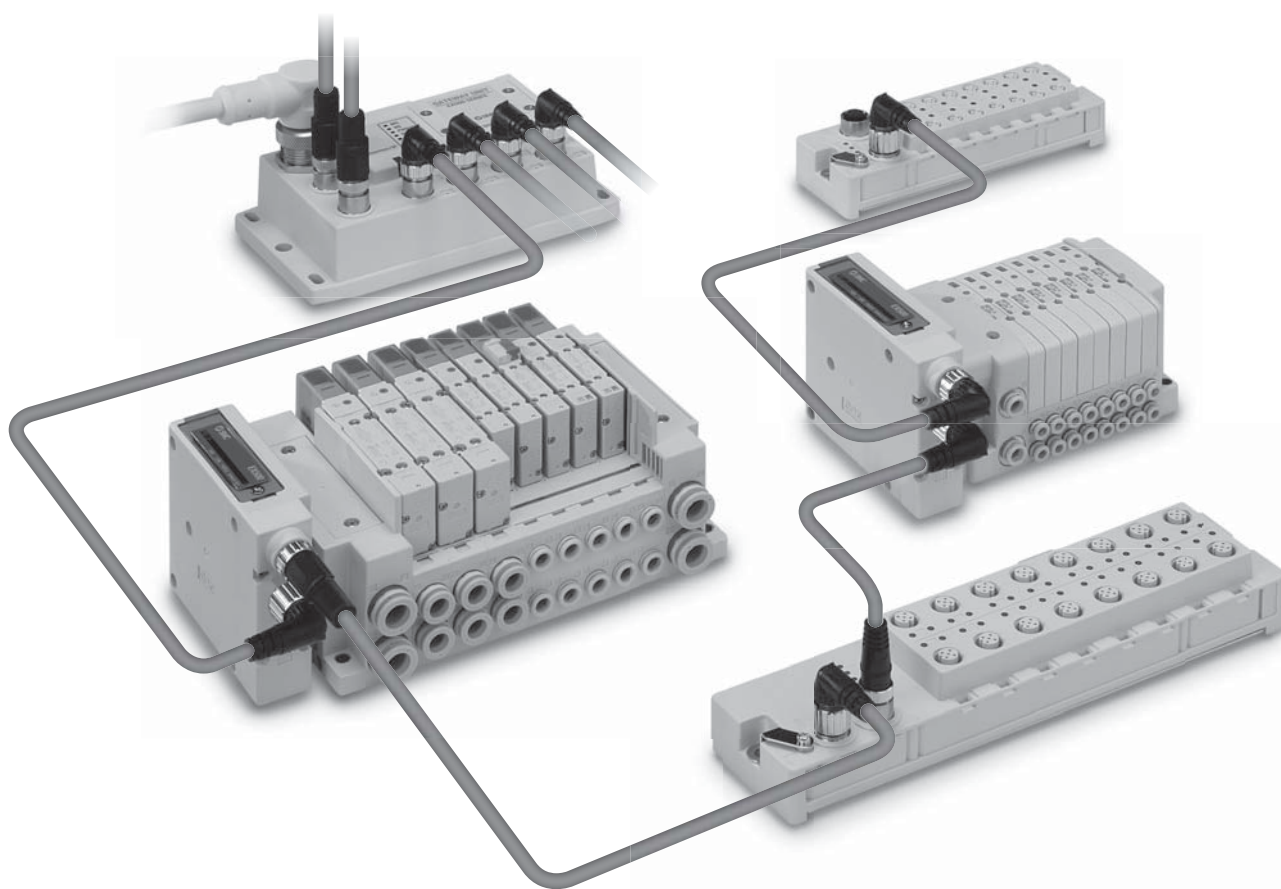

**SY3000/5000/7000**

**Page 19**



**VQC1000/2000/4000/5000**

**Page 27**



**S0700**

**Page 39**



**SV1000/2000/3000**

**Page 42**



# Gateway Decentralised System 2 (128 Points)

## GW Unit



RoHS

### How to Order

## EX500 — G EN2



#### Communication protocol

EN2	EtherNet/IP™ (Input/Output = 128 points/128 points)
PN2	PROFINET (Input/Output = 128 points/128 points)

### Specifications

Model		EX500-GEN2	EX500-GPN2
Communication	Protocol	EtherNet/IP™ Note 1)	PROFINET IO
	Version Note 2)	Volume 1 (Edition 3.14) Volume 2 (Edition 1.15)	PROFINET Specification Version 2.2
	Media	100BASE-TX	100BASE-TX
	Communication speed	10/100 Mbps (Automatic)	100 Mbps
	Communication method	Full duplex/Half duplex (Automatic)	Full duplex
	Number of inputs/ outputs (I/O occupation area)	128 inputs/128 outputs (20 bytes/20 bytes)	128 inputs/128 outputs (18 bytes/16 bytes)
	Configuration file Note 3)	EDS file	GSDML
	IP address setting range	Switch settings: 192.168.0.1 to 254 or 192.168.1.1 to 254, Through DHCP server: Optional address	Optional address
	Device information	Vendor ID: 7 (SMC Corporation) Product type: 12 (Communication Adapter), Product code: 198	—
	Applicable function	DLR QuickConnect™ Web server	MRP Fast Start Up Web server
Power supply voltage	For input and control	24 V DC ±10 %	
	For valve	24 V DC +10 %, -5 %	
Current consumption	For input and control	6.2 A or less (Max. 1.5 A per branch x 4 branches + GW Unit internal current consumption: 0.2 A or less)	
	For output (valve)	4 A or less (Max. 1 A per branch x 4 branches)	
Branch port	Number of branch ports	4 ports	
	Number of inputs and outputs	32 inputs/32 outputs per branch	
	Branch cable length	20 m or less per branch	
Environment	Enclosure	IP65	
	Operating temperature range	Operating: -10 to 50 °C, Stored: -20 to 60 °C (No condensation)	
	Operating humidity range	Operating, Stored: 35 to 85 %RH (No condensation)	
Standards		CE marking, UL (CSA), RoHS compliant	
Weight		550 g	
Enclosed parts		Seal cap (for M12 connector socket) 5 pcs.	

Note 1) Use a CAT5 or higher communication cable.

Note 2) Please note that the version is subject to change.

Note 3) Each file can be downloaded from SMC website, <http://www.smc.eu>



## EX500-GEN2 (EtherNet/IP™)



SY

**VQC**

**S0700**

SV






## Specifications

Model		EX500-S103
Applicable valve		SY, VQC, S0700, SV
Output	Number of outputs	16/32 outputs (Switched by built-in setting switch)
	Output type	Source/PNP (Negative common)
	Rated voltage	24 V DC
	Supply current	With power supplied to GW Unit: Max. 1.0 A With external power* supplied: Max. 1.5 A
Internal current consumption		50 mA or less
Environment	Enclosure	IP67
	Operating temperature range	Operating: -10 to 50 °C, Stored: -20 to 60 °C (No condensation)
	Operating humidity range	Operating, Stored: 35 to 85 % RH (No condensation)
Standards		CE, UL (CSA), RoHS compliant
Weight		200 g
Enclosed parts		Seal cap (for M12 connector socket) 1 pc.
		Valve manifold mounting screw (M3 x 30) 2 pcs.

\* When an accessory, Y branch connector, is used.

## Dimensions/Parts Description

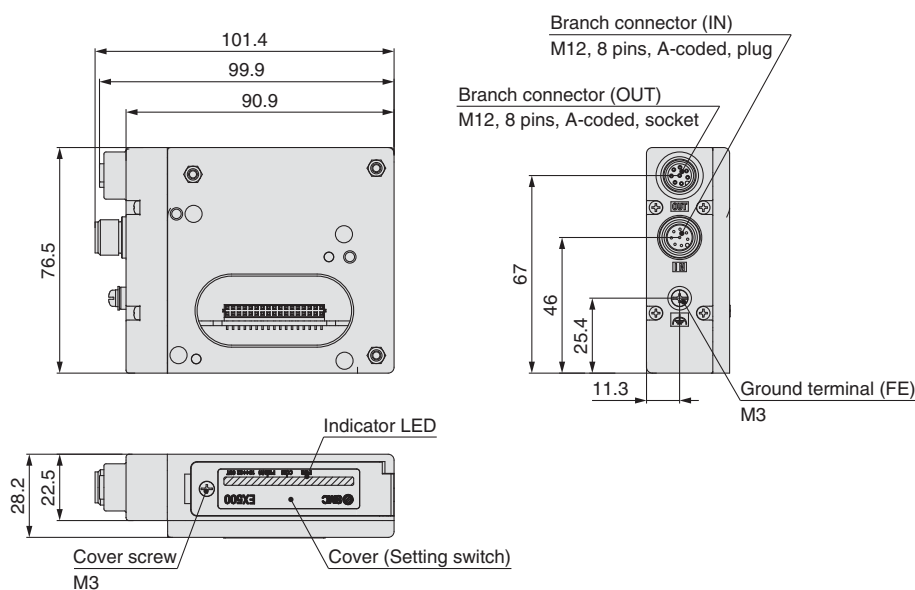

# Gateway Decentralised System 2 (128 Points) Input Unit



RoHS


## How to Order

## EX500 — DX P A

Input unit

Connector type

A	M8 connector type
B	M12 connector type

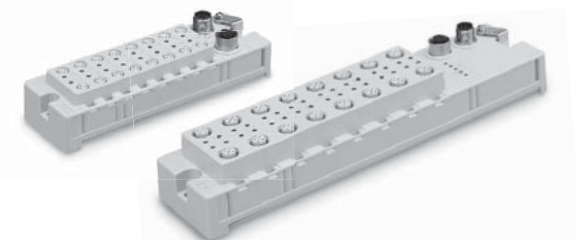


## Specifications


Model		EX500-DXPA	EX500-DXPB
Connector type		M8 connector	M12 connector
Input	Number of inputs	16 inputs	
	Input type	PNP	
	Rated voltage	24 V DC	
	Supply current	Max. 1.3 A/Unit [ Total of 8 connectors of even number must be Max. 0.65 A, 8 connectors of odd number must be Max. 0.65 A ]	
	Input ON voltage/Input ON current	11 V or more/Typ. 7 mA (at 24 V DC)	
		Input OFF voltage/Input OFF current	
		5 V or less/1.5 mA or less	
Internal current consumption		200 mA or less (when the input signal is ON)	
Environment	Enclosure	IP67	
	Operating temperature range	Operating: -10 to 50°C, Stored: -20 to 60 °C (No condensation)	
	Operating humidity range	Operating, Stored: 35 to 85 %RH (No condensation)	
Standards		CE, UL (CSA), RoHS compliant	
Weight		250 g	450 g
Enclosed parts		Seal cap (for M8 connector socket) 16 pcs.	Seal cap (for M12 connector) 17 pcs.
		Seal cap (for M12 connector socket) 1 pc.	

## Dimensions/Parts Description

## EX500-DXPA

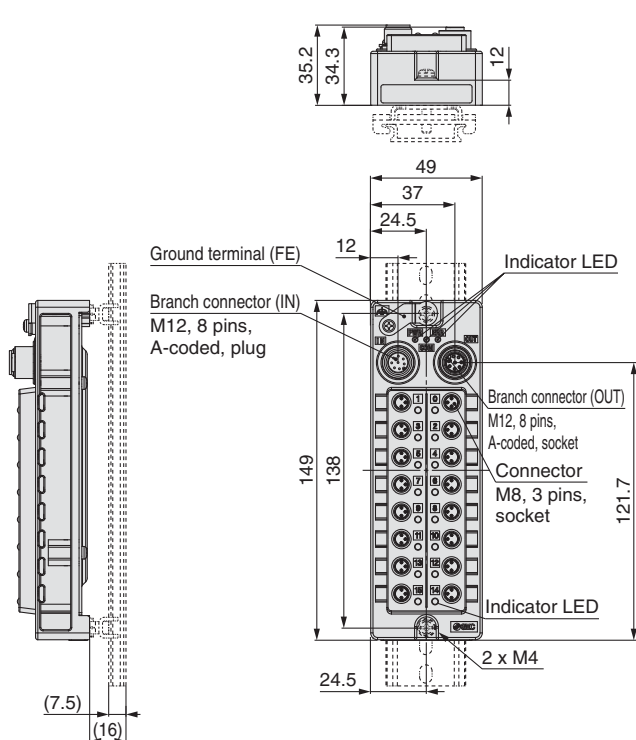

## EX500-DXPB

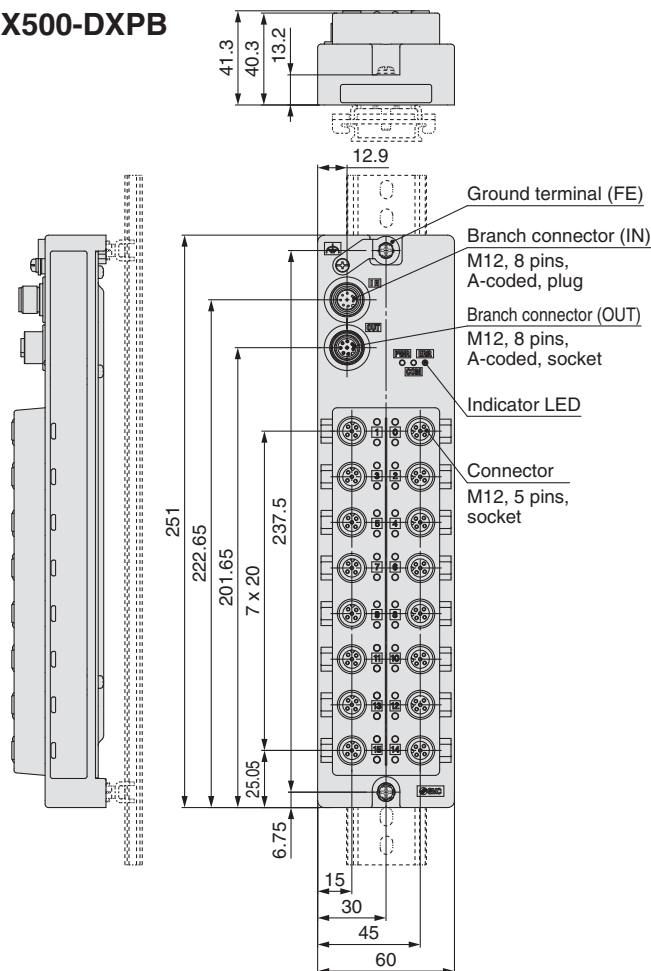



# Gateway Decentralised System 2 (128 Points) Accessories

## ① Power Supply Cable


Supplies power to the GW Unit.

For EtherNet/IP™

**PCA-1416000**

Connector specification, Cable length (L)

1415999	Straight 2 m
1415996	Straight 6 m
1416000	Angle 2 m
1415997	Angle 6 m

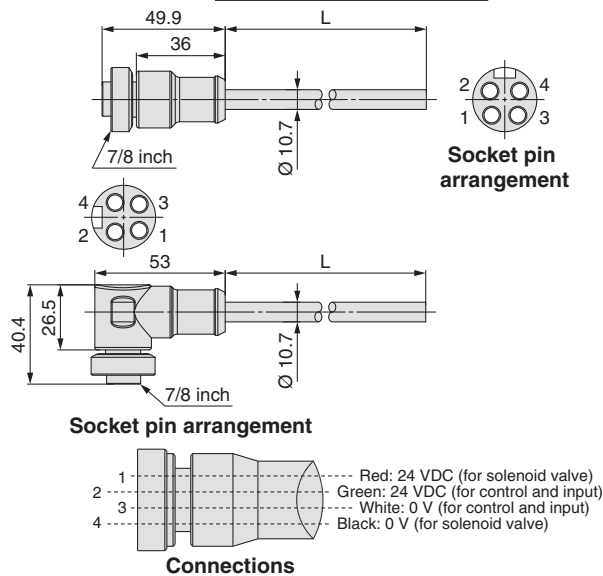


For PROFINET

**PCA-1558810**

Connector specification, Cable length (L)

1558810	Straight 2 m
1558823	Straight 6 m
1558836	Angle 2 m
1558849	Angle 6 m

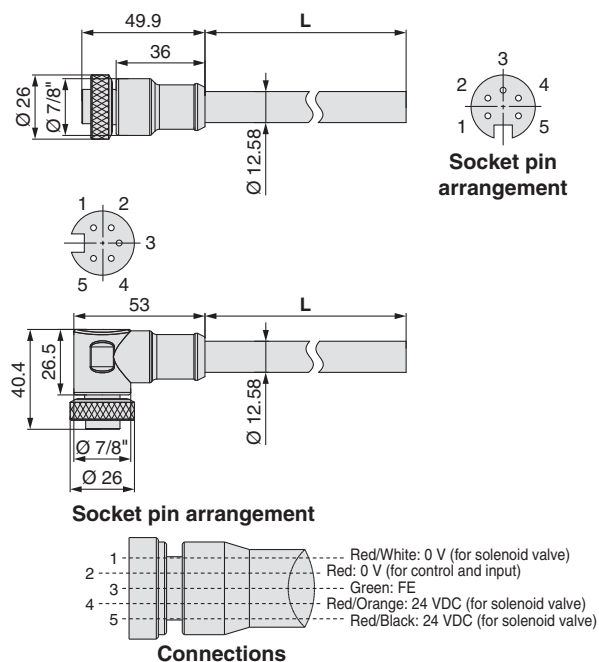

## ② Communication Cable/Connector


Connects Fieldbus to the GW Unit.

Cable with connector

**PCA-1446566** **SPEEDCON**

Cable length



1446566	5000 [mm]
---------	-----------

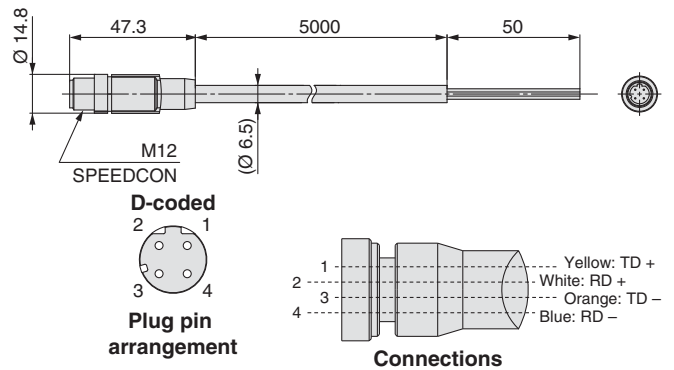

Field wireable connector

**PCA-1446553**

D-coded

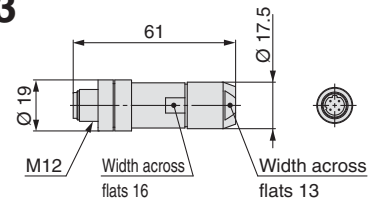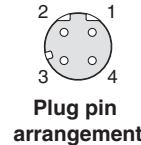

Applicable Cable

Cable O.D.	4.0 to 8.0 mm
Wire gauge (Stranded wire cross section)	0.14 to 0.34 mm <sup>2</sup> /AWG26 to 22

Note) The table above shows the specifications for the applicable cable. Adaptation for the connector may vary on account of the conductor construction of the electric wire.

Cable with M12 ↔ RJ-45 connector


**EX9-AC020EN-PSRJ**

Cable length (L)


010	1000 [mm]
020	2000 [mm]
030	3000 [mm]
050	5000 [mm]
100	10000 [mm]

Connector specification

PSRJ	M12 plug (Straight) ↔ RJ-45 connector
------	------------------------------------------

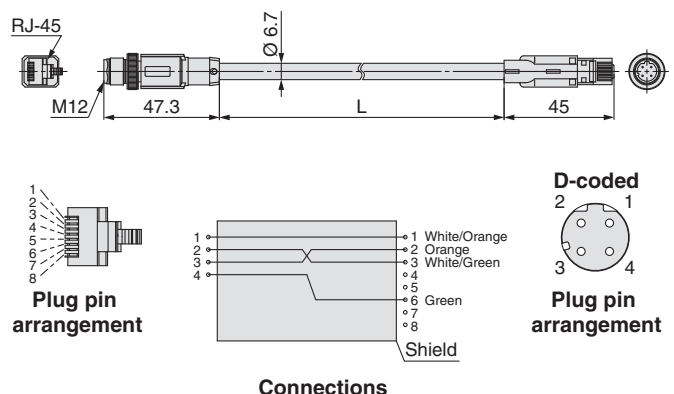

&lt;Example of use&gt;

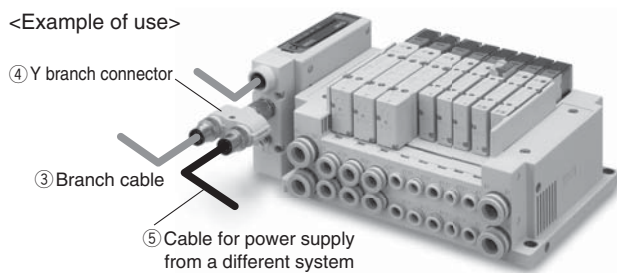**③ Branch Cable**

Connects the GW Unit and SI Unit or Input Unit.


**EX500-AC030-SSPS**

Cable length (L)


003	300 [mm]
005	500 [mm]
010	1000 [mm]
030	3000 [mm]
050	5000 [mm]
100	10000 [mm]

• Connector specification

<b>SSPS</b>	Socket side: Straight, Plug side: Straight
<b>SAPA</b>	Socket side: Angle, Plug side: Angle

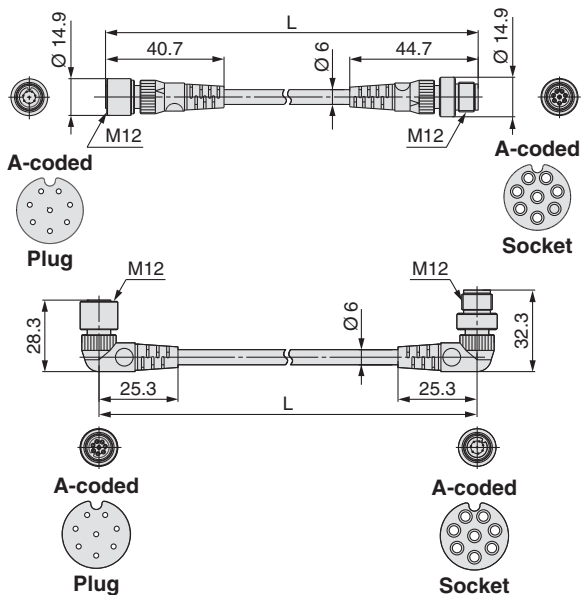**④ Y Branch Connector**


Supplies separate power to valve manifold when it is connected to the SI Unit.

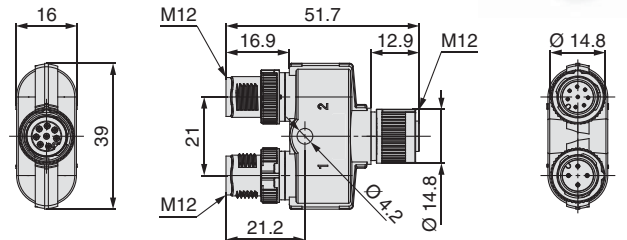**EX500-ACY01-S**

Pin Layout of the Cable for Power Supply from a Different System

1	24 V DC +10 %, -5 % (for solenoid valve)
2	0 V DC (for solenoid valve)
3	Unused
4	Unused

A-coded

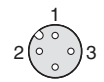

Plug pin arrangement

**⑤ Cable for Power Supply from a Different System**

Connect to Y branch connector to supply power.


**EX500-AP050-S**

Cable length (L)

010	1000 [mm]
050	5000 [mm]



• Connector specification

<b>S</b>	Straight
<b>A</b>	Angle

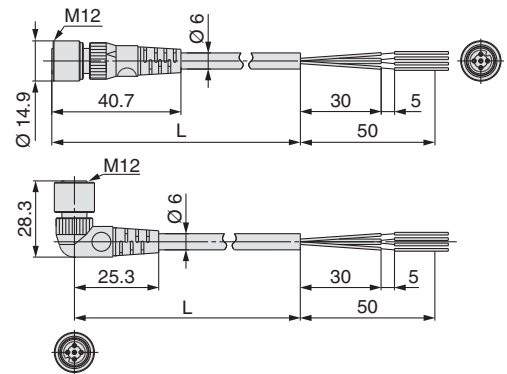**PCA-1401804**

Cable length (L)


<b>1401804</b>	1500 [mm]
<b>1401805</b>	3000 [mm]
<b>1401806</b>	5000 [mm]

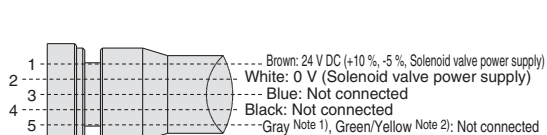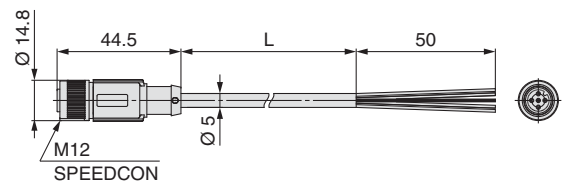

Connections

Note 1) For EX500-AP□□  
Note 2) For PCA-□

 A-coded




Socket pin arrangement

## Series EX500

### ⑥ Marker (1 sheet, 88 pcs.)

Signal name of the input device such as a switch can be written on the marker and installed to the Input Unit.

**EX600-ZT1**

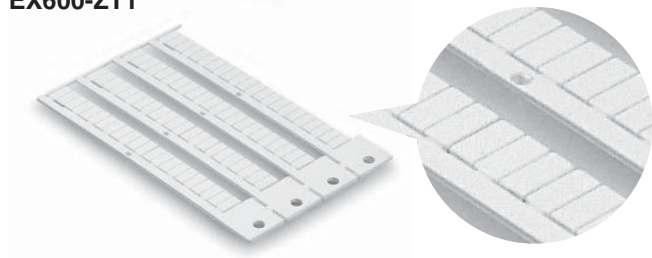

### ⑦ Seal Cap (10 pcs.)

Use with new connector. By using these waterproof caps, the new connector maintains IP65/67 enclosure.


**EX9-AWES** For M8 connector socket    **EX9-AWTS** For M12 connector socket




### ⑧ DIN Rail Bracket (2 pcs.)

Bracket for mounting the Input Unit (EX500-DXPA, EX500-DXPB) to DIN rail.

**EX500-ZMA1**

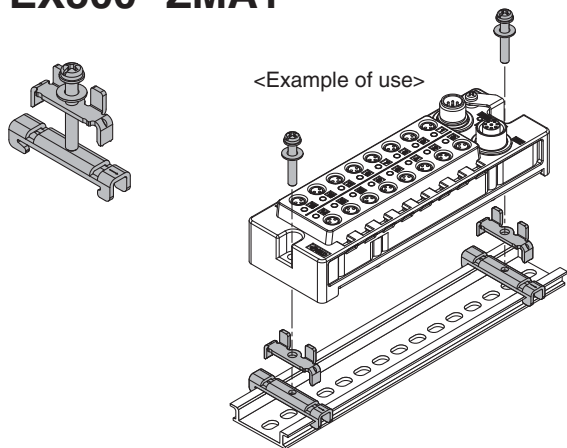

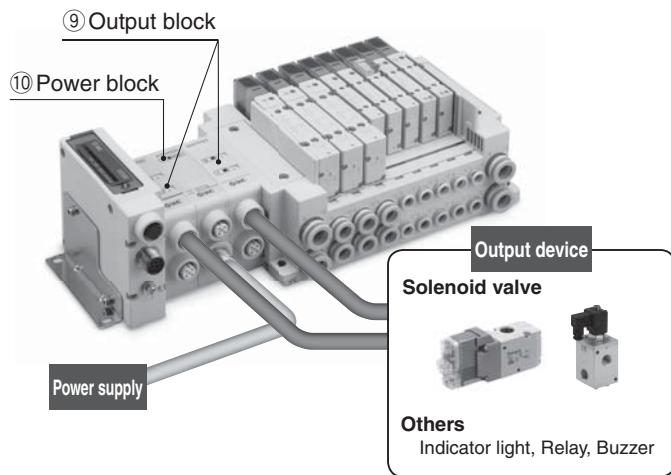


- Output devices other than valve manifold can be operated.
- By using the power block and output block for high watt load, operation up to 0.5 A/1 point can be performed.
- Possible to mount the output block and power block additionally between the SI Unit and the valve (The surplus I/O points are used).
- 2 point outputs per output block (M12 connector)

You are requested to connect it to an SI Unit and a valve manifold. For detailed specifications, refer to the Operation Manual that can be downloaded from SMC website, <http://www.smc.eu>

## 9 Output Block

### EX9 – OE T 1

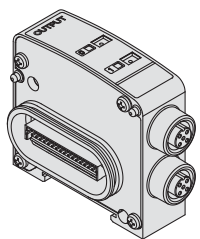

#### ● Output specification


1 Source/PNP (Negative common)

#### ● Power supply type

T Internal power supply method (for low-wattage load)  
P Integrated power supply method (for high-wattage load) Note)

Note) Required to connect with a power block.

### Dimensions/Parts Description

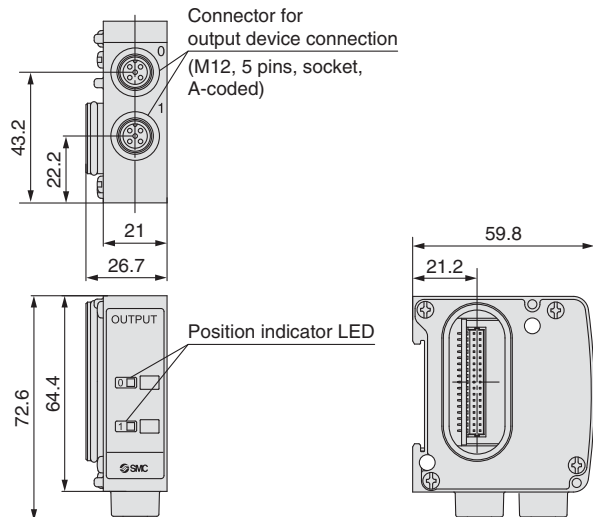


### Specifications


Model	EX9-OET1	EX9-OEP1
Internal current consumption	40 mA or less	
Output	Output type	Source/PNP (Negative common)
	Number of outputs	2 outputs
	Power supply method	Internal power supply method      Integrated power supply method (Power block: supplied from EX9-PE1)
	Output device supply voltage	24 V DC
	Output device supply current	Max. 42 mA/point (1.0 W/point)      Max. 0.5 A/point (12 W/point)
Environment	Enclosure	IP67
	Operating temperature range	-10 to 50 °C
	Operating humidity range	35 to 85 %RH (No condensation)
Standards	CE marking, UL (CSA), RoHS compliant	
Weight	120 g	

## 10 Power Block

### EX9 – PE1

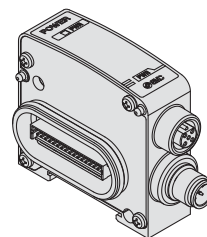

### Dimensions/Parts Description

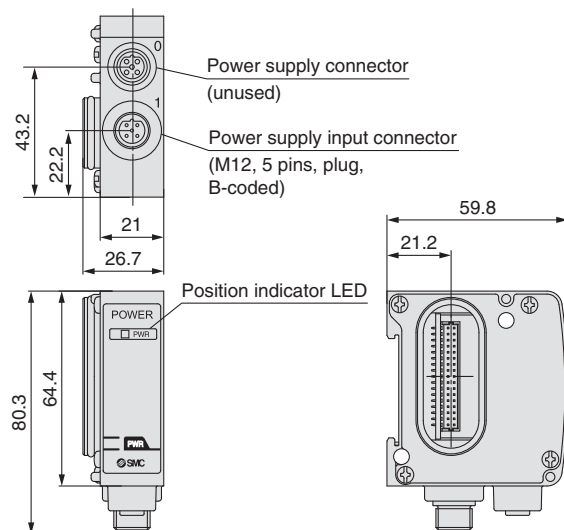

### Specifications

Model		EX9-PE1
Connection block		Output block for high wattage load
Connection block stations		Output block: Max. 8 stations
Power supply for output and internal control	Power supply voltage	22.8 to 26.4 V DC
	Internal current consumption	20 mA or less
Supply current		Max. 3.1 A <sup>Note)</sup>
Environment	Enclosure	IP67
	Operating temperature range	-10 to 50 °C
	Operating humidity range	35 to 85 %RH (No condensation)
Standards		CE marking, UL (CSA), RoHS
Weight		120 g
Enclosed parts		Seal cap (for M12 connector) 1 pc.

Note) When using with 3.0 to 3.1 A, the ambient temperature should not exceed 40 °C, and do not bundle the cable.

 



# Series EX500

## ⑪ Connector for Output Block Wiring


Field wireable connects the output device to the output block.

### PCA-1557743

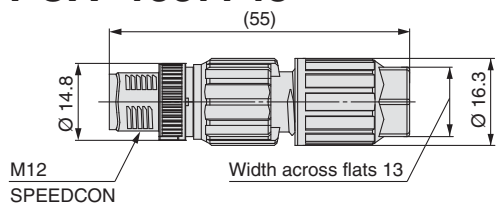

Connections

 A-coded





Plug pin arrangement

#### Applicable Cable

 
Cable O.D.	3.5 to 6.0 mm
Wire gauge (Stranded wire cross section)	0.14 to 0.34 mm <sup>2</sup> /AWG26 to 22
Core wire diameter (Including insulating material)	0.7 to 1.3 mm

### PCA-1557756

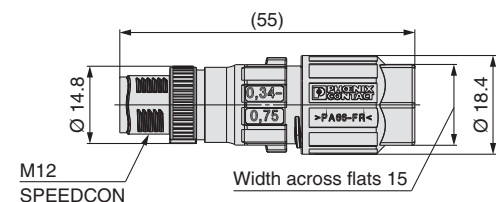

Connections

 A-coded



Plug pin arrangement

#### Applicable Cable

Cable O.D.	4.0 to 8.0 mm
Wire gauge (Stranded wire cross section)	0.34 to 0.75 mm <sup>2</sup> /AWG22 to 18
Core wire diameter (Including insulating material)	1.3 to 2.5 mm


## ⑫ Power Supply Cable for Power Block

Supplies power to the power block.

### EX9-AC 050-1

#### Cable length (L)



010	1000 [mm]
030	3000 [mm]
050	5000 [mm]

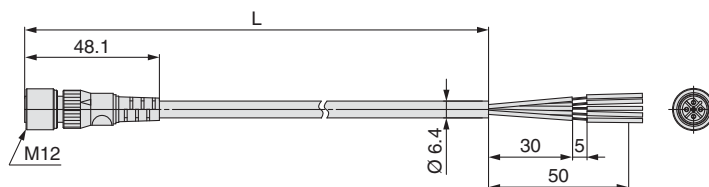

### PCA-1401807

#### Cable length (L)

 
1401807	1500 [mm]
1401808	3000 [mm]
1401809	5000 [mm]

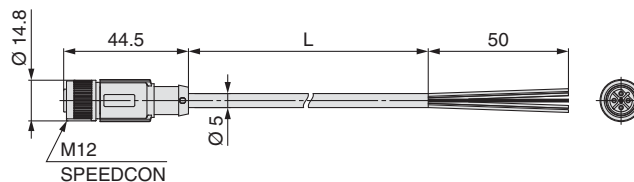

Connections

Note 1) For EX9-AC□-1  
Note 2) For PCA-□

 B-coded




Socket pin arrangement

13 End Plate

Use when the output block is not used and the valve manifold is not connected.

EX9 – EA03

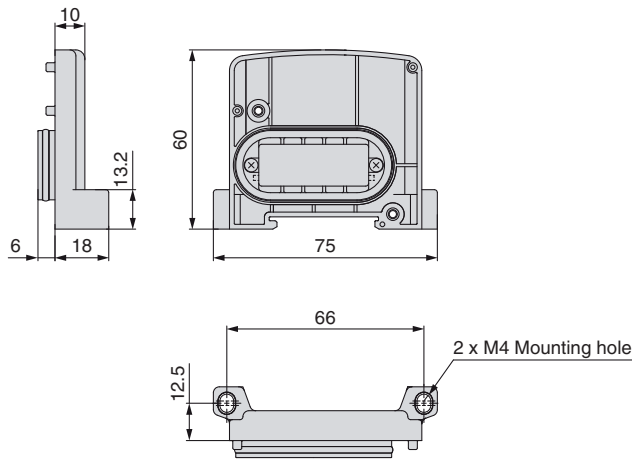

<Example of use>




14 Bracket Plate


A reinforcing brace used to mount output block or power block onto the SI Unit. To prevent connection failure between products due to deflection, use this bracket plate whenever output block or power block is mounted.

EX9 – BP1

Dimensions

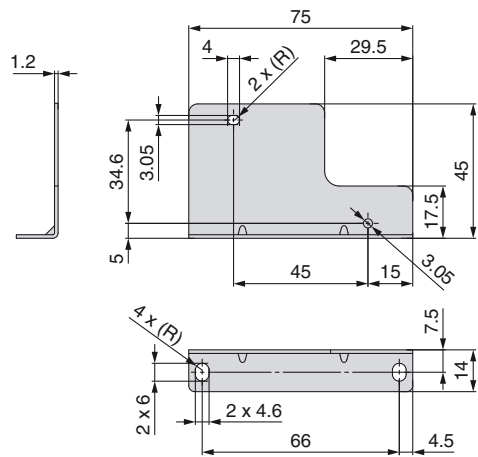

<Example of use>

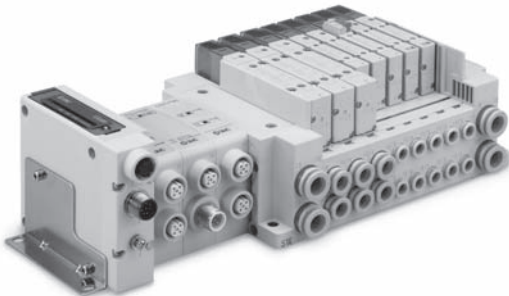

Accessory

Description	Quantity
Hexagon socket head cap screw (M3 x 35)	2

Type 10  
Side Ported

Type 11  
Bottom Ported

# Gateway Decentralised System 2

## 5 Port Solenoid Valve

Series **SY3000/5000/7000**



RoHS

For detailed specifications, Common Precautions and Specific Product Precautions, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

### How to Order Manifold

**SS5Y 3 - 10 S A3N - 05 U - C6**

1 2 3 4 5 6 7 8

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

\* For mixed mounting, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

#### 2 Type

10	Side ported
11	Bottom ported <sup>Note)</sup>

Note) The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

\* When mixing top ported configurations, select from page 23.  
In this case, use caution as there is also output on the A and B port on base side.  
Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

#### 3 SI Unit (Number of outputs, Output polarity, Max. number of valve stations)

0	Without SI Unit
A3N	32 outputs <sup>Note 1, 4)</sup> , 1 to 16 stations (24 stations <sup>Note 3)</sup> ), Negative common <sup>Note 2)</sup>

Note 1) 16 outputs can be set by switching the built-in setting switch.

Note 2) Ensure a match with the common specification of the valve.

Note 3) ( ): Maximum number of stations for mixed single and double wiring.

Note 4) When using the SI Unit with 32 outputs, use the GW Unit compatible with the EX500 Gateway Decentralised System 2 (128 points).

#### 4 Valve stations

Stations	Note
02	2 stations
⋮	⋮
16	16 stations
02	2 stations
⋮	⋮
24	24 stations

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal.  
If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) For the product without the SI Unit (S0), note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

\* This also includes the number of blanking plate assembly.

#### 5 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
B	Both sides (2 to 24 stations)

#### 6 SUP/EXH block assembly


—	Internal pilot
S	Internal pilot, Built-in silencer <sup>Note 1) 2)</sup>
R	External pilot

Note 1) 3/5(E) port is plugged for the built-in silencer type.

Note 2) When built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

### How to Order Manifold Assembly

#### Example

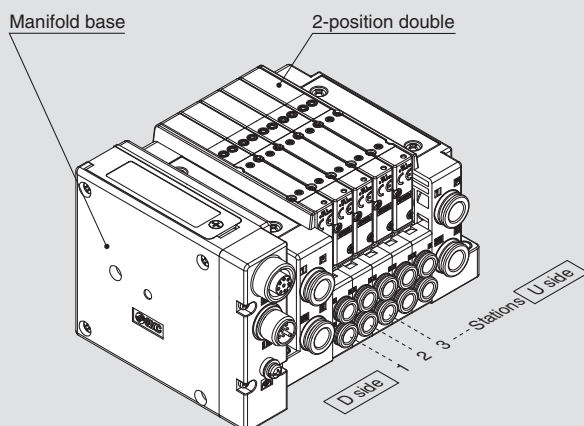

SS5Y3-10SA3N-05D-C6...1 set (Manifold base part number)  
\* SY3200-5U1 .....5 sets (2-position double part number)

The asterisk denotes the symbol for assembly.  
Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.

**7 A, B port size (Metric/One-touch fitting)**

	A, B port	Type 10/Side Ported			Type 11/Bottom Ported	
		SY3000	SY5000	SY7000	SY5000	SY7000
<b>C2</b>	Ø 2	●	—	—	—	—
<b>C3</b>	Ø 3.2	●	—	—	—	—
<b>C4</b>	Ø 4	●	●	—	●	—
<b>C6</b>	Ø 6	●	●	●	●	●
<b>C8</b>	Ø 8	—	●	●	●	●
<b>C10</b>	Ø 10	—	—	●	—	●
<b>C12</b>	Ø 12	—	—	●	—	●
<b>CM (Note 1)</b>	Mixed sizes	●	●	●	●	●
<b>L4</b>	Ø 4	●	●	—	—	—
<b>L6</b>	Ø 6	●	●	●	—	—
<b>L8</b>	Ø 8	—	●	●	—	—
<b>L10</b>	Ø 10	—	—	●	—	—
<b>L12</b>	Ø 12	—	—	●	—	—
<b>B4</b>	Ø 4	●	●	—	—	—
<b>B6</b>	Ø 6	●	●	●	—	—
<b>B8</b>	Ø 8	—	●	●	—	—
<b>B10</b>	Ø 10	—	—	●	—	—
<b>B12</b>	Ø 12	—	—	●	—	—
<b>LM (Note 1)</b>	Mixed sizes	●	●	●	—	—
P, E port (Note 3)		Ø 8	Ø 10	Ø 12	Ø 10	Ø 12

Note 1) Indicate the sizes on the manifold specification sheet.

Note 2) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly. For details, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

Note 3) The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

**A, B port size (Inch/One-touch fitting)**

	A, B port	Type 10/Side Ported			Type 11/Bottom Ported	
		SY3000	SY5000	SY7000	SY5000	SY7000
<b>N1</b>	Ø 1/8"	●	—	—	—	—
<b>N3</b>	Ø 5/32"	●	●	—	●	—
<b>N7</b>	Ø 1/4"	●	●	●	●	●
<b>N9</b>	Ø 5/16"	—	●	●	●	●
<b>N11</b>	Ø 3/8"	—	—	●	—	●
<b>CM (Note 1)</b>	Mixed sizes	●	●	●	●	●
<b>LN3</b>	Ø 5/32"	●	—	—	—	—
<b>LN7</b>	Ø 1/4"	●	●	—	—	—
<b>LN9</b>	Ø 5/16"	—	●	—	—	—
<b>LN11</b>	Ø 3/8"	—	—	●	—	—
<b>BN3</b>	Ø 5/32"	●	—	—	—	—
<b>BN7</b>	Ø 1/4"	●	●	—	—	—
<b>BN9</b>	Ø 5/16"	—	●	—	—	—
<b>BN11</b>	Ø 3/8"	—	—	●	—	—
<b>LM (Note 1)</b>	Mixed sizes	●	●	●	—	—
P, E port (Note 3)		Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"

**8 Mounting and Option**

	Mounting	Option	
		Name plate	Station number
—	Direct mounting	—	—
<b>AA</b>		●	●
<b>BA</b>		●	—
<b>D</b> (Note 1)	DIN rail mounting	—	—
<b>A</b> (Note 1)		●	●
<b>B</b> (Note 1)		●	—

Note 1) Refer to "DIN Rail Option" below.

\* Select the direct mounting type for Type 11 (Bottom ported).

**DIN Rail Option**

—	With DIN bracket, DIN rail with standard length
<b>0</b>	With DIN bracket, without DIN rail
<b>3</b> (Note)	With DIN bracket, DIN rail for 3 stations
⋮	⋮
<b>24</b> (Note)	With DIN bracket, DIN rail for 24 stations


Note) Specify a longer rail than the length of valve stations.

\* If the DIN rail must be mounted without an SI Unit, select "D0" and order the DIN rail separately. Refer to L3 of the dimensions for the DIN rail length. For the DIN rail part number, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

\* For the fixation of DIN rail mounting type manifold, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).



## How to Order Valves (With mounting screw)

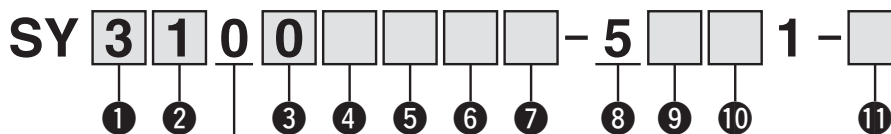

### 1 Series

3	SY3000
5	SY5000
7	SY7000

### 2 Type of actuation

1	2-position	Single
2		Double
3	3-position	Closed centre
4		Exhaust centre
5		Pressure centre
A Note)	4-position dual 3-port valve	N.C./N.C.
B Note)		N.O./N.O.
C Note)		N.C./N.O.

Note) Select the rubber seal type for the 4-position dual 3-port valve.

### 3 Seal type

0	Rubber seal
1	Metal seal

### 4 Pilot type

—	Internal pilot
R	External pilot

### 5 Back pressure check valve

—	None
H Note)	Built-in

Note) Select the rubber seal type when the back pressure check valve is built-in. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. For ordering example, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103). However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.

\* Select “—” for 3-position type and the SY7000.

### 6 Pilot valve option

—	Standard (0.7 MPa)
B	Quick response type (0.7 MPa)
K Note)	High pressure type (1.0 MPa)

Note) Select the metal seal type for high pressure type.

### 7 Coil type

—	Standard
T	With power saving circuit (Continuous duty type) Note 1) 2)

Note 1) Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.

Note 2) Be careful of the energising time when the power saving circuit is selected. For details, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

### 8 Rated voltage


5	24 V DC
---	---------

### 9 Light/surge voltage suppressor and common specification

	With light	Surge voltage suppressor	Common specification
R	—	●	Non-polar
U	●		Negative common
NS	—		
NZ	●		

\* Select “NZ” type for with the power saving circuit.

### 10 Manual override

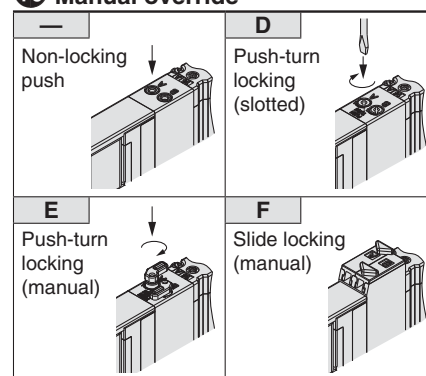

### 11 Type of mounting screw

—	Round head combination screw
B	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type) Note)
H	Hexagon socket head cap screw (Falling-out-prevention type) Note)

Note) For “K” and “H”, the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.

\* **When ordering a valve individually, the base gasket is not included.**

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

For details, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

\* Select “—” or “K” for the optional individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

# Gateway Decentralised System 2

## 5 Port Solenoid Valve

Series **SY3000/5000/7000**



RoHS

Type 12  
Top Ported

For detailed specifications, Common Precautions and Specific Product Precautions, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

### How to Order Manifold

**SS5Y** **3** - 12S **A3N** - **05** **U** **□** - **□** **□**

1                      2                      3                      4                      5                      6                      7

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

\* For mixed mounting, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

#### 2 SI Unit (Number of outputs, Output polarity, Max. number of valve stations)

0	Without SI Unit
A3N	32 outputs <sup>Note 1, 4)</sup> , 1 to 16 stations (24 stations <sup>Note 3)</sup> , Negative common <sup>Note 2)</sup>

Note 1) 16 outputs can be set by switching the built-in setting switch.

Note 2) Ensure a match with the common specification of the valve.

Note 3) ( ): Maximum number of stations for mixed single and double wiring.

Note 4) When using the SI Unit with 32 outputs, use the GW Unit compatible with the EX500 Gateway Decentralised System 2 (128 points).

#### 3 Valve stations

Stations	Note
02	2 stations
⋮	⋮
16	16 stations
02	2 stations
⋮	⋮
24	24 stations

Double wiring <sup>Note 1)</sup>

Specified layout <sup>Note 2)</sup>  
(Available up to 32 solenoids)

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) For the product without the SI Unit (S0), note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

\* This also includes the number of blanking plate assembly.

#### 4 P, E port entry

U <sup>Note)</sup>	U side (2 to 10 stations)
D <sup>Note)</sup>	D side (2 to 10 stations)
B	Both sides (2 to 24 stations)

Note) For type "S", supply/exhaust block assembly with built-in silencer, choose "U" or "D" for P, E port entry.

#### 5 SUP/EXH block assembly


—	Internal pilot
S <sup>Note 1)</sup>	Internal pilot, Built-in silencer <sup>Note 2)</sup>
R	External pilot

Note 1) For type "S", supply/exhaust block assembly with built-in silencer, choose "U" or "D" for P, E port entry. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)

Note 2) When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

### How to Order Manifold Assembly

#### Example

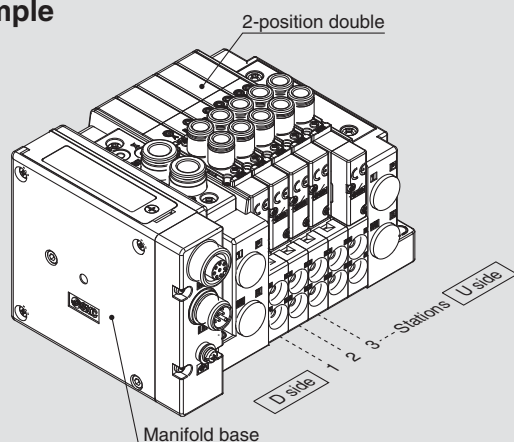

SS5Y3-12SA3N-05D.....1 set (Manifold base part number)  
 \* SY3230-5U1-C6.....5 sets (2-position double part number)  
 → The asterisk denotes the symbol for assembly.  
 Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.

#### 6 P, E port size (One-touch fittings)

	SY3000	SY5000	SY7000
—	Ø 8	Ø 10	Ø 12
N <sup>Note)</sup>	Ø 5/16"	Ø 3/8"	Ø 1/2"

Note) For "N", sizes are in inches.

#### 7 Mounting


—	Direct mounting
D	With DIN bracket, DIN rail with standard length
D0	With DIN bracket, without DIN rail
D3 <sup>Note)</sup>	With DIN bracket, DIN rail for 3 stations
⋮	⋮
D24 <sup>Note)</sup>	With DIN bracket, DIN rail for 24 stations

Note) Specify a longer rail than the length of valve stations.

\* If the DIN rail must be mounted without an SI Unit, select "D0". Then, refer to L3 of the dimensions for the DIN rail length and order separately. For the DIN rail part number, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

\* For the fixation of DIN rail mounting type manifold, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

## How to Order Valves (With mounting screw)

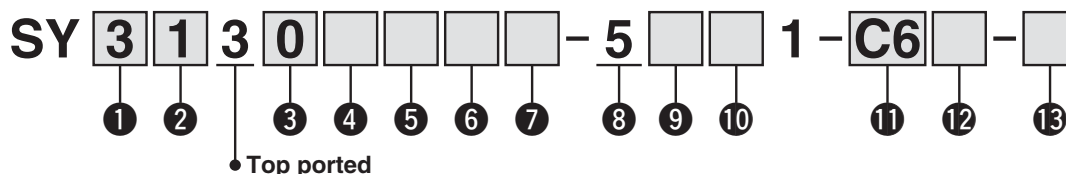

### 1 Series

3	SY3000
5	SY5000
7	SY7000

### 2 Type of actuation

1	2-position	Single
2		Double
3	3-position	Closed centre
4		Exhaust centre
5		Pressure centre
A Note)	4-position dual 3-port valve	N.C./N.C.
B Note)		N.O./N.O.
C Note)		N.C./N.O.

Note) Select the rubber seal type for the 4-position dual 3-port valve.

### 3 Seal type

0	Rubber seal
1	Metal seal

### 4 Pilot type

—	Internal pilot
R	External pilot

### 5 Back pressure check valve (Built-in valve type)

—	None
H Note)	Built-in

Note) Select the rubber seal type when the back pressure check valve is built-in. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. For ordering example, refer to the SY series catalogue (CAT. EUS11-103). However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.

\* Select “—” for 3-position type and the SY7000.

### 6 Pilot valve option

—	Standard (0.7 MPa)
B	Quick response type (0.7 MPa)
K Note)	High pressure type (1.0 MPa)

Note) Select the metal seal type for high pressure type.

### 7 Coil type

—	Standard
T	With power saving circuit (Continuous duty type) Note 1) 2)

Note 1) Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.

Note 2) Be careful of the energising time when the power saving circuit is selected. For details, refer to the SY series catalogue (CAT. EUS11-103).

### 8 Rated voltage


5	24 V DC
---	---------

### 9 Light/surge voltage suppressor and common specification

	With light	Surge voltage suppressor	Common specification
R	—	●	Non-polar
U	●		
NS	—		Negative common
NZ	●		

\* Select “NZ” type for with the power saving circuit.

### 10 Manual override

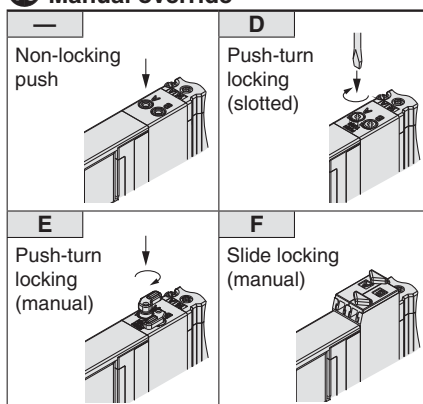

### 11 A, B port size

Thread piping	Port size	SY3000	SY5000	SY7000
M5	M5 x 0.8	●	—	—
01	1/8	—	●	—
02	1/4	—	—	●

### One-touch fitting (Metric)

A, B port	SY3000	SY5000	SY7000
C2	Ø 2	●	—
C3	Ø 3.2	●	—
C4	Ø 4	●	—
C6	Ø 6	●	●
C8	Ø 8	—	●
C10	Ø 10	—	●
C12	Ø 12	—	●

### One-touch fitting (Inch)

A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"	●	—
N3	Ø 5/32"	●	—
N7	Ø 1/4"	●	●
N9	Ø 5/16"	—	●
N11	Ø 3/8"	—	●

### 12 A, B port thread type

—	Rc
F	G
N	NPT
T	NPTF

\* Select “—” for M5.

### 13 Type of mounting screw

—	Round head combination screw
B	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type Note)
H	Hexagon socket head cap screw (Falling-out-prevention type Note)




Note) For “K” and “H”, the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.

\* When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

For details, refer to the SY series catalogue (CAT. EUS11-103).

\* Select “—” or “K” for the optional individual SUP/EXH spacer assembly or interface regulator.

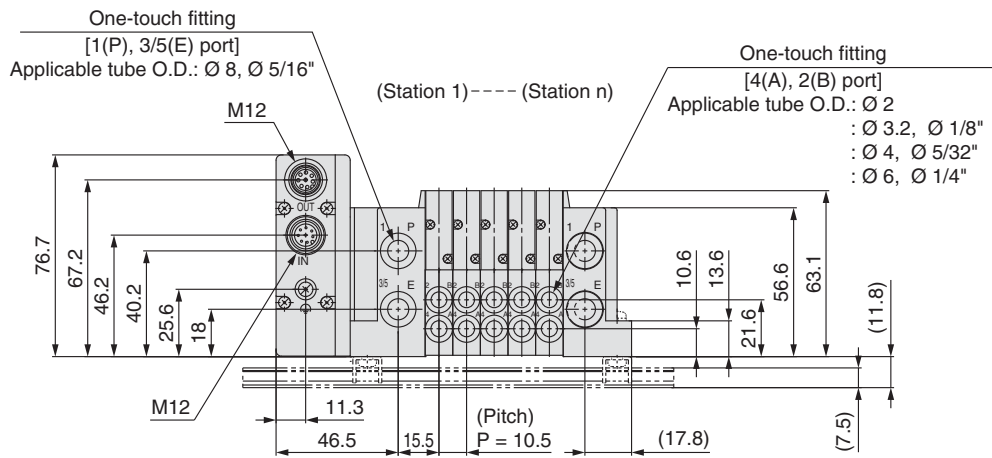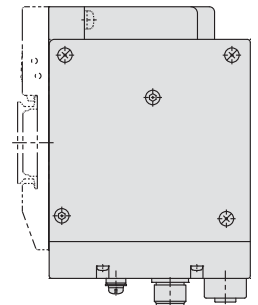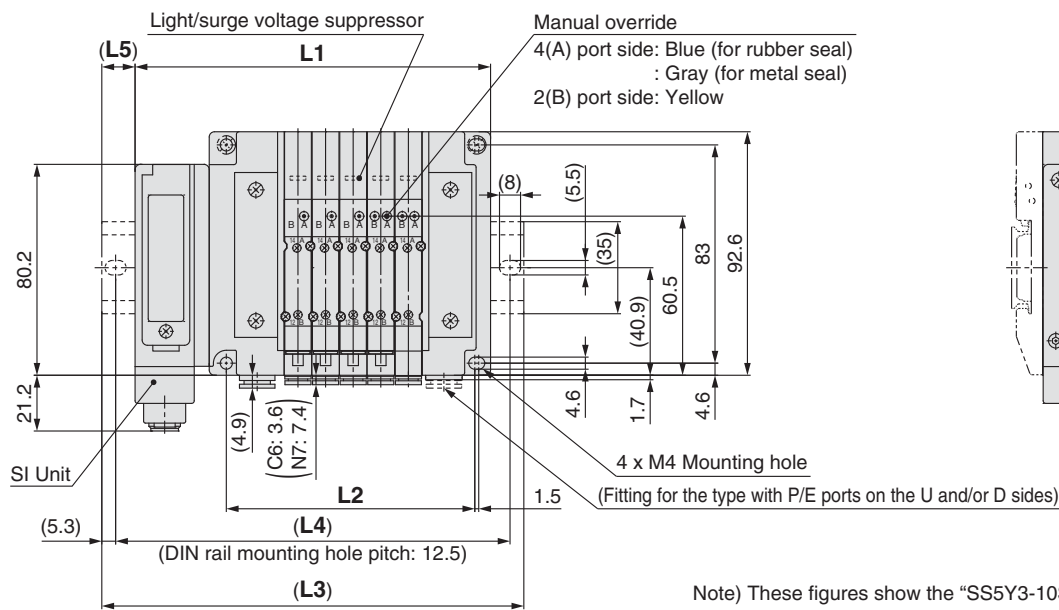**Dimensions****Type 10/Side Ported****Series SY3000****D side****U side**

Note) These figures show the "SS5Y3-10SA3N-05D-C6".

**L: Dimensions**

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	103.7	114.2	124.7	135.2	145.7	156.2	166.7	177.2	187.7	198.2	208.7	219.2	229.7	240.2	250.7
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275
L5	16	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5

L \ n	17	18	19	20	21	22	23	24
L1	261.2	271.7	282.2	292.7	303.2	313.7	324.2	334.7
L2	220.5	231	241.5	252	262.5	273	283.5	294
L3	285.5	298	310.5	323	335.5	348	348	360.5
L4	275	287.5	300	312.5	325	337.5	337.5	350
L5	12	13	14	15	16	17	12	13

For dimensions of Type 11/Bottom ported type and Type 12/Top ported type, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).





Series SY5000

Dimensions

Type 10/Side Ported

Series SY5000

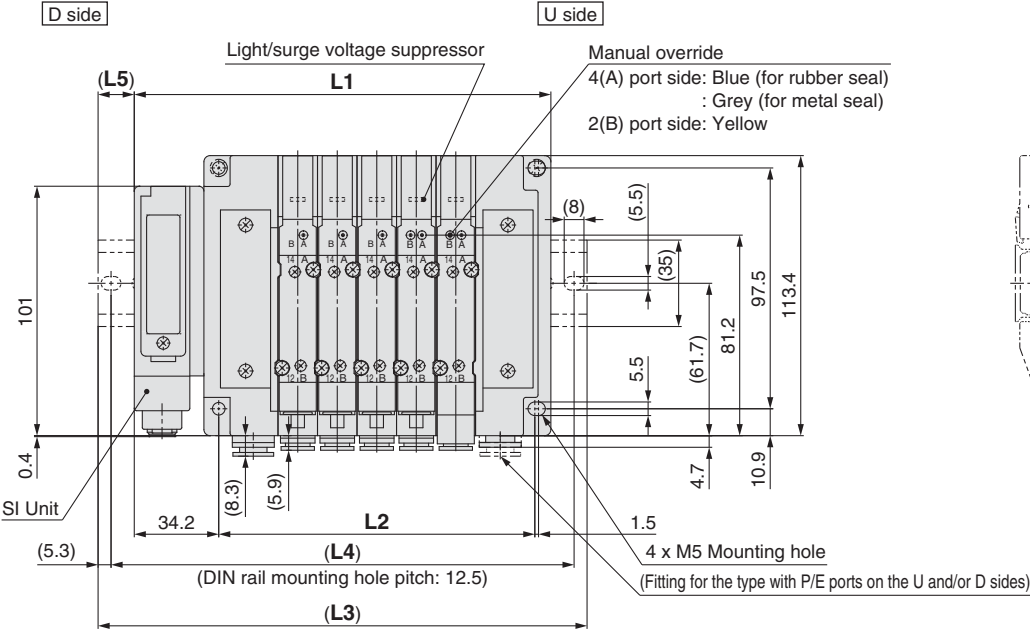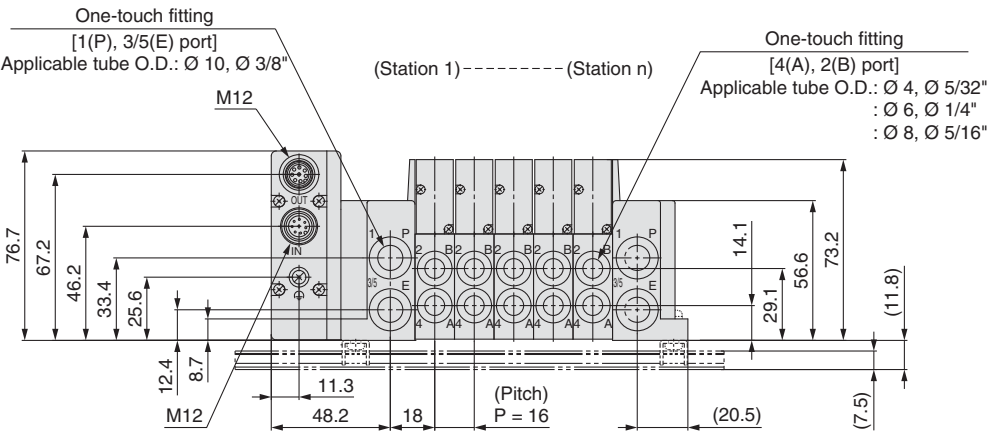

Note) These figures show the "SS5Y5-10SA3N-05D-C8".



L: Dimensions

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	120.7	136.7	152.7	168.7	184.7	200.7	216.7	232.7	248.7	264.7	280.7	296.7	312.7	328.7	344.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5
L5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14

L \ n	17	18	19	20	21	22	23	24
L1	360.7	376.7	392.7	408.7	424.7	440.7	456.7	472.7
L2	320	336	352	368	384	400	416	432
L3	385.5	410.5	423	435.5	448	473	485.5	498
L4	375	400	412.5	425	437.5	462.5	475	487.5
L5	12.5	17	15	13.5	11.5	16	14.5	12.5

For dimensions of Type 11/Bottom ported type and Type 12/Top ported type, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

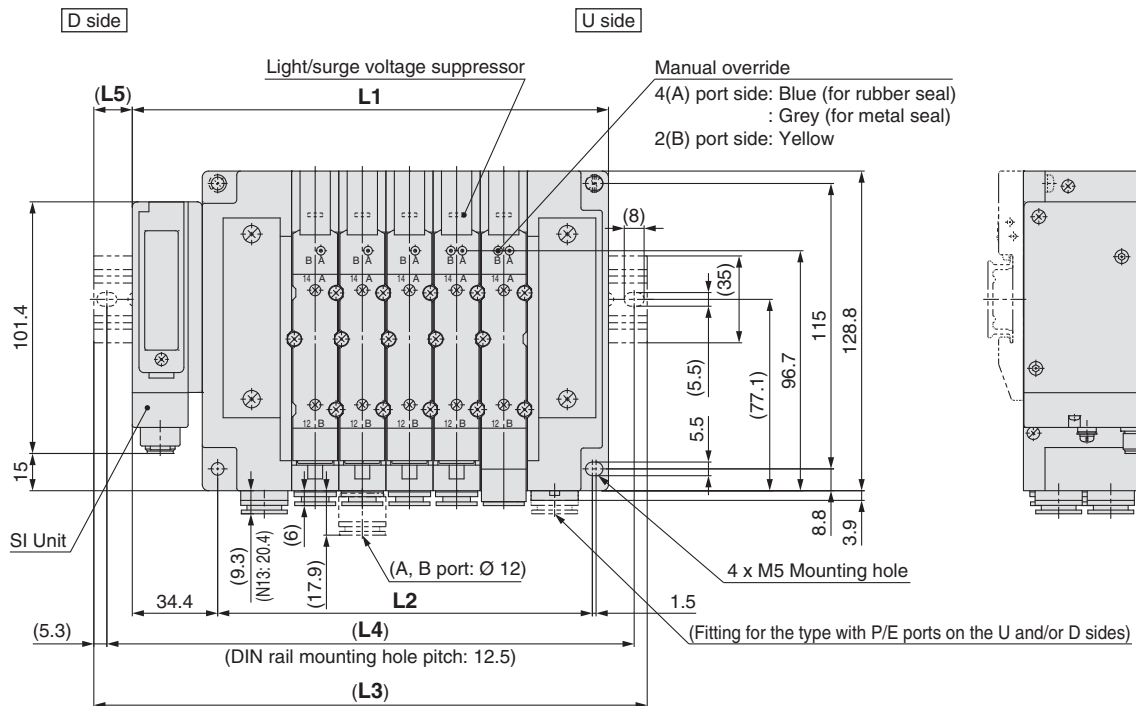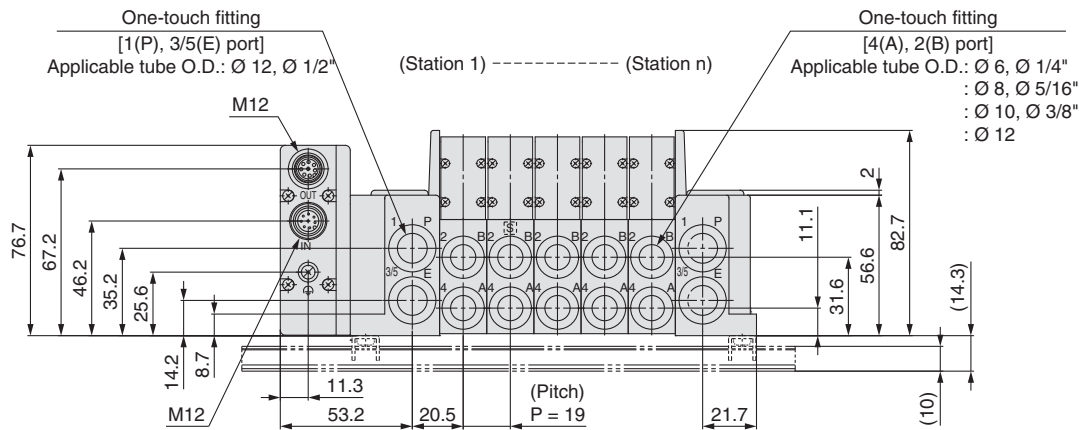**Dimensions****Type 10/Side Ported****Series SY7000**

Note) These figures show the "SS5Y7-10SA3N-05D-C10".

**L: Dimensions**

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	134.9	153.9	172.9	191.9	210.9	229.9	248.9	267.9	286.9	305.9	324.9	343.9	362.9	381.9	400.9
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5

L \ n	17	18	19	20	21	22	23	24
L1	419.9	438.9	457.9	476.9	495.9	514.9	533.9	552.9
L2	379	398	417	436	455	474	493	512
L3	448	473	485.5	510.5	523	548	560.5	585.5
L4	437.5	462.5	475	500	512.5	537.5	550	575
L5	14	17	14	17	13.5	16.5	13.5	16.5

For dimensions of Type 11/Bottom ported type and Type 12/Top ported type, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

# Gateway Decentralised System 2


## 5 Port Solenoid Valve



### Series VQC1000

For detailed specifications, Common Precautions and Specific Product Precautions, refer to the **WEB catalogue** or the VQC1000/2000 series catalogue (CAT. EUS11-101).

#### How to Order Manifold

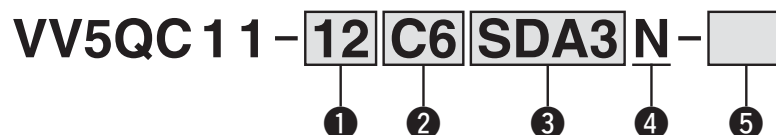

#### 1 Valve stations

Stations	Note
<b>01</b> 1 station	Double wiring
⋮	
<b>12</b> 12 stations	Mixed wiring, Specified layout <sup>Note</sup> (Available up to 24 solenoids)
<b>01</b> 1 station	
⋮	
<b>24</b> 24 stations	

Note) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.) In addition, select the option "K".

#### 2 A, B port size

##### Metric size

<b>C3</b>	Straight piping: Ø 3.2 One-touch fitting
<b>C4</b>	Straight piping: Ø 4 One-touch fitting
<b>C6</b>	Straight piping: Ø 6 One-touch fitting
<b>M5</b>	Straight piping: M5 thread
<b>CM</b> <sup>Note 1)</sup>	Straight piping: Mixed sizes and with port plug
<b>L3</b>	Top ported elbow: Ø 3.2 One-touch fitting
<b>L4</b>	Top ported elbow: Ø 4 One-touch fitting
<b>L6</b>	Top ported elbow: Ø 6 One-touch fitting
<b>L5</b>	Top ported elbow: M5 thread
<b>B3</b>	Bottom ported elbow: Ø 3.2 One-touch fitting
<b>B4</b>	Bottom ported elbow: Ø 4 One-touch fitting
<b>B6</b>	Bottom ported elbow: Ø 6 One-touch fitting
<b>B5</b>	Bottom ported elbow: M5 thread
<b>LM</b> <sup>Note 1)</sup>	Elbow piping: Mixed sizes and with port plug
<b>MM</b> <sup>Note 2)</sup>	Mixed size for different types of piping, option installed

##### Inch size

<b>N1</b>	Straight piping: Ø 1/8" One-touch fitting
<b>N3</b>	Straight piping: Ø 5/32" One-touch fitting
<b>N7</b>	Straight piping: Ø 1/4" One-touch fitting
<b>NM</b> <sup>Note 1)</sup>	Straight piping: Mixed sizes and with port plug
<b>LN1</b>	Top ported elbow: Ø 1/8" One-touch fitting
<b>LN3</b>	Top ported elbow: Ø 5/32" One-touch fitting
<b>LN7</b>	Top ported elbow: Ø 1/4" One-touch fitting
<b>BN1</b>	Bottom ported elbow: Ø 1/8" One-touch fitting
<b>BN3</b>	Bottom ported elbow: Ø 5/32" One-touch fitting
<b>BN7</b>	Bottom ported elbow: Ø 1/4" One-touch fitting
<b>LNM</b> <sup>Note 1)</sup>	Elbow piping: Mixed sizes and with port plug
<b>BNM</b> <sup>Note 2)</sup>	Mixed size for different types of piping, option installed

Note 1) Indicate the sizes on the manifold specification sheet.

Note 2) When a combination of straight and elbow piping is or when option such as dual flow fitting assembly is mounted, please mention the mounting conditions in the Manifold Specification.

#### 3 SI Unit (Number of outputs, Max. number of valve stations)

<b>SD0</b>	Without SI Unit
<b>SDA3</b>	32 outputs <sup>Note 1, 3)</sup> , 1 to 12 stations (24 stations <sup>Note 2)</sup> )

Note 1) Due to the internal wiring of the valve, the maximum number of outputs is 24 points. 16 outputs can be set by switching the built-in setting switch.

Note 2) ( ): Maximum number of stations for mixed single and double wiring.

Note 3) When using the SI Unit with 32 outputs, use the GW Unit compatible with the EX500 Gateway Decentralised System 2 (128 points).

#### 4 SI Unit (Output polarity)

<b>—</b>	(Without SI Unit)
<b>N</b>	Negative common

\* Ensure a match with the common specification of the valve to be used.

#### 5 Option

<b>—</b>	None
<b>B</b> <sup>Note 1)</sup>	With back pressure check valve (All stations)
<b>D</b>	With DIN bracket, DIN rail with standard length
<b>D0</b>	With DIN bracket, without DIN rail
<b>D□</b> <sup>Note 2)</sup>	With DIN bracket, DIN rail for □ stations
<b>K</b> <sup>Note 3)</sup>	Special wiring specification (Except double wiring)
<b>N</b>	With name plate
<b>R</b> <sup>Note 4)</sup>	External pilot
<b>S</b> <sup>Note 5)</sup>	Built-in silencer, Direct exhaust

\* When multiple symbols are specified, indicate them alphabetically. Example) -BRS

Note 1) When a back pressure check valve is used only for specified station, specify the back pressure check valve part number, and specify the station number to which the valve is mounted, on the manifold specification sheet.

Note 2) □: Specify a longer rail than the length of valve stations.  
Example) "-D08"

In this case, the valves will be mounted on the DIN rail for 8 stations, regardless of the number of manifold stations.

Note 3) When single wiring and double wiring are mixed, specify wiring type of each station on the manifold specification sheet.

Note 4) For external pilot option "-R", indicate the external pilot specification "R" for the applicable valves as well.

Note 5) Built-in silencer type does not satisfy IP67.

## How to Order Valves

VQC 1 **1** **0** **0** **N** - **5** **1**

A      B      C      D      E      F

**A** Type of actuation

1	2-position single	<b>A</b> Note)	4-position dual 3-port valve (N.C./N.C.)
2	2-position double	<b>B</b> Note)	4-position dual 3-port valve (N.O./N.O.)
3	3-position closed centre	<b>C</b> Note)	4-position dual 3-port valve (N.C./N.O.)
4	3-position exhaust centre		
5	3-position pressure centre		

Note) Only rubber seal type

**B** Seal type

0	Metal seal
1	Rubber seal

**C** Function

N	Negative common, Standard (0.4 W)
BN	Negative common, Quick response type (0.95 W)
KN Note 1)	Negative common, High pressure type (1.0 MPa, 0.95 W)
NR Note 2)	Negative common, External pilot
Note 1) 2) <b>KNR</b>	Negative common, High pressure type (1.0 MPa, 0.95 W), External pilot

Note 1) For "KN" or "KNR" high pressure type, select "0" metal seal.

Note 2) For "NR" or "KNR" external pilot, select "1" to "5". 4-position dual 3-port valve is unavailable.

 
 

 
**D** Coil voltage

5	24 V DC
---	---------

**E** Light/surge voltage suppressor


—	With light/surge voltage suppressor
---	-------------------------------------

**F** Manual override

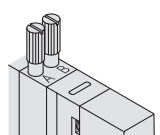—	Non-locking push (tool required)	
B	Locking push (tool required)	
C	Turn locking (manual)	
D	Slide locking (manual)	

## How to Order Manifold Assembly

## Example

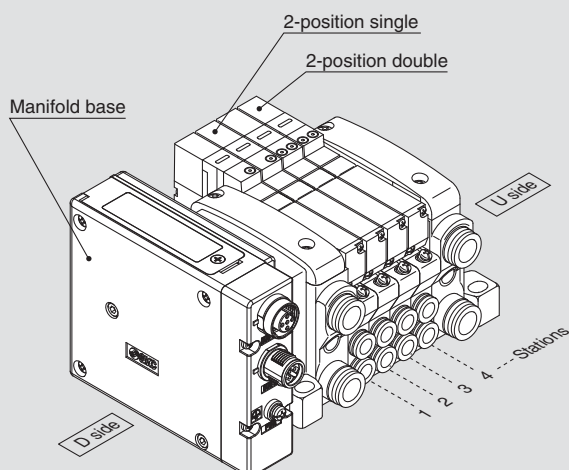


VV5QC11-04C6SDA3N .....1 set (Manifold base part number)  
 \* VQC1100N-51 .....2 sets (2-position single part number)  
 \* VQC1200N-51 .....2 sets (2-position double part number)  
 ↳ The asterisk denotes the symbol for assembly.  
 Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.



# Series VQC1000

## Dimensions

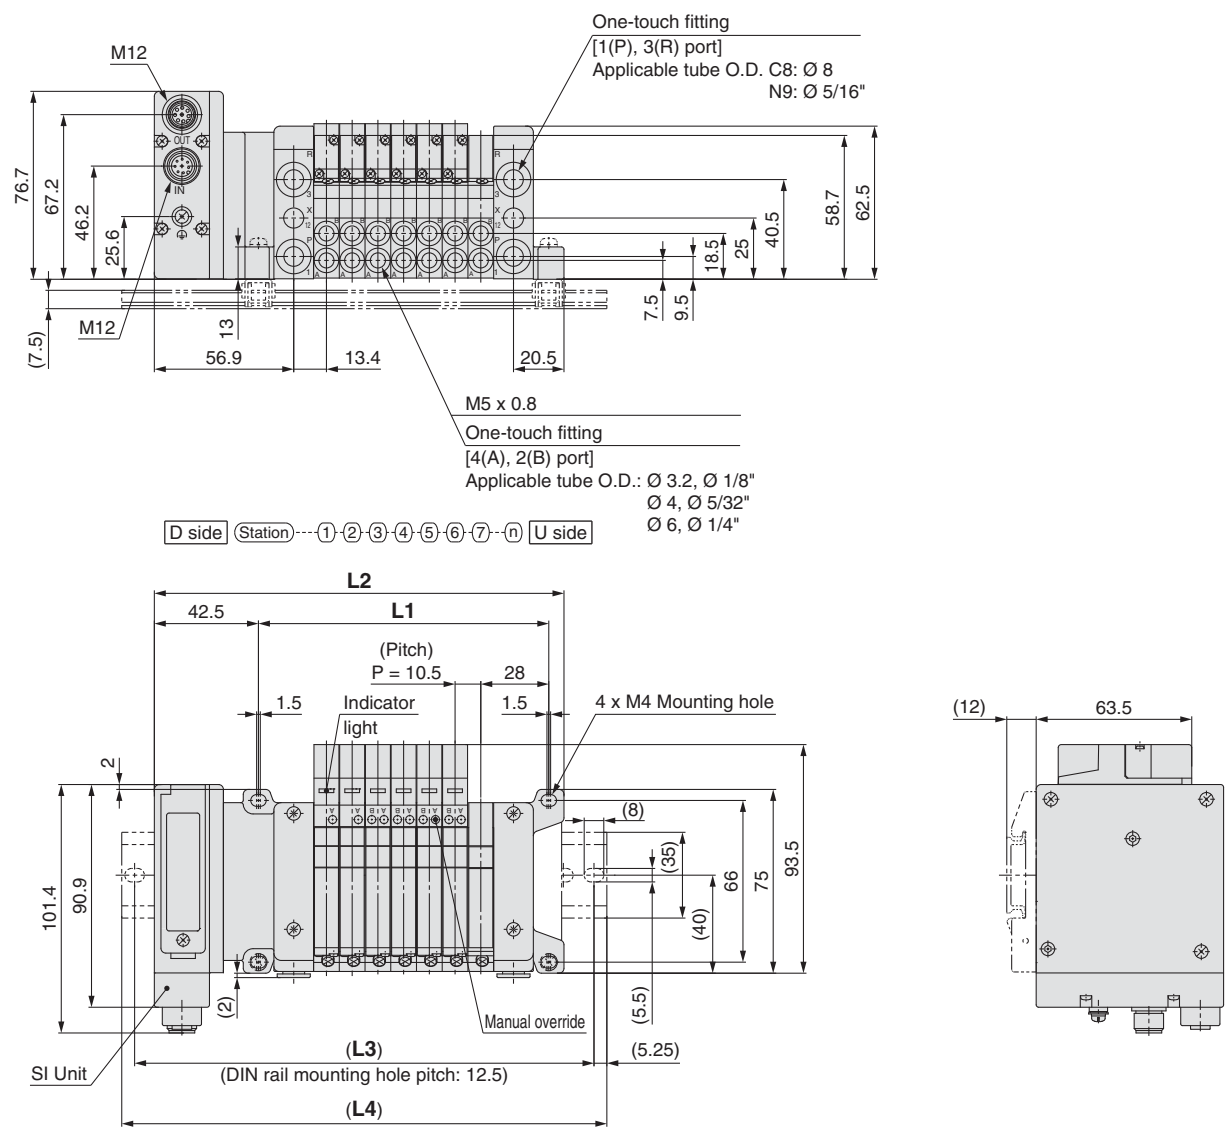

### L: Dimensions

n: Stations

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
L1	55.5	66	76.5	87	97.5	108	118.5	129	139.5	150	160.5	171	181.5	192	202.5
L2	104.2	114.7	125.2	135.7	146.2	156.7	167.2	177.7	188.2	198.7	209.2	219.7	230.2	240.7	251.2
L3	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275
L4	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5

L \ n	16	17	18	19	20	21	22	23	24
L1	213	223.5	234	244.5	255	265.5	276	286.5	297
L2	261.7	272.2	282.7	293.2	303.7	314.2	324.7	335.2	345.7
L3	287.5	300	312.5	325	325	337.5	350	362.5	375
L4	298	310.5	323	335.5	335.5	348	360.5	373	385.5

# Gateway Decentralised System 2


## 5 Port Solenoid Valve

### Series VQC2000



For detailed specifications, Common Precautions and Specific Product Precautions, refer to the **WEB catalogue** or the VQC1000/2000 series catalogue (CAT. EUS11-101).

#### How to Order Manifold

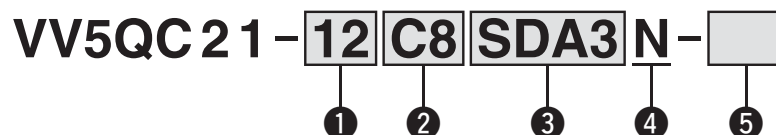

#### 1 Valve stations

	Stations	Note
01	1 station	Double wiring
12	12 stations	
01	1 station	Mixed wiring, Specified layout <sup>Note)</sup> (Available up to 24 solenoids)
24	24 stations	

Note) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.) In addition, select the option "K".

#### 2 A, B port size

##### Metric size

C4	Straight piping: Ø 4 One-touch fitting
C6	Straight piping: Ø 6 One-touch fitting
C8	Straight piping: Ø 8 One-touch fitting
CM <sup>Note 1)</sup>	Straight piping: Mixed sizes and with port plug
L4	Top ported elbow: Ø 4 One-touch fitting
L6	Top ported elbow: Ø 6 One-touch fitting
L8	Top ported elbow: Ø 8 One-touch fitting
B4	Bottom ported elbow: Ø 4 One-touch fitting
B6	Bottom ported elbow: Ø 6 One-touch fitting
B8	Bottom ported elbow: Ø 8 One-touch fitting
LM <sup>Note 1)</sup>	Elbow piping: Mixed sizes and with port plug
MM <sup>Note 2)</sup>	Mixed size for different types of piping, option installed

##### Inch size

N1	Straight piping: Ø 1/8" One-touch fitting
N3	Straight piping: Ø 5/32" One-touch fitting
N7	Straight piping: Ø 1/4" One-touch fitting
NM <sup>Note 1)</sup>	Straight piping: Mixed sizes and with port plug
LN1	Top ported elbow: Ø 1/8" One-touch fitting
LN3	Top ported elbow: Ø 5/32" One-touch fitting
LN7	Top ported elbow: Ø 1/4" One-touch fitting
BN1	Bottom ported elbow: Ø 1/8" One-touch fitting
BN3	Bottom ported elbow: Ø 5/32" One-touch fitting
BN7	Bottom ported elbow: Ø 1/4" One-touch fitting
LNM <sup>Note 1)</sup>	Elbow piping: Mixed sizes and with port plug
BNM <sup>Note 2)</sup>	Mixed size for different types of piping, option installed

Note 1) Indicate the sizes on the manifold specification sheet.

Note 2) When a combination of straight and elbow piping is or when option such as dual flow fitting assembly is mounted, please mention the mounting conditions in the Manifold Specification.

#### 3 SI Unit (Number of outputs, Max. number of valve stations)

SD0	Without SI Unit
SDA3	32 outputs <sup>Note 1, 3)</sup> , 1 to 12 stations (24 stations <sup>Note 2)</sup> )

Note 1) Due to the internal wiring of the valve, the maximum number of outputs is 24 points. 16 outputs can be set by switching the built-in setting switch.

Note 2) ( ): Maximum number of stations for mixed single and double wiring.

Note 3) When using the SI Unit with 32 outputs, use the GW Unit compatible with the EX500 Gateway Decentralised System 2 (128 points).

#### 4 SI Unit (Output polarity)

—	(Without SI Unit)
N	Negative common

\* Ensure a match with the common specification of the valve to be used.

#### 5 Option

—	None
B <sup>Note 1)</sup>	With back pressure check valve (All stations)
D	With DIN bracket, DIN rail with standard length
D0	With DIN bracket, without DIN rail
D□ <sup>Note 2)</sup>	With DIN bracket, DIN rail for □ stations
K <sup>Note 3)</sup>	Special wiring specification (Except double wiring)
N	With name plate
R <sup>Note 4)</sup>	External pilot
S <sup>Note 5)</sup>	Built-in silencer, Direct exhaust
T <sup>Note 6)</sup>	P and R ports included on both sides of the U side

\* When multiple symbols are specified, indicate them alphabetically. Example) -BRS

Note 1) When a back pressure check valve is used only for specified station, specify the back pressure check valve part number, and specify the station number to which the valve is mounted, on the manifold specification sheet.

Note 2) □: Specify a longer rail than the length of valve stations.

Example) "-D08"

In this case, the valves will be mounted on the DIN rail for 8 stations, regardless of the number of manifold stations.

Note 3) When single wiring and double wiring are mixed, specify wiring type of each station on the manifold specification sheet.

Note 4) For external pilot option "-R", indicate the external pilot specification "R" for the applicable valves as well.

Note 5) Built-in silencer type does not satisfy IP67.

Note 6) P and R ports are included on both sides of U side (cylinder port and coil side) with Ø 12 One-touch fittings.

## How to Order Valves

VQC 2 **1** 0 **0** **N** - 5   **1**

A      B      C      D      E      F

### A Type of actuation

1	2-position single	A Note)	4-position dual 3-port valve (N.C./N.C.)
2	2-position double	B Note)	4-position dual 3-port valve (N.O./N.O.)
3	3-position closed centre	C Note)	4-position dual 3-port valve (N.C./N.O.)
4	3-position exhaust centre		
5	3-position pressure centre		

Note) Only rubber seal type

### B Seal type

0	Metal seal
1	Rubber seal

### C Function

N	Negative common, Standard (0.4 W)
BN	Negative common, Quick response type (0.95 W)
KN Note 1)	Negative common, High pressure type (1.0 MPa, 0.95 W)
NR Note 2)	Negative common, External pilot
Note 1) 2) <b>KNR</b>	Negative common, High pressure type (1.0 MPa, 0.95 W), External pilot

Note 1) For "KN" or "KNR" high pressure type, select "0" metal seal.

Note 2) For "NR" or "KNR" external pilot, select "1" to "5". 4-position dual 3-port valve is unavailable.

 
 
 

### D Coil voltage

5	24 V DC
---	---------

### E Light/surge voltage suppressor


—	With light/surge voltage suppressor
---	-------------------------------------

### F Manual override

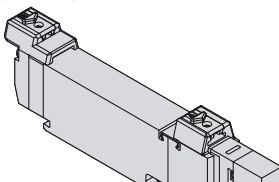—	Non-locking push (tool required)	
B	Locking push (tool required)	
C	Turn locking (manual)	
D	Slide locking (manual)	

## How to Order Manifold Assembly

### Example

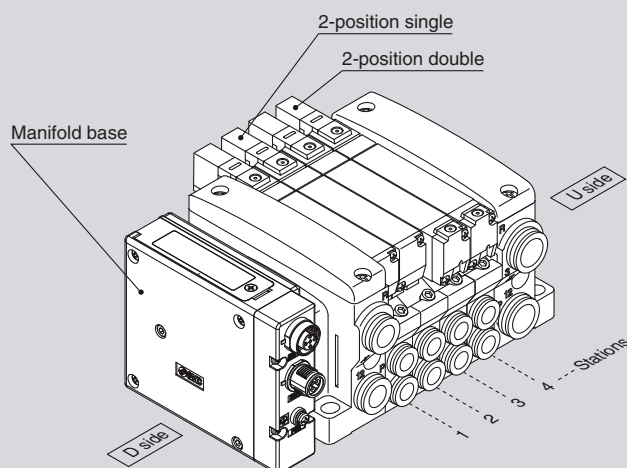


VV5QC21-04C6SDA3N .....1 set (Manifold base part number)  
 \* VQC2100N-51 .....2 sets (2-position single part number)  
 \* VQC2200N-51 .....2 sets (2-position double part number)

→ The asterisk denotes the symbol for assembly.  
 Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.

## Dimensions

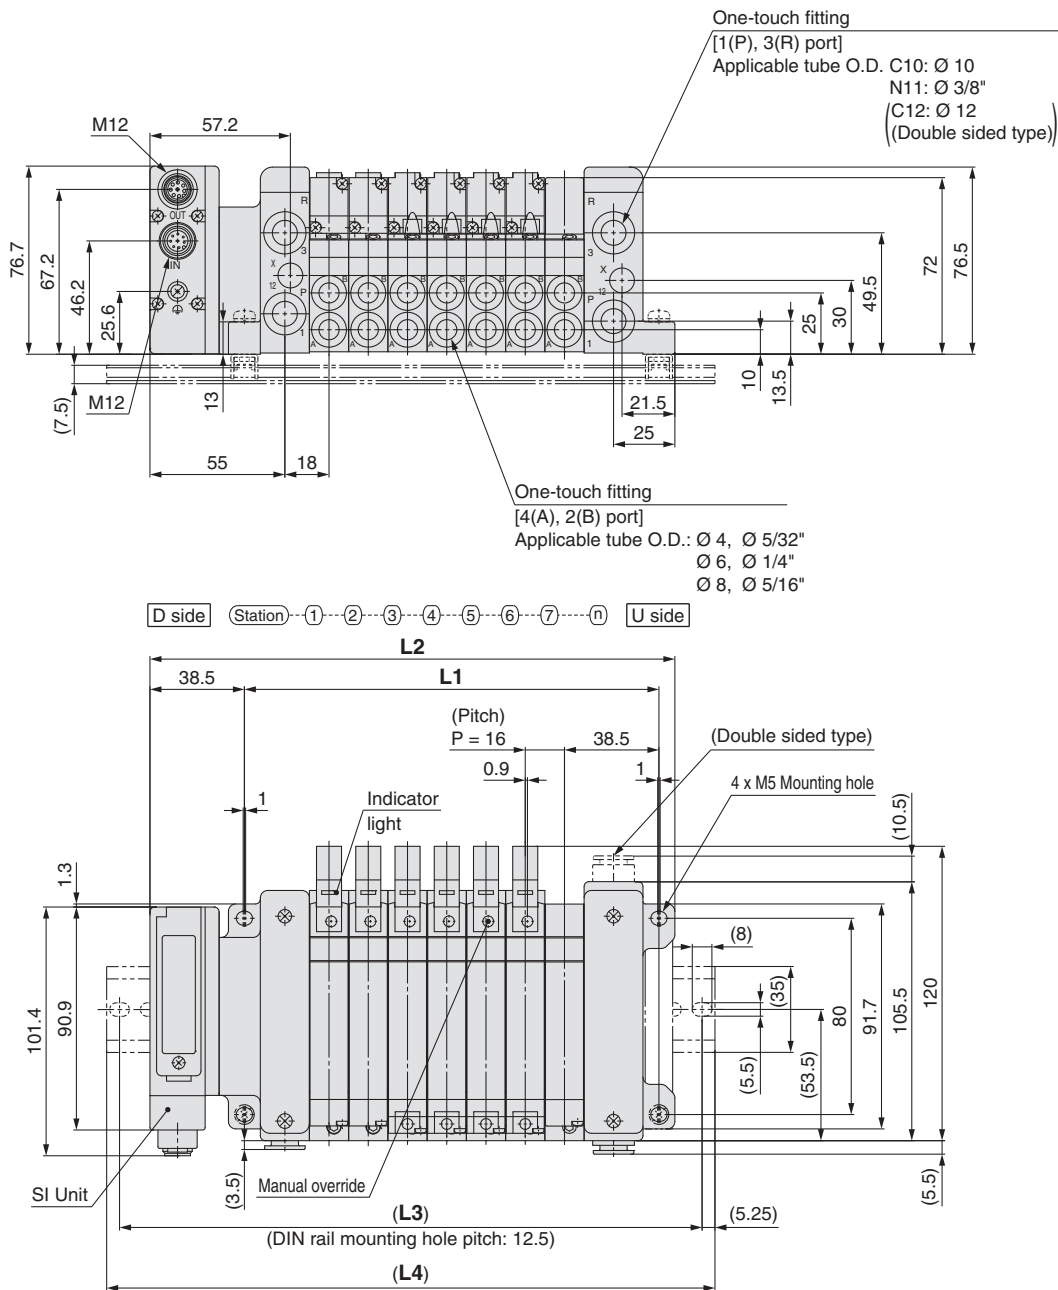

### L: Dimensions

n: Stations

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
L1	73	89	105	121	137	153	169	185	201	217	233	249	265	281	297
L2	118	134	150	166	182	198	214	230	246	262	278	294	310	326	342
L3	137.5	162.5	175	187.5	212.5	225	237.5	250	275	287.5	300	325	337.5	350	362.5
L4	148	173	185.5	198	223	235.5	248	260.5	285.5	298	310.5	335.5	348	360.5	373

L \ n	16	17	18	19	20	21	22	23	24
L1	313	329	345	361	377	393	409	425	441
L2	358	374	390	406	422	438	454	470	486
L3	387.5	400	412.5	437.5	450	462.5	475	500	512.5
L4	398	410.5	423	448	460.5	473	485.5	510.5	523

# Gateway Decentralised System 2


## 5 Port Solenoid Valve

### Series VQC4000



For detailed specifications, Common Precautions and Specific Product Precautions, refer to the **WEB catalogue** or the VQC4000/5000 series catalogue (CAT. EUS11-108).

#### How to Order Manifold

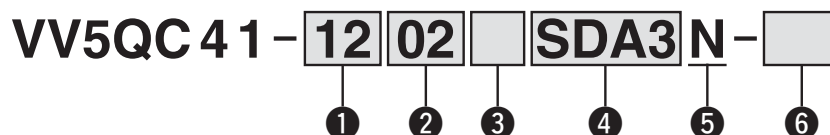

#### 1 Valve stations

	Stations	Note
01	1 station	Double wiring
⋮	⋮	
12	12 stations	Mixed wiring, Specified layout <sup>Note)</sup> (Available up to 24 solenoids)
01	1 station	
⋮	⋮	
16	16 stations	

Note) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.) In addition, select the option "K".

#### 4 SI Unit (Number of outputs, Max. number of valve stations)

SD0	Without SI Unit
SDA3	32 outputs <sup>Note 1, 3)</sup> , 1 to 12 stations (16 stations <sup>Note 2)</sup> )

Note 1) Due to the internal wiring of the valve, the maximum number of outputs is 24 points.

Note 2) ( ): Maximum number of stations for mixed single and double wiring.

Note 3) When using the SI Unit with 32 outputs, use the GW Unit compatible with the EX500 Gateway Decentralised System 2 (128 points).

#### 2 Cylinder port size

C6	With Ø 6 One-touch fitting
C8	With Ø 8 One-touch fitting
C10	With Ø 10 One-touch fitting
C12	With Ø 12 One-touch fitting
N7	Ø 1/4" One-touch fitting
N9	Ø 5/16" One-touch fitting
N11	Ø 3/8" One-touch fitting
02	1/4 <sup>Note)</sup>
03	3/8 <sup>Note)</sup>
B	Bottom ported 1/4 <sup>Note)</sup>
CM	Mixed sizes

Note) Compatible with Rc, G, NPT/NPTF.  
Part number displayed is as shown below.

#### 5 SI Unit (Output polarity)

—	(Without SI Unit)
N	Negative common

#### 6 Option

—	None
K <sup>Note)</sup>	Special wiring specification (Except double wiring)

Note) When single wiring and double wiring are mixed, specify wiring type of each station on the manifold specification sheet.

#### 3 Thread type

—	Rc
F	G
N	NPT
T	NPTF



## How to Order Valves

VQC 4 **1** 0 0 **5** **1**

A      B      C      D      E      F

**A** Type of actuation

1	2-position single	4	3-position exhaust centre
2	2-position double	5	3-position pressure centre
3	3-position closed centre	6 (Note)	3-position double check

Note) For double check type, refer to the **WEB catalogue** or the VQ4000/5000 series catalogue (CAT. EUS11-104).

**B** Seal type

0	Metal seal
1	Rubber seal

**C** Function

— (Note 1)	Standard (0.95 W)
Y	Low wattage type (0.4 W)
R (Note 2)	External pilot

\* When multiple symbols are specified, indicate them alphabetically.

Note 1) When the power is energised continuously, refer to "Specific Product Precautions 1" in the **WEB catalogue** or the VQC4000/5000 series catalogue (CAT. EUS11-108).


Note 2) For details about the external pilot type, refer to the **WEB catalogue** or the VQ4000/5000 series catalogue (CAT. EUS11-104). In addition, an external pilot type cannot be combined with the double check spacer.

**D** Coil voltage

5	24 V DC
---	---------


**E** Light/surge voltage suppressor

—	With
E	Without light, with surge voltage suppressor

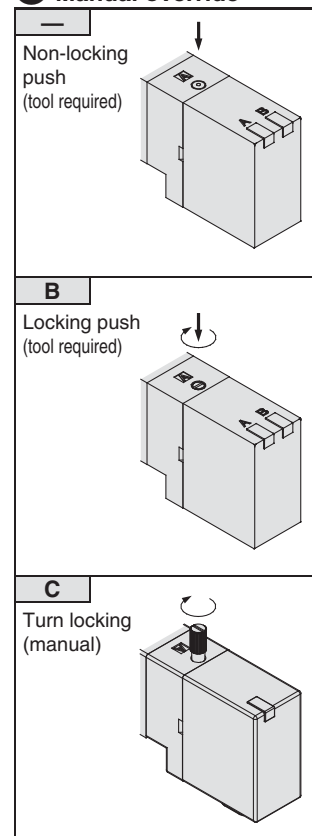**F** Manual override

## How to Order Manifold Assembly


## Example

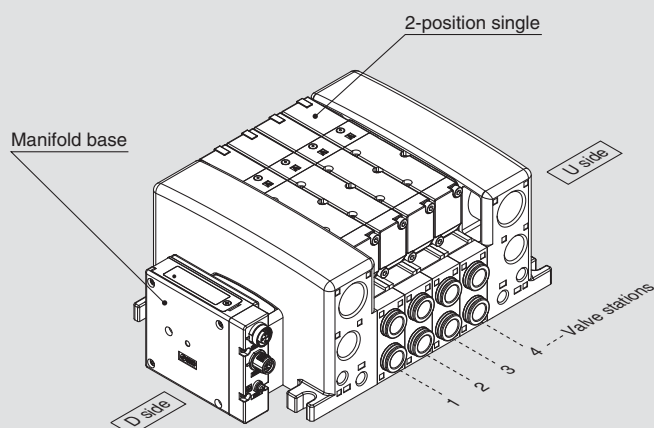

VV5QC41-04C8SDA3N.....1 set (Manifold base part number)  
 \* VQC4100-51.....4 sets (2-position single part number)  
 ↳ The asterisk denotes the symbol for assembly.  
 Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.

**Dimensions**

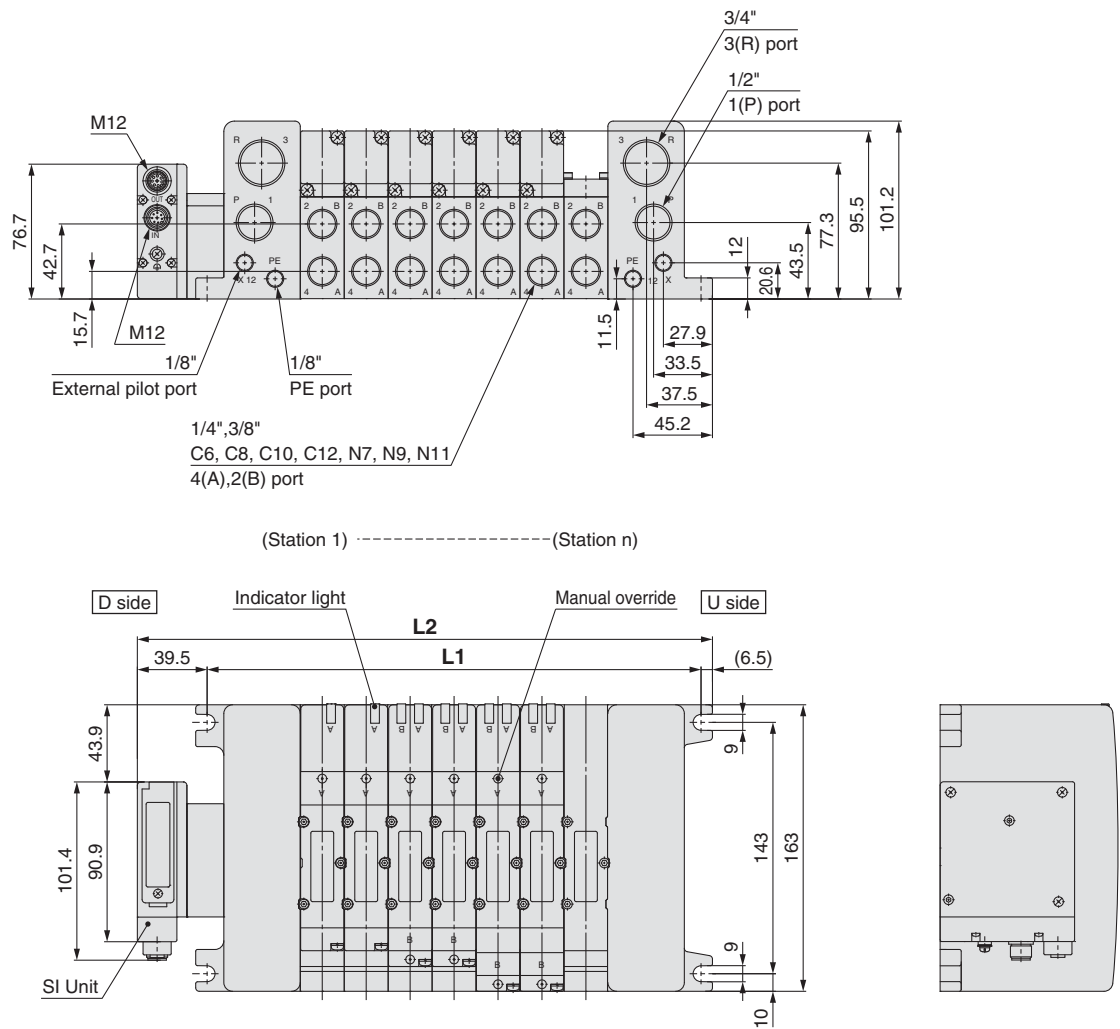

Formula: L1 = 25n + 106, L2 = 25n + 152 n: Stations (Maximum 16 stations)

<div>L \ n</div>	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	177	202	227	252	277	302	327	352	377	402	427	452	477	502	527	552

# Gateway Decentralised System 2

## 5 Port Solenoid Valve

### Series VQC5000



For detailed specifications, Common Precautions and Specific Product Precautions, refer to the **WEB catalogue** or the VQC4000/5000 series catalogue (CAT. EUS11-108).

#### How to Order Manifold

VV5QC51-1203SDA3N-

1 2 3 4 5 6

#### 1 Valve stations

	Stations	Note
01	1 station	Double wiring
12	12 stations	
01	1 station	Mixed wiring, Specified layout <sup>Note)</sup> (Available up to 24 solenoids)
16	16 stations	

Note) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.) In addition, select the option "K".

#### 2 Cylinder port size

03	3/8 <sup>Note)</sup>
04	1/2 <sup>Note)</sup>
B	Bottom ported 1/4 <sup>Note)</sup>
CM	Mixed sizes

Note) Compatible with Rc, G, NPT/NPTF.  
Part number displayed is as shown below.

#### 3 Thread type

—	Rc
F	G
N	NPT
T	NPTF

#### 4 SI Unit (Number of outputs, Max. number of valve stations)

SD0	Without SI Unit
SDA3	32 outputs <sup>Note 1, 3)</sup> , 1 to 12 stations (16 stations <sup>Note 2)</sup> )

Note 1) Due to the internal wiring of the valve, the maximum number of outputs is 24 points.

Note 2) ( ): Maximum number of stations for mixed single and double wiring.

Note 3) When using the SI Unit with 32 outputs, use the GW Unit compatible with the EX500 Gateway Decentralised System 2 (128 points).

#### 5 SI Unit (Output polarity)

—	(Without SI Unit)
N	Negative common

#### 6 Option

—	None
K <sup>Note)</sup>	Special wiring specification (Except double wiring).

Note) When single wiring and double wiring are mixed, specify wiring type of each station on the manifold specification sheet.

## How to Order Valves

VQC5 **1** **0** **0** **□** - **5** **□** **□** **1**

A      B      C      D      E      F

### A Type of actuation

1	2-position single	4	3-position exhaust centre
2	2-position double	5	3-position pressure centre
3	3-position closed centre	6 (Note)	3-position double check

Note) For double check type, refer to the **WEB catalogue** or the VQ4000/5000 series catalogue (CAT. EUS11-104).

### B Seal type

0	Metal seal
1	Rubber seal

### C Function

— (Note 1)	Standard (0.95 W)
Y	Low wattage type (0.4 W)
R (Note 2)	External pilot

\* When multiple symbols are specified, indicate them alphabetically.

Note 1) When the power is energised continuously, refer to "Specific Product Precautions 1" in the **WEB catalogue** or the VQC4000/5000 series catalogue (CAT. EUS11-108).

Note 2) For details about the external pilot type, refer to the **WEB catalogue** or the VQ4000/5000 series catalogue (CAT. EUS11-104). In addition, an external pilot type cannot be combined with the double check spacer.




### D Coil voltage

5	24 V DC
---	---------

### E Light/surge voltage suppressor


—	With
E	Without light, with surge voltage suppressor

### F Manual override

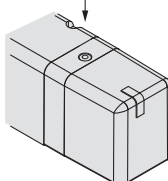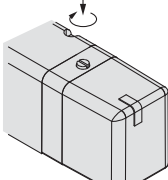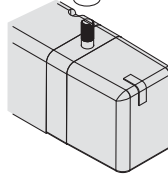—	Non-locking push (tool required)	
B	Push-turn locking (tool required)	
C	Turn locking (manual)	

## How to Order Manifold Assembly


### Example

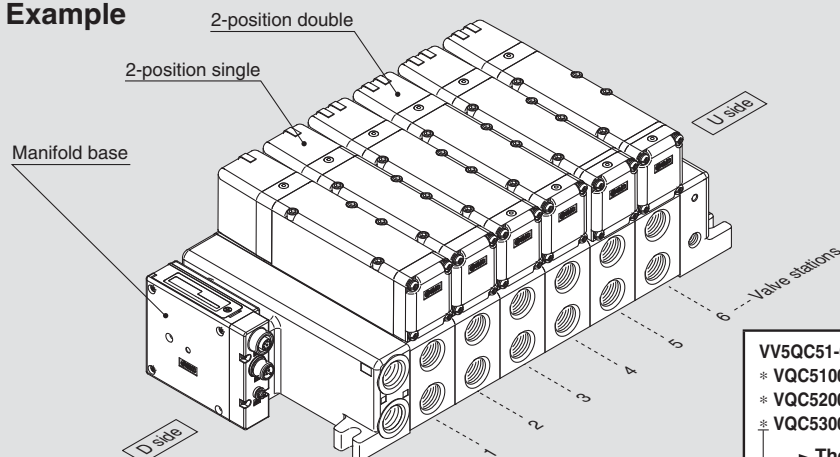

VV5QC51-0603SDA3N..... 1 set  
 \* VQC5100-51..... 2 sets (2-position single part number)  
 \* VQC5200-51..... 2 sets (2-position double part number)  
 \* VQC5300-51..... 3 sets (3-position closed centre part number)  
 → The asterisk denotes the symbol for assembly.  
 Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.

## Dimensions

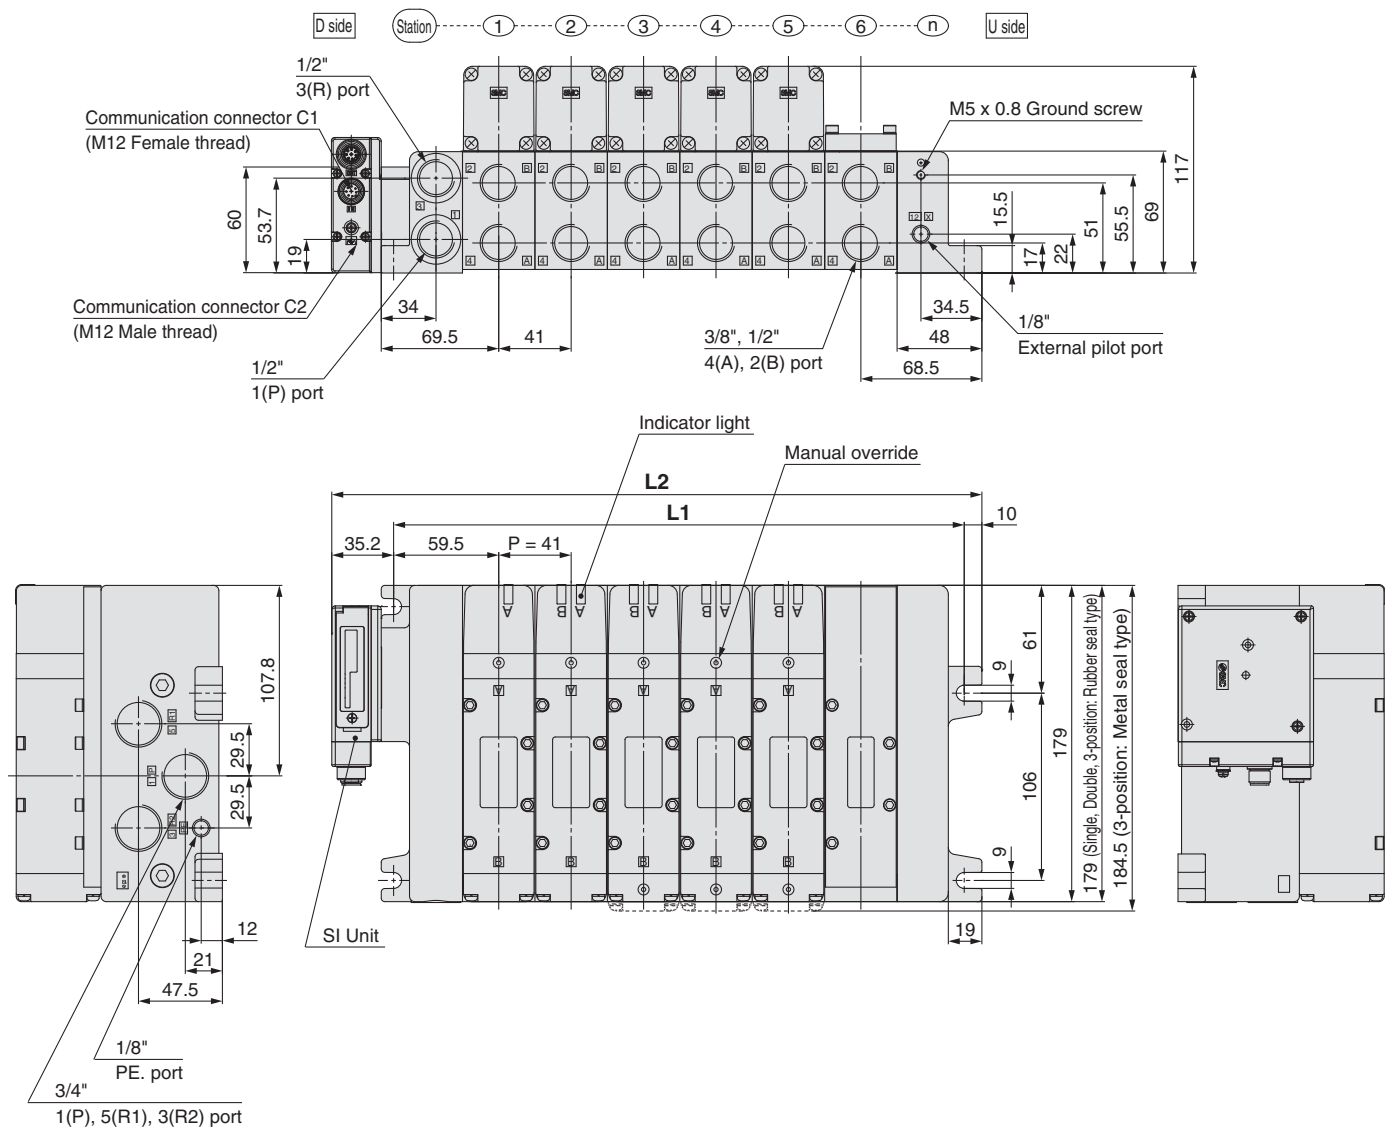

Formula:  $L1 = 41n + 77$ ,  $L2 = 41n + 122n$ : Stations (Maximum 12 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12
L1	118	159	200	241	282	323	364	405	446	487	528	569
L2	163.2	204.2	245.2	286.2	327.2	368.2	409.2	450.2	491.2	532.2	573.2	614.2



# Gateway Decentralised System 2

## 5 Port Solenoid Valve

### Series S0700



For detailed specifications, Common Precautions and Specific Product Precautions, refer to the **WEB catalogue** or the S0700 series catalogue (CAT. EUS11-88).

#### How to Order Manifold

**SS0750-08C4C8SDA3N-B**

1
2
3
4
5
6

#### 1 Valve stations

	Stations	Note
01	1 station	Double wiring
⋮	⋮	
16	16 stations	Mixed wiring, Specified layout <sup>Note)</sup> (Available up to 32 solenoids)
01	1 station	
⋮	⋮	
24	24 stations	

Note) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.) In addition, select the option "K".

#### 4 SI Unit (Number of outputs, Max. number of valve stations)

<b>SD0</b>	Without SI Unit
<b>SDA3</b>	32 outputs <sup>Note 1, 3)</sup> , 1 to 16 stations (24 stations <sup>Note 2)</sup> )

Note 1) 16 outputs can be set by switching the built-in setting switch.

Note 2) ( ): Maximum number of stations for mixed single and double wiring.

Note 3) When using the SI Unit with 32 outputs, use the GW Unit compatible with the EX500 Gateway Decentralised System 2 (128 points).

#### 2 A, B port size

##### Metric size

<b>C2</b>	Ø 2 One-touch fitting
<b>C3</b>	Ø 3.2 One-touch fitting
<b>C4</b>	Ø 4 One-touch fitting
<b>CM</b> <sup>Note)</sup>	Mixed sizes and with port plug

##### Inch size

<b>N1</b>	Ø 1/8" One-touch fitting
<b>N3</b>	Ø 5/32" One-touch fitting
<b>NM</b> <sup>Note)</sup>	Mixed sizes and with port plug

Note) Indicate the sizes on the manifold specification sheet.

#### 3 P, R port size

##### Metric size

—	Ø 8 One-touch fitting <sup>Note)</sup>
<b>C6</b>	Ø 6 One-touch fitting
<b>C8</b>	Ø 8 One-touch fitting

##### Inch size

<b>N7</b>	Ø 1/4" One-touch fitting
<b>N9</b>	Ø 5/16" One-touch fitting

Note) When A and B ports are inch size, the One-touch fitting will be changed to Ø 5/16".

#### 5 SI Unit (Output polarity)

—	(Without SI Unit)
<b>N</b>	Negative common

#### 6 Option

—	None
<b>B</b> <sup>Note 1)</sup>	With back pressure check valve (All stations)
<b>D</b>	With DIN bracket, DIN rail with standard length
<b>D0</b>	With DIN bracket, without DIN rail
<b>D□</b> <sup>Note 2)</sup>	With DIN bracket, DIN rail for □ stations
<b>K</b> <sup>Note 3)</sup>	Special wiring specification (Except double wiring)
<b>N</b>	With name plate
<b>R</b> <sup>Note 4)</sup>	External pilot
<b>S</b>	Built-in silencer

\* When multiple symbols are specified, indicate them alphabetically. Example) "-BKN"

Note 1) When a back pressure check valve is used only for specified station, specify the back pressure check valve part number, and specify the station number to which the valve is mounted, on the manifold specification sheet.

Note 2) □: Specify a longer rail than the length of valve stations.  
Example) "-D08"

In this case, the valves will be mounted on the DIN rail for 8 stations, regardless of the number of manifold stations.

Note 3) When single wiring and double wiring are mixed, specify wiring type of each station on the manifold specification sheet.

Note 4) For external pilot option "-R", indicate the external pilot specification "R" for the applicable valves as well.

## How to Order Valves

S07 **1** 0 **5** - **5**

A                  B                  C

### A Type of actuation

<b>1</b>	2-position single
<b>2</b>	2-position double
<b>A</b> (Note)	4-position dual 3-port (N.C. + N.C.) [Exhaust centre]
<b>B</b> (Note)	4-position dual 3-port (N.O. + N.O.) [Pressure centre]
<b>C</b> (Note)	4-position dual 3-port (N.C. + N.O.)

(Note) For 4-position dual 3-port, select “—” internal pilot.

### B Function

—	Internal pilot
<b>R</b> (Note)	External pilot


(Note) For external pilot, select “1” 2-position single or “2” 2-position double.

### C Rated voltage

<b>5</b>	24 V DC
----------	---------

## How to Order Manifold Assembly

### Example

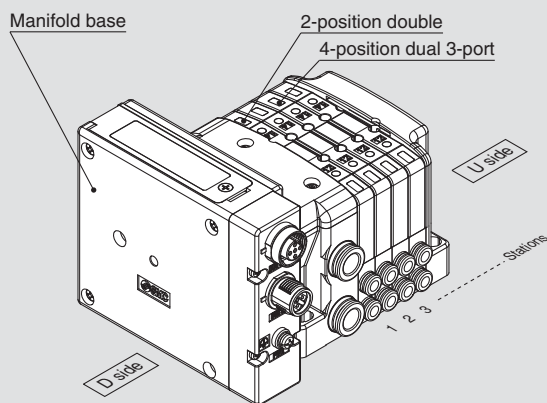


SS0750-04C4SDA3...1 set (Manifold base part number)  
 \* S0720-5.....2 sets (2-position double part number)  
 \* S07A0-5.....2 sets (4-position dual 3-port number)  
 → The asterisk denotes the symbol for assembly.  
 Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.

Series S0700

Dimensions

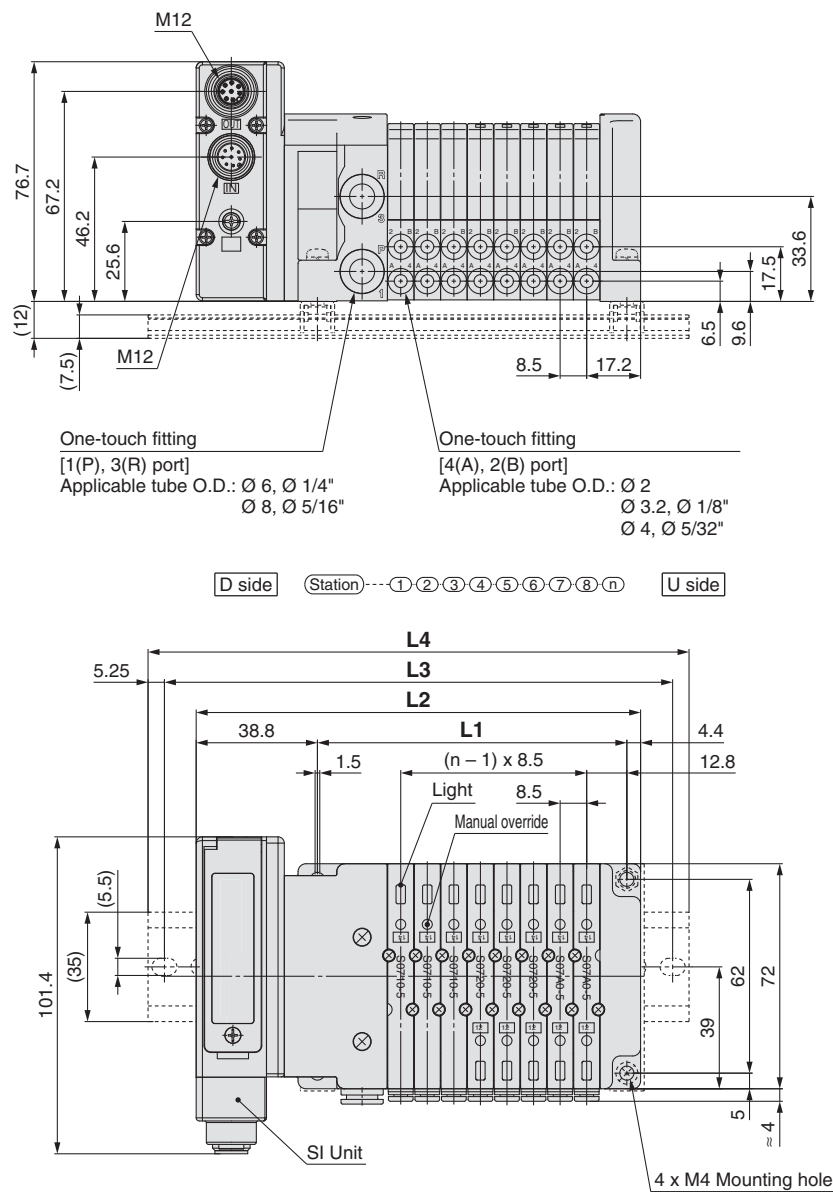

Dimensions

Formula:  $L1 = 8.5n + 31$ ,  $L2 = 8.5n + 74$  n: Stations (Maximum 24 stations)

$L \backslash n$	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	39.5	48	56.5	65	73.5	82	90.5	99	107.5	116	124.5	133	141.5	150	158.5	167
L2	82.5	91	99.5	108	116.5	125	133.5	142	150.5	159	167.5	176	184.5	193	201.5	210
L3	112.5	112.5	125	137.5	137.5	150	162.5	162.5	175	187.5	187.5	200	212.5	212.5	225	237.5
L4	123	123	135.5	148	148	160.5	173	173	185.5	198	198	210.5	223	223	235.5	248

$L \backslash n$	17	18	19	20	21	22	23	24
L1	175.5	184	192.5	201	209.5	218	226.5	235
L2	218.5	227	235.5	244	252.5	261	269.5	278
L3	250	250	262.5	275	275	287.5	300	300
L4	260.5	260.5	273	285.5	285.5	298	310.5	310.5

# Gateway Decentralised System 2

## 5 Port Solenoid Valve

### Series SV1000/2000/3000



For detailed specifications, Common Precautions and Specific Product Precautions, refer to the **WEB catalogue** or the SV series catalogue (CAT. EUS11-81).

#### How to Order Manifold

SS5V **1** - W 10 S 1 **A3N** D - **05** **U** - - -

1
2
3
4
5
6
7

#### 1 Series

1	SV1000
2	SV2000
3	SV3000

#### 2 SI Unit (Number of outputs, Output polarity, Max. number of valve stations)

0	Without SI Unit
A3N	32 outputs <sup>Note 1, 3)</sup> , Negative common, 1 to 16 stations (20 stations <sup>Note 2)</sup> )

Note 1) 16 outputs can be set by switching the built-in setting switch.

Note 2) ( ): Maximum number of stations for mixed single and double wiring.

Note 3) When using the SI Unit with 32 outputs, use the GW Unit compatible with the EX500 Gateway Decentralised System 2 (128 points).

#### 3 Valve stations

	Stations	Note
02	2 stations	Double wiring <sup>Note 1)</sup>
⋮	⋮	
16	16 stations	
02	2 stations	Mixed wiring, Specified layout <sup>Note 2)</sup> (Available up to 32 solenoids)
⋮	⋮	
20	20 stations	

Note 1) Double wiring: single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

#### 4 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
B	Both sides (2 to 20 stations)

#### 5 SUP/EXH block assembly

—	Internal pilot
S	Internal pilot, Built-in silencer <sup>Note)</sup>
R	External pilot
RS	External pilot, Built-in silencer <sup>Note)</sup>

Note) When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### 6 A, B port size

##### Metric size

Method size	A, B port	P, E port	Applicable series
C3	Ø 3.2 One-touch fitting	Ø 8 One-touch fitting	SV1000
C4	Ø 4 One-touch fitting		
C6	Ø 6 One-touch fitting		
C4	Ø 4 One-touch fitting	Ø 10 One-touch fitting	SV2000
C6	Ø 6 One-touch fitting		
C8	Ø 8 One-touch fitting		
C6	Ø 6 One-touch fitting	Ø 12 One-touch fitting	SV3000
C8	Ø 8 One-touch fitting		
C10	Ø 10 One-touch fitting		
M <sup>Note)</sup>	A, B port mixed		

##### Inch size

	A, B port	P, E port	Applicable series
N1	Ø 1/8" One-touch fitting	Ø 5/16" One-touch fitting	SV1000
N3	Ø 5/32" One-touch fitting		
N7	Ø 1/4" One-touch fitting		
N3	Ø 5/32" One-touch fitting	Ø 3/8" One-touch fitting	SV2000
N7	Ø 1/4" One-touch fitting		
N9	Ø 5/16" One-touch fitting		
N7	Ø 1/4" One-touch fitting	Ø 3/8" One-touch fitting	SV3000
N9	Ø 5/16" One-touch fitting		
N11	Ø 3/8" One-touch fitting		
M (Note)	A, B port mixed		

Note) Indicate the sizes on the manifold specification sheet.

\* The X and PE port size of external pilot type [R, RS] are Ø 4 (mm) or Ø 5/32" (inch) for the SV1000/2000 series, and Ø 6 (mm) or Ø 1/4" (inch) for the SV3000 series.

#### 7 Mounting

—	Direct mounting
D	With DIN bracket, DIN rail with standard length
D0	With DIN bracket, without DIN rail
D3 <sup>Note)</sup>	With DIN bracket, DIN rail for 3 stations
⋮	⋮
D20 <sup>Note)</sup>	With DIN bracket, DIN rail for 20 stations

Note) Specify a longer rail than the length of valve stations.

\* If the DIN rail must be mounted without an SI Unit, select "D0" and order the DIN rail separately. Refer to L3 of the dimensions for the DIN rail length. For the DIN rail part number, refer to the **WEB catalogue** or the SV series catalogue (CAT. EUS11-81).

# Series SV1000/2000/3000

## How to Order Valves

SV **1** **1** 00 **□** **□** - **5** F **□** **□** - **□** - **□**

A      B                      C      D                      E                      F      G                      H                      I

### A Series

1	SV1000
2	SV2000
3	SV3000

### B Type of actuation

1	2-position single
2	2-position double
3	3-position closed centre
4	3-position exhaust centre
5	3-position pressure centre
A (Note)	4-position dual 3-port valve (N.C./N.C.)
B (Note)	4-position dual 3-port valve (N.O./N.O.)
C (Note)	4-position dual 3-port valve (N.C./N.O.)

Note) Select the SV1000 or SV2000 series for the 4-position dual 3-port valve.

\* Select the internal pilot type for the 4-position dual 3-port valve.

### C Pilot type

—	Internal pilot
R	External pilot

### D Back pressure check valve

—	None
K	Built-in

\* Built-in back pressure check valve type is applicable to the SV1000 series only.

\* The product with a back pressure check valve is not available for 3-position valves.

\* Refer to the **WEB catalogue** for built-in back pressure check valve type.


### E Rated voltage

5	24 V DC
---	---------

### F Light/surge voltage suppressor

U	With light/surge voltage suppressor
R	Without light, with surge voltage suppressor

### G Manual override

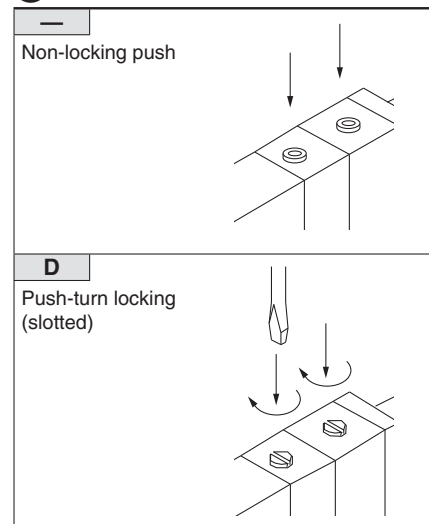

### H Manifold block

If stations are to be added, order the product with manifold block.


(For details, refer to the **WEB catalogue**.)

### I Made to Order

—	—
X90	Main valve fluororubber specification (For details, refer to the <b>WEB catalogue</b> .)

## How to Order Manifold Assembly

### Example

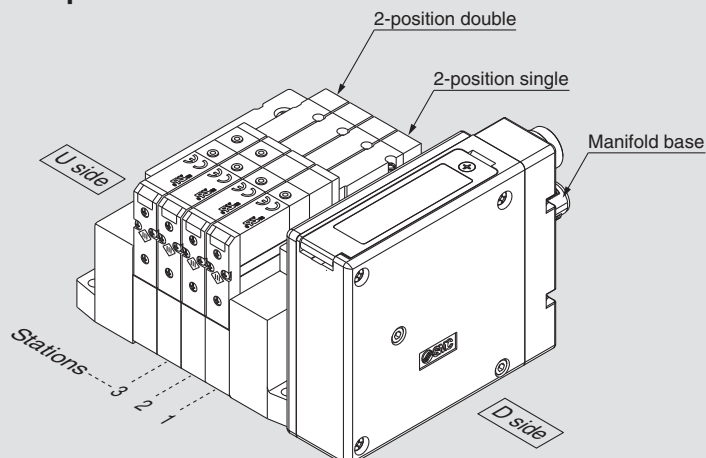


SS5V1-W10S1A3ND-04B-C6.....1 set (Manifold base part number)  
 \* SV1100-5FU.....2 sets (2-position single part number)  
 \* SV1200-5FU.....2 sets (2-position double part number)

The asterisk denotes the symbol for assembly.  
 Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.

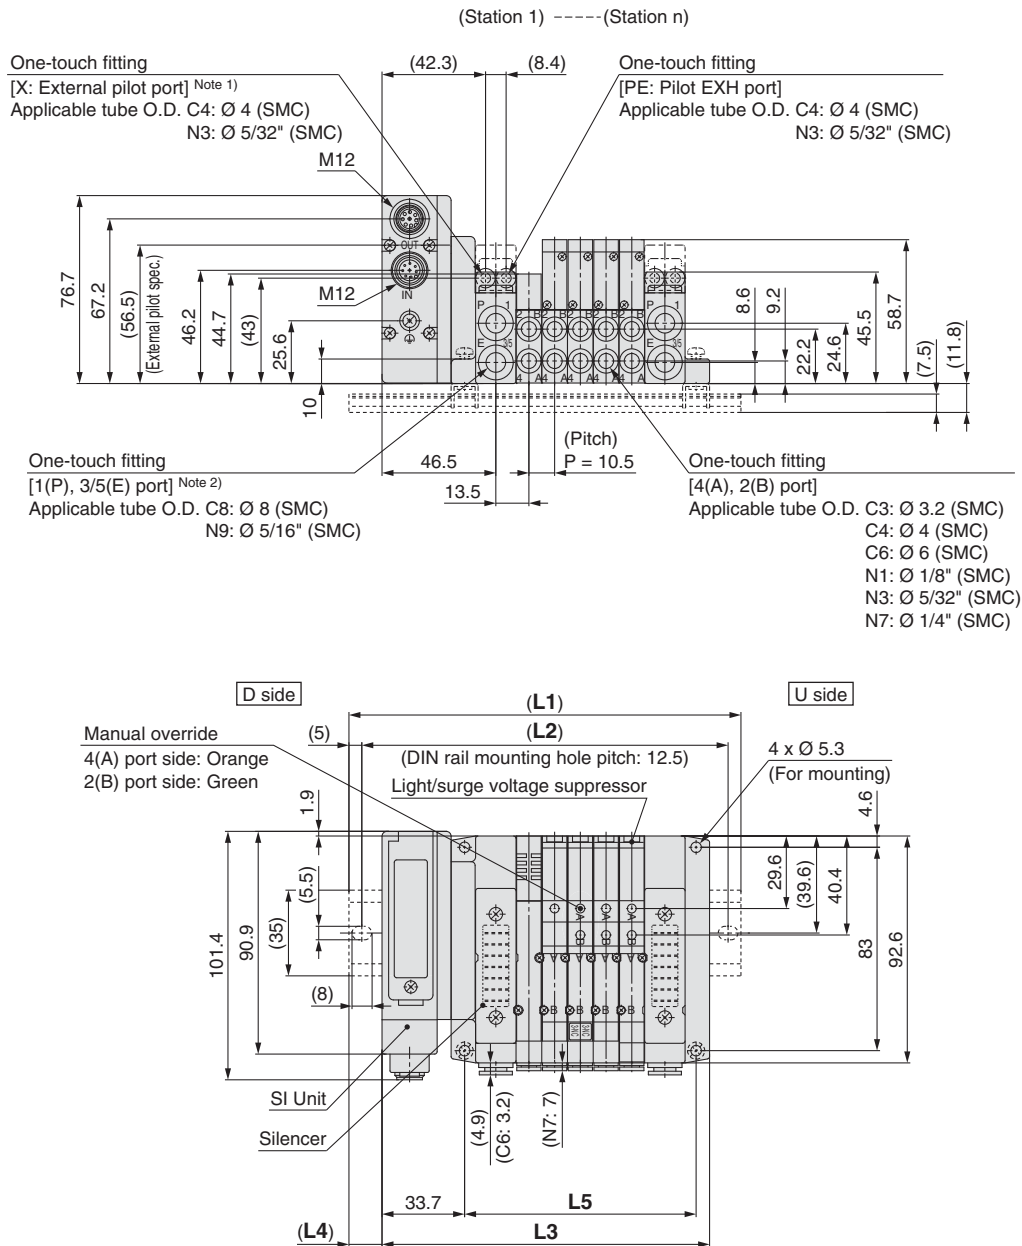

**Dimensions****Tie-rod Base****Series SV1000**

Note 1) External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.  
 Note 2) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.



**L: DIN Rail Overall Length**

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	135.5	148	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323
L2	125	137.5	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5
L3	102.2	112.7	123.2	133.7	144.2	154.7	165.2	175.7	186.2	196.7	207.2	217.7	228.2	238.7	249.2	259.7	270.2	280.7	291.2
L4	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16	17	12	13	14	15	16
L5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252

Dimensions

Tie-rod Base Series SV2000

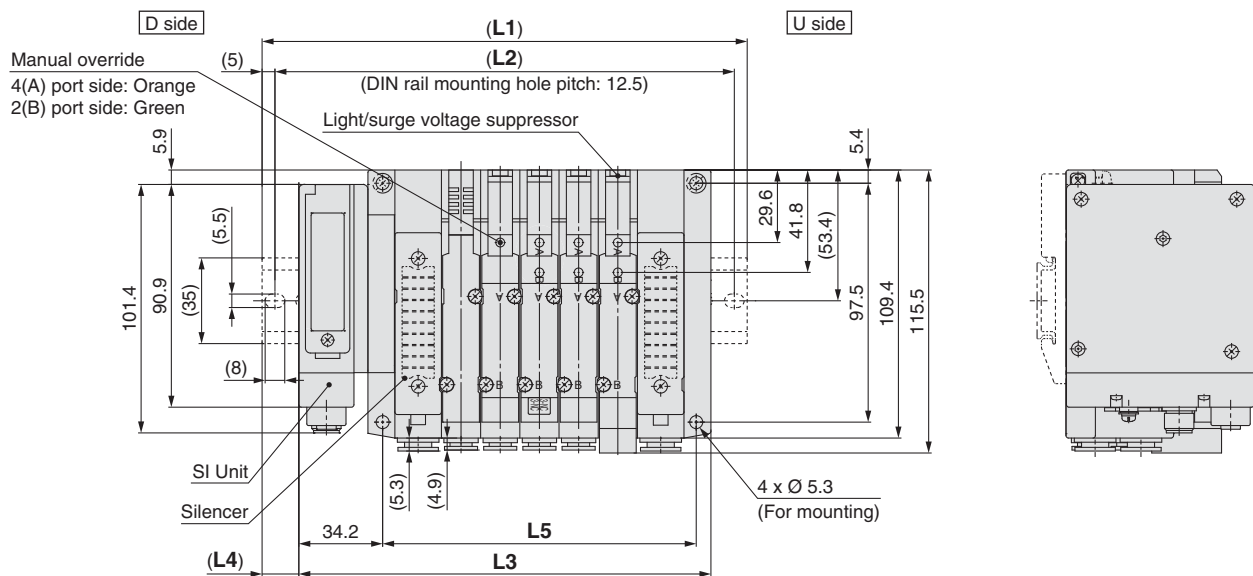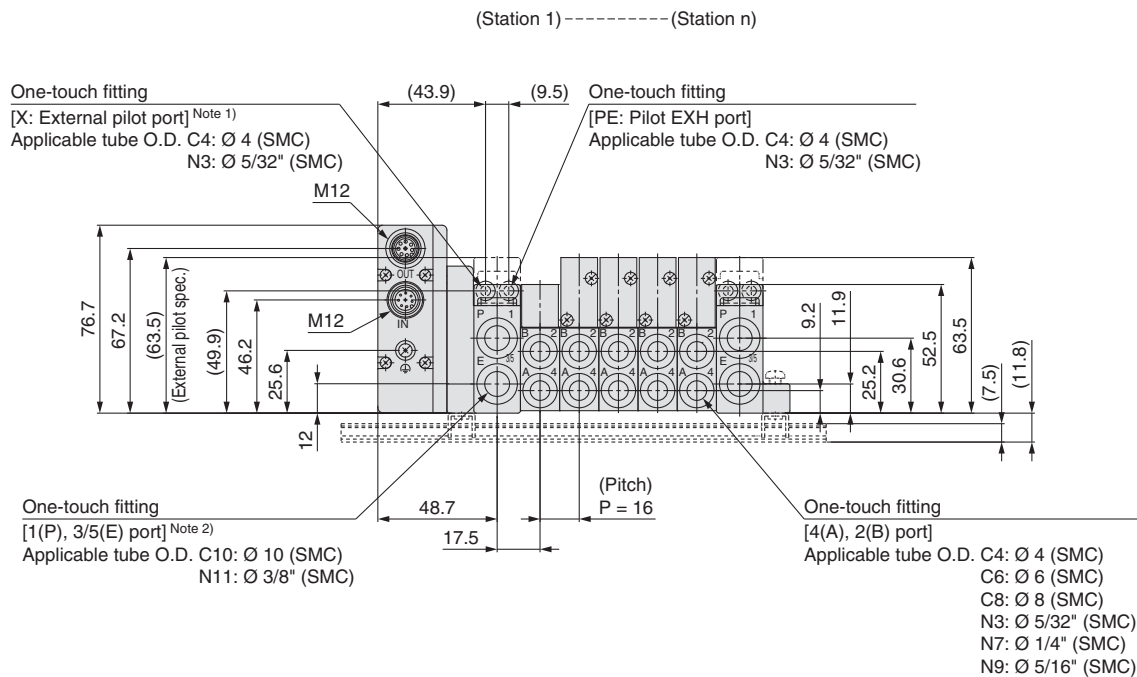



Note 1) External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.  
Note 2) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.

L: DIN Rail Overall Length

		n: Stations																	
L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5
L2	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	325	350	362.5	375	400	412.5	425
L3	120.2	136.2	152.2	168.2	184.2	200.2	216.2	232.2	248.2	264.2	280.2	296.2	312.2	328.2	344.2	360.2	376.2	392.2	408.2
L4	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5	12.5	17	15.5	13.5
L5	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368

**Dimensions****Tie-rod Base****Series SV3000**

(Station 1) ----- (Station n)

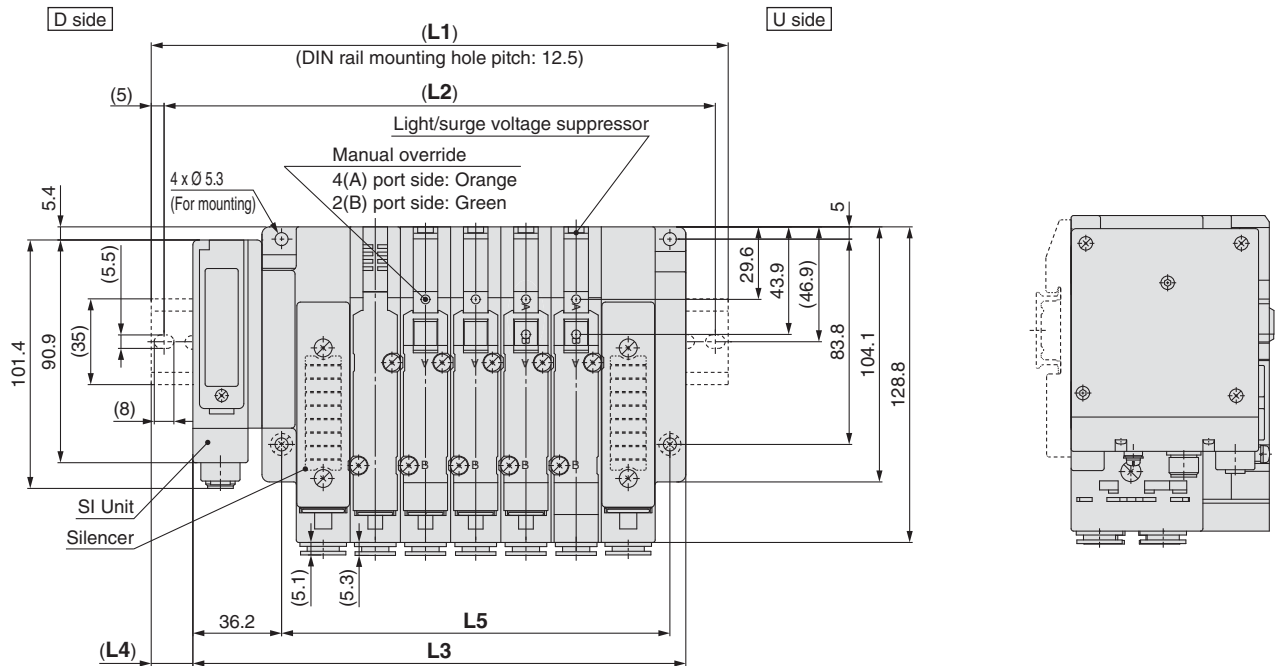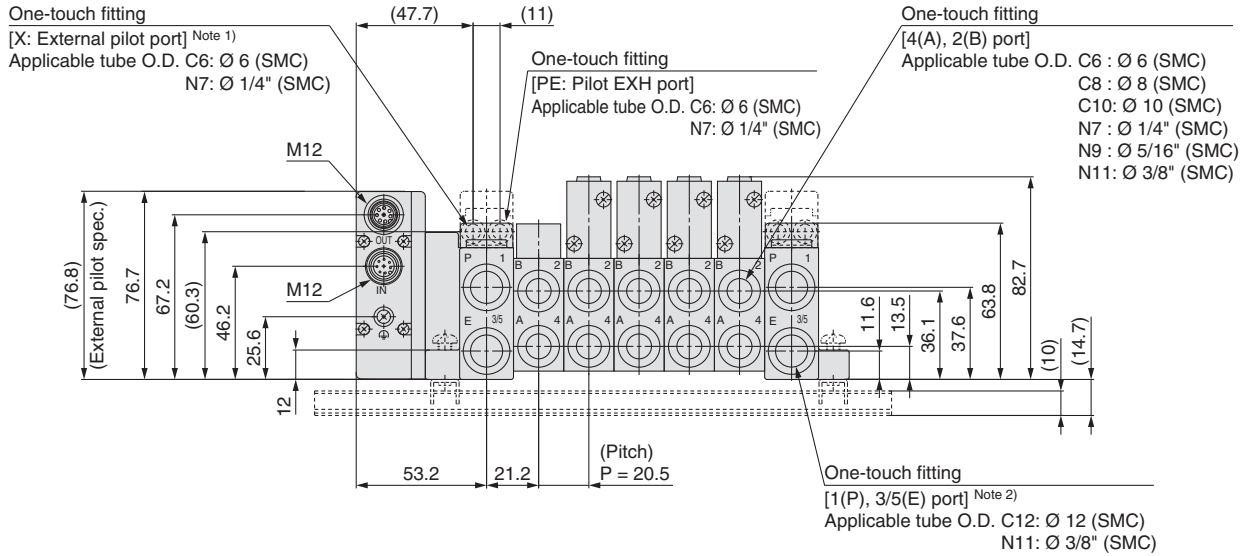

Note 1) External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.  
 Note 2) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.

**L: DIN Rail Overall Length**

n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	173	185.5	210.5	235.5	248	273	298	310.5	335.5	348	373	398	410.5	435.5	460.5	473	498	523	535.5
L2	162.5	175	200	225	237.5	262.5	287.5	300	325	337.5	362.5	387.5	400	425	450	462.5	487.5	512.5	525
L3	139.7	160.2	180.7	201.2	221.7	242.2	262.7	283.2	303.7	324.2	344.7	365.2	385.7	406.2	426.7	447.2	467.7	488.2	508.7
L4	16.5	12.5	15	17	13	15.5	17.5	13.5	16	12	14	16.5	12.5	14.5	17	13	15	17.5	13.5
L5	97	117.5	138	158.5	179	199.5	220	240.5	261	281.5	302	322.5	343	363.5	384	404.5	425	445.5	466




Series **EX500**

## Precautions on Mixed Usage of Gateway Decentralised System 2 (128 Points) and Gateway Decentralised System (64 Points)

		GW Unit	
		Gateway Decentralised System 2 (128 points) • EX500-GEN2 • EX500-GPN2	Gateway Decentralised System (64 points) • EX500-GDN1 • EX500-GPR1A
SI Unit Input Unit	Gateway Decentralised System 2 (128 points) • EX500-S103 • EX500-DX□□	Usable	Usable Same functions of Gateway Decentralised System (64 points)
	Gateway Decentralised System (64 points) • EX500-S001 • EX500-Q001/002 • EX500-Q101/102 • EEX500-IB1-□ (EX500-IB1)	Usable Same functions of Gateway Decentralised System (64 points)	Usable

## Gateway Decentralised System (64 Points)

- ★ Valve manifold and Input Unit can be connected around the GW (Gateway) Unit.
- ★ Compatible with other protocols by replacing the GW Unit.
- ★ Number of inputs/outputs = 64 points/64 points. The number of outputs (solenoids) per branch is 16 points.
- ★ Number of valve manifold connections = Max. 4 Units, Number of Input Unit connections = Max. 4 Units, Cable length = Max. 10 m
- ★ No need to set the address for the valve manifold and Input Unit.

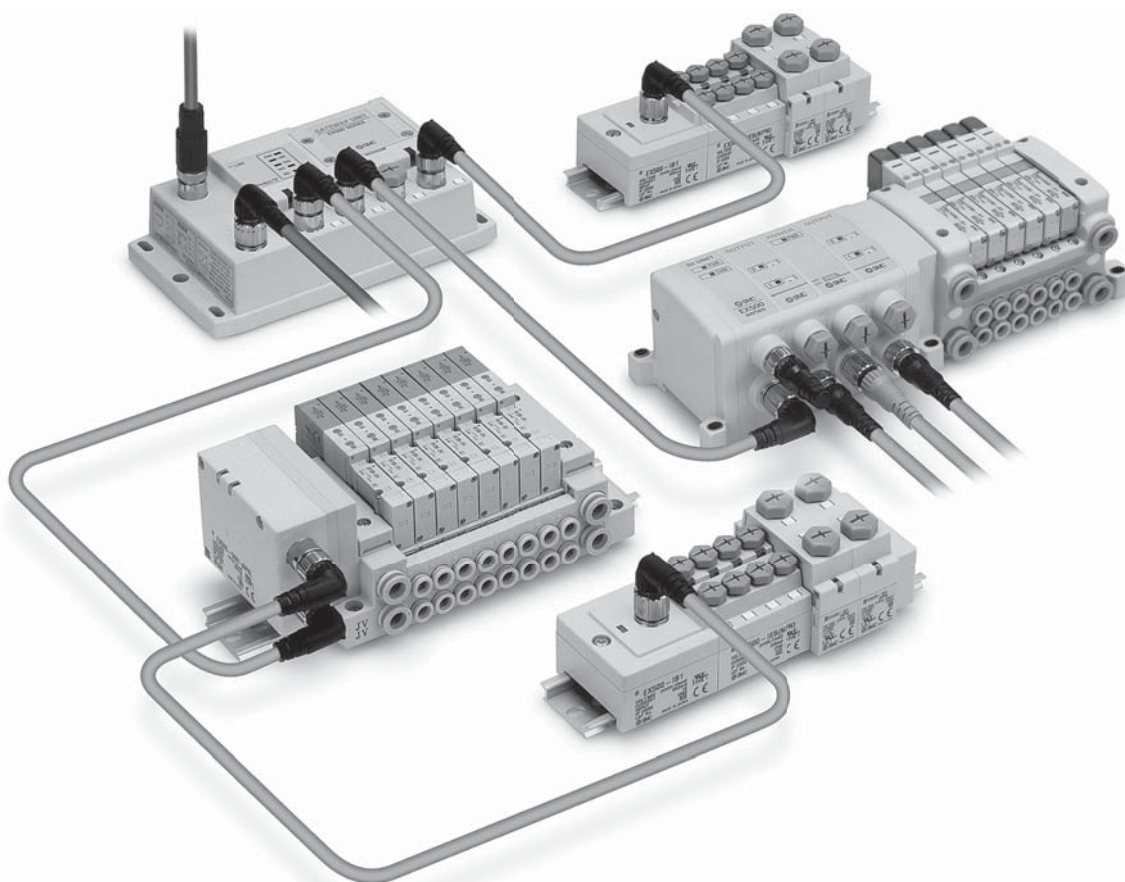

SY3000/5000/7000 .....	Page 59
VQC1000/2000/4000/5000 .....	Page 67
S0700 .....	Page 79
SV1000/2000/3000/4000 .....	Page 82



## How to Order

EX500 — G **DN1**

## Communication protocol

<b>DN1</b>	DeviceNet™ (Input/Output = 64 points/64 points)
<b>PR1A</b>	PROFIBUS DP (Input/Output = 64 points/64 points)

## Specifications


Model		EX500-GDN1	EX500-GPR1A
Communication	Protocol	DeviceNet™	PROFIBUS DP
	Version <small>Note 1)</small>	Release 2.0	DP-V0
	Communication speed	125 k/250 k/500 kbps	9.6 k/19.2 k/45.45 k/ 93.75 k/187.5 k/500 k/ 1.5 M/3 M/6 M/12 Mbps
	Configuration file <small>Note 2)</small>	EDS file	GSD file
	Number of inputs/outputs (I/O occupation area)	64 inputs/64 outputs (8 bytes/8 bytes)	
	Terminating resistor	Not provided	Built into the Unit
Power supply voltage	For control	11 to 25 V DC (Supplied by DeviceNet™ circuit, 50 mA or less)	24 V DC ±10 %
	For input device	24 V DC ±10 %	
	For valve	24 V DC +10 %, -5 %	
Current consumption	For input and control	3.0 A or less (Max. 0.7 A per branch x 4 branches + GW Unit internal current consumption: 0.2 A or less)	
	For valve	3.0 A or less (Max. 0.75 A per branch x 4 branches)	
Branch port	Number of branch ports	4 ports	
	Number of inputs and outputs	16 inputs/16 outputs per branch	
	Branch cable length	5 m or less between connected devices (10 m or less per branch)	
Environment	Enclosure	IP65	
	Operating temperature range	Operating: 5 to 45 °C, Stored: -25 to 70 °C (No freezing and condensation)	
	Operating humidity range	Operating, Stored: 35 to 85 %RH (No condensation)	
Standards		CE marking, UL (CSA), RoHS compliant	
Weight		470 g	
Enclosed parts		Seal cap (for M12 connector) 4 pcs.	Seal cap (for M12 connector) 5 pcs.

Note 1) Note that the version is subject to change.


Note 2) Each file can be downloaded from SMC website, <http://www.smc.eu>

## Dimensions/Parts Description

## EX500-GDN1 (DeviceNet™)

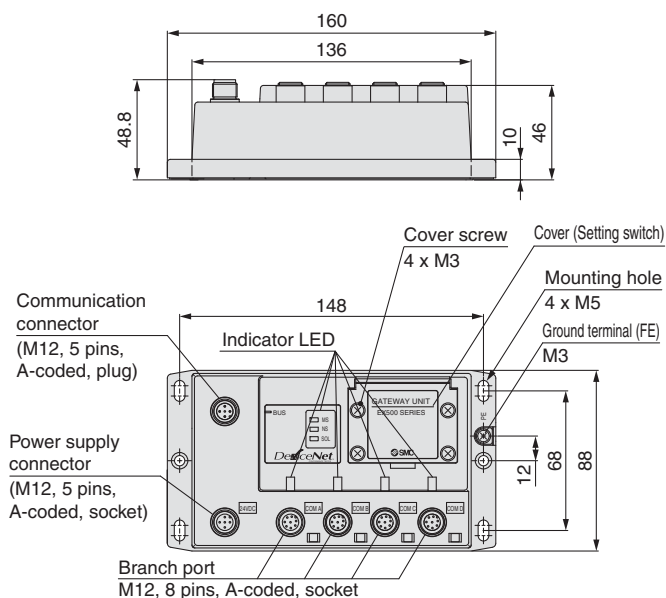


## EX500-GPR1A (PROFIBUS DP)

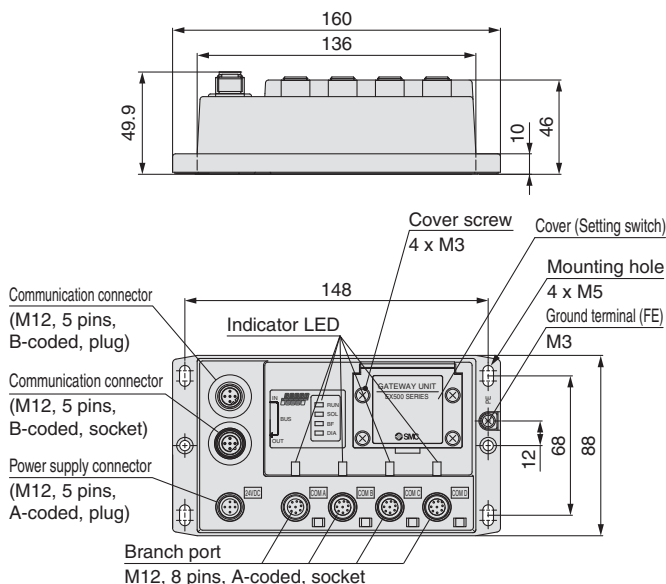

For SV1000/2000/3000/4000

EX500 – S001

• Applicable valve:  
Series SV

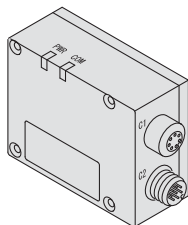


## Specifications

Model		EX500-S001
Output	Number of outputs	16 outputs
	Output type	Sink/NPN (Positive common)
	Supply current	Max. 0.65 A
	Rated voltage	24 V
Internal current consumption		100 mA or less
Environment	Enclosure	IP67
	Operating temperature range	Operating: 5 to 45 °C, Stored: -25 to 70 °C (No freezing and condensation)
	Operating humidity range	Operating, Stored: 35 to 85 %RH (No condensation)
Standards		CE marking, UL (CSA), RoHS compliant
Weight		115 g
Enclosed parts		Seal cap (for M12 connector socket) 1 pc.


## Dimensions/Parts Description

### EX500-S001

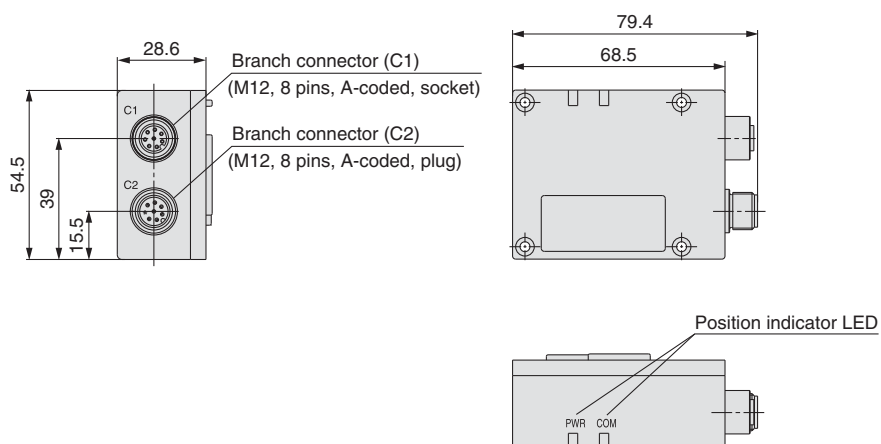

# Series EX500

For SY3000/5000/7000,  
VQC1000/2000/4000/5000,  
S0700

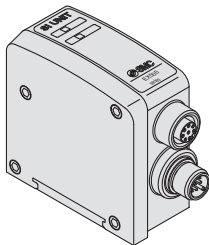

## How to Order

EX500 — Q 0 0 1

Applicable valve:  
Series SY/VQC/S0700

Output specification

0	NPN (Positive common)
1	PNP (Negative common)

SI Unit type


1	For without EX9 output block
2	For EX9 output block mounting

## Specifications


Model		EX500-Q001	EX500-Q101	EX500-Q002	EX500-Q102
Output	Number of outputs	16 outputs			
	Output type	Sink/NPN (Positive common)	Source/PNP (Negative common)	Sink/NPN (Positive common)	Source/PNP (Negative common)
	Rated voltage	24 V DC			
	Supply current	Max. 0.75 A			
Internal current consumption		100 mA or less			
Environment	Enclosure	IP67			
	Operating temperature range	Operating: 5 to 45 °C, Stored: -25 to 70 °C (No freezing and condensation)			
	Operating humidity range	Operating, Stored: 35 to 85 % RH (No condensation)			
Standards		CE marking, RoHS compliant			
Weight		105 g			
Enclosed parts		Seal cap (for M12 connector socket) 1 pc.			

## Dimensions/Parts Description

### EX500-Q□01

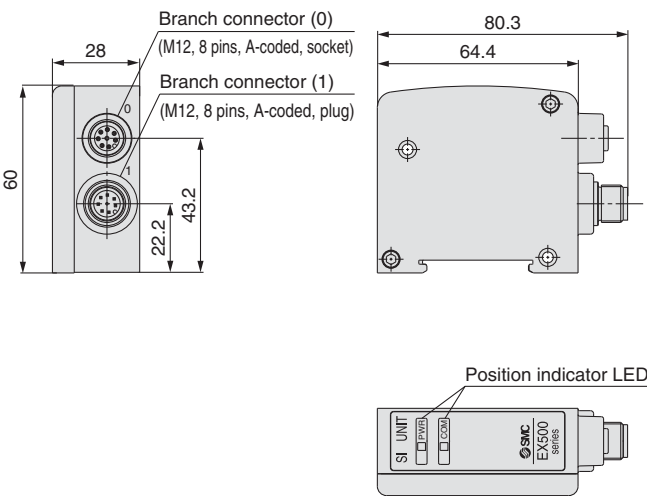

### EX500-Q□02

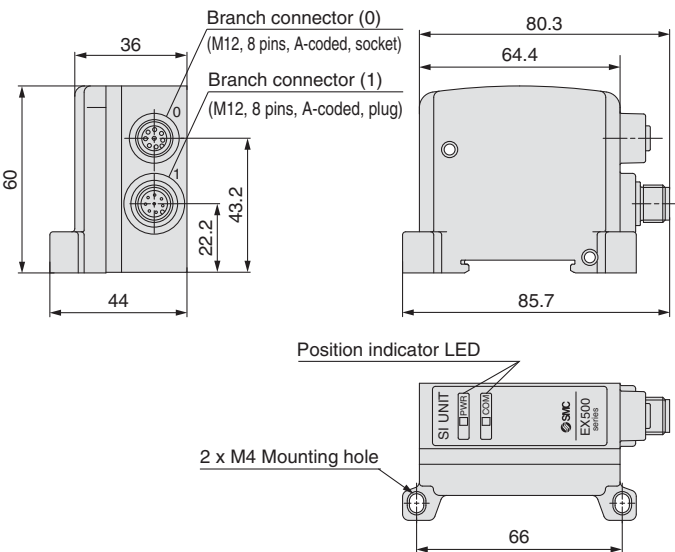

# Gateway Decentralised System (64 Points) Input Manifold



RoHS

## How to Order Input Manifold

## How to Order Input Block


**EEX500-IB1-E 8**

Connector type	
<b>E</b>	M8 connector
<b>T</b>	M12 connector
<b>M</b>	M8, M12 mixed


Stations	
<b>1</b>	1 station
<b>:</b>	:
<b>8</b>	8 stations

**EX500-IE 1**

### Block type

<b>1</b>	M8 connector, 2 inputs, PNP specification
<b>2</b>	M8 connector, 2 inputs, NPN specification
<b>3</b>	M12 connector, 2 inputs, PNP specification
<b>4</b>	M12 connector, 2 inputs, NPN specification
<b>5</b>	M8 connector, 8 points integrated type, PNP specification
<b>6</b>	M8 connector, 8 points integrated type, NPN specification

## Input Manifold

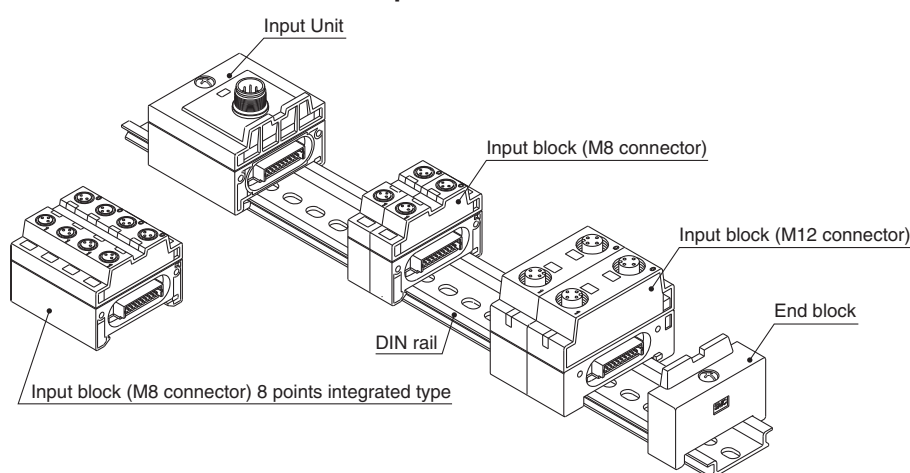

## How to Order Input Manifold [Ordering Example]


When ordering an Input Unit manifold, enter the Input manifold part number + Input block part number.

Please mention the connected input block part numbers in order from the Input Unit side under the input manifold part number.

When an input block layout becomes complicated, indicate in the Input Unit manifold specification sheet.


\* The Input Unit, End block and DIN rail are included in the input manifold.

### Example 1) M8 Input block only

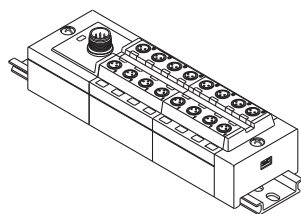


EEX500-IB1-E8 ..... 1 set  
\* EX500-IE5 ..... 2 sets (Note)

### Example 2) M12 Input block only

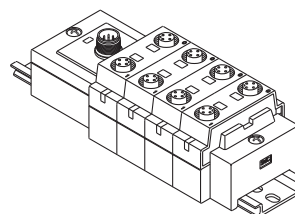


EEX500-IB1-T4 ..... 1 set  
\* EX500-IE4 ..... 4 sets


### Example 3) M8, M12 mixed

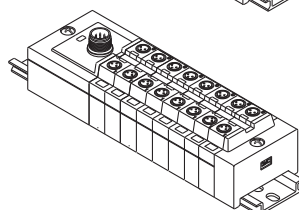

EEX500-IB1-E8 ..... 1 set  
\* EX500-IE1 ..... 8 sets

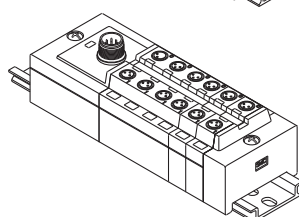

EEX500-IB1-E6 ..... 1 set  
\* EX500-IE5 ..... 1 set (Note)  
\* EX500-IE1 ..... 2 sets

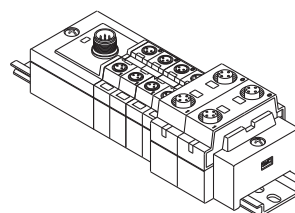

EEX500-IB1-M6 ..... 1 set  
\* EX500-IE1 ..... 4 sets  
\* EX500-IE3 ..... 2 sets

(Note) 8-point integrated type input block (EX500-IE5/6) is equivalent to 4 stations of 2-point input block (EX500-IE1/2).

# Series EX500

## Specifications (Input Unit)


Model		EX500-IB1
Input	Number of inputs	16 inputs
	Connection block	EX500-IE□ (Mixed combination is possible.)
	Connection block stations	2-input, input block: Max. 8 stations 8-input, input block: Max. 2 stations
Internal current consumption		100 mA or less
Environment	Enclosure	IP65
	Operating temperature range	Operating: 5 to 45 °C, Stored: -25 to 70 °C (No freezing and condensation)
	Operating humidity range	Operating, Stored: 35 to 85 %RH (No condensation)
Standards		CE marking, UL (CSA), RoHS
Weight		100 g (Input Unit + End block)

## Specifications (Input Block)

Model		EX500-IE1	EX500-IE2	EX500-IE3	EX500-IE4	EX500-IE5	EX500-IE6
Input	Connector type	M8 (3 pins)		M12 (4 pins)		M8 (3 pins)	
	Input type	PNP	NPN	PNP	NPN	PNP	NPN
	Number of inputs	2 inputs				8 inputs	
	Input device supply voltage	24 V DC					
	Input device supply current	Max. 480 mA/Input Unit manifold					
	Rated input current	Approx. 5 mA					
Environment	Enclosure	IP65					
	Operating temperature range	Operating: 5 to 45 °C, Stored: -25 to 70 °C (No freezing and condensation)					
	Operating humidity range	Operating, Stored: 35 to 85 %RH (No condensation)					
Standards		CE marking, UL (CSA), RoHS compliant					
Weight		20 g		40 g		55 g	
Enclosed parts		Seal cap (for M8 connector) 2 pcs.		Seal cap (for M12 connector) 2 pcs.		Seal cap (for M8 connector) 8 pcs.	


## Dimensions/Parts Description

### Input block (M8) only

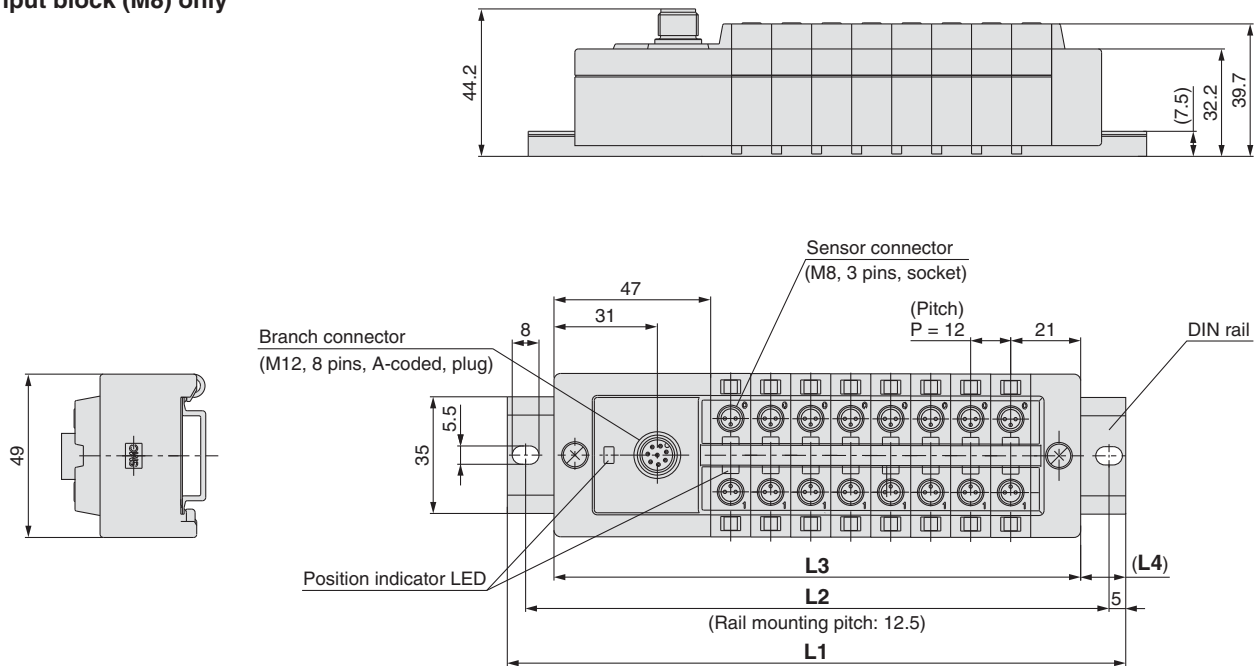

Stations	1	2	3	4	5	6	7	8
Rail length <b>L1</b>	98	110.5	123	135.5	148	160.5	173	185.5
Mounting pitch <b>L2</b>	87.5	100	112.5	125	137.5	150	162.5	175
Manifold length <b>L3</b>	74	86	98	110	122	134	146	158
<b>L4</b>	12	12	12.5	12.5	13	13	13.5	13.5

### Input block (M12) only

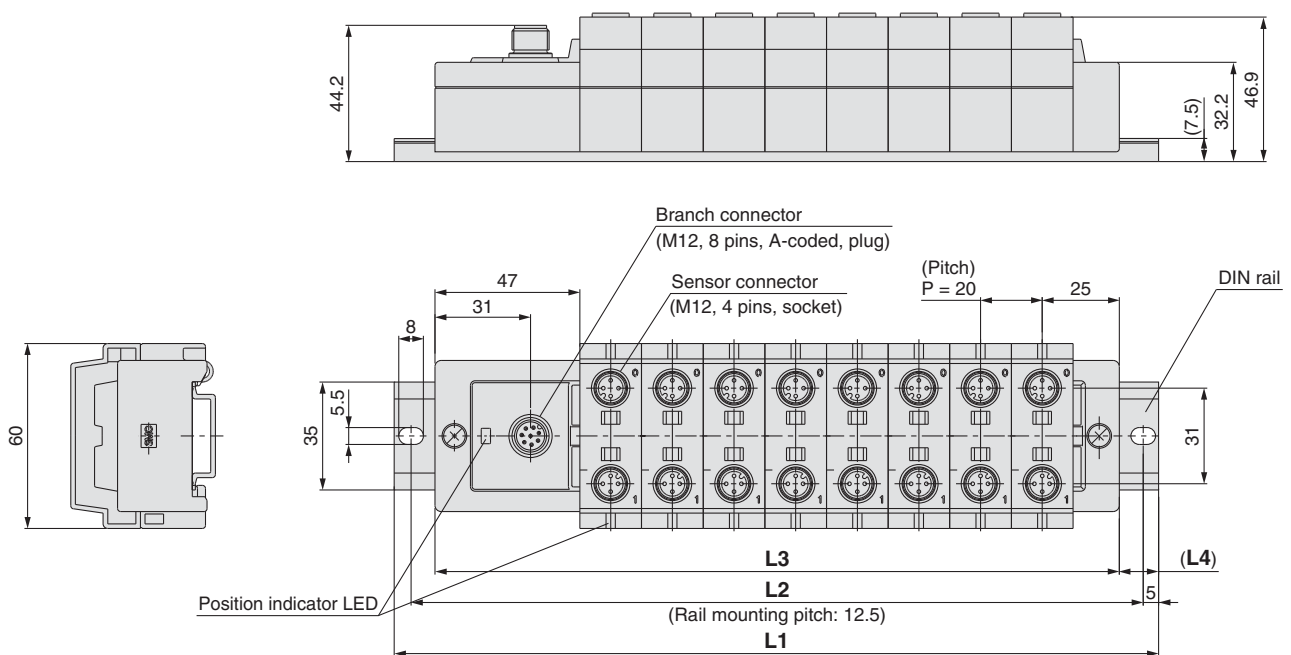


Stations	1	2	3	4	5	6	7	8
Rail length <b>L1</b>	110.5	123	148	173	185.5	210.5	223	248
Mounting pitch <b>L2</b>	100	112.5	137.5	162.5	175	200	212.5	237.5
Manifold length <b>L3</b>	82	102	122	142	162	182	202	222
<b>L4</b>	12	12	12.5	12.5	13	13	13.5	13.5



How to Add Input Block Stations

How to add input block stations

- 1. Loosen the round head combination screws (2 places) that hold the end block.
  - 2. Separate the blocks at the locations where stations are to be added.
  - 3. Attach the additional blocks to the DIN rail, and connect the blocks so that they fit together securely.
  - 4. While holding the blocks together so that there are no gaps between them, secure them to the DIN rail by tightening the round head combination screws.
- Note: Be sure to tighten the round head combination screw with the prescribed tightening torque. (0.6 N·m)

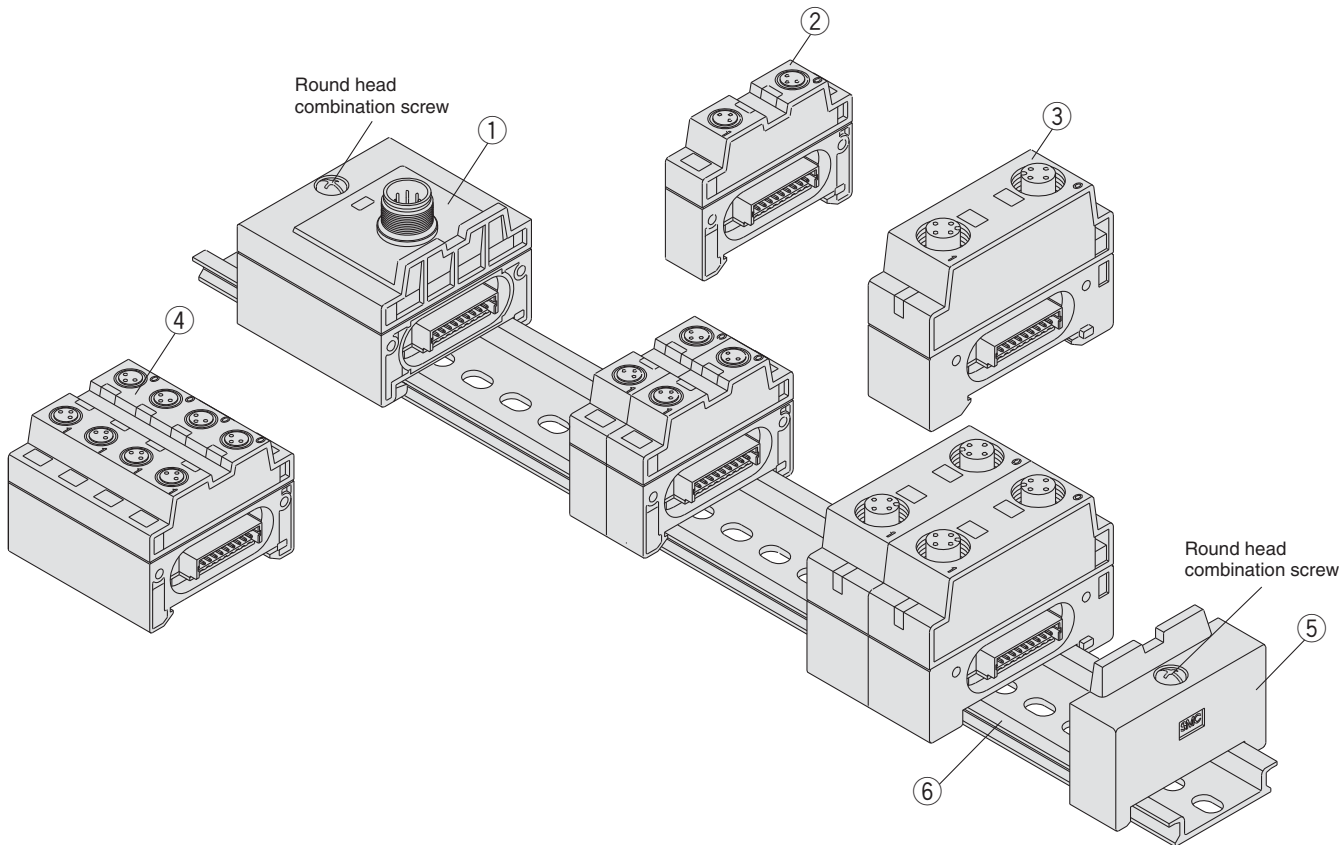

Parts List

No.	Description	Part number	Note
		For standard	
①	Input Unit	EX500-IB1	
②	Input block (M8 connector)	EX500-IE□	PNP Specification...□: 1, NPN Specification...□: 2
③	Input block (M12 connector)	EX500-IE□	PNP Specification...□: 3, NPN Specification...□: 4
④	Input block (M8 connector) 8 points integrated type	EX500-IE□	PNP Specification...□: 5, NPN Specification...□: 6
⑤	End block	EX500-EB1	
⑥	DIN rail	VZ1000-11-1-□	□: Number based on L dimension (Refer to the table below.)

DIN Rail L Dimensions [mm]

Stations		M8 input block (m)										Connector type For E (m = 1 to 8)	L dimension	No.	L dimension	No.
M12 input block (n)	0	0	1	2	3	4	5	6	7	8						
	1	1	2	3	4	5	6	7	8					7	185.5	
	2	2	3	4	5	6	7	8						8	198	
	3	4	5	6	7	8	9							9	210.5	
	4	6	7	8	9	10								10	223	
	5	7	8	9	10									11	235.5	
	6	9	10	11										12	248	
	7	10	11													
	8	12														
												Connector type For T (n = 1 to 8)				

# Gateway Decentralised System (64 Points) Accessories

## ① Power Supply Cable





EX500-AP050-S

Cable length (L)

010	1000 [mm]
050	5000 [mm]

Connector specification

S	Straight
A	Angle

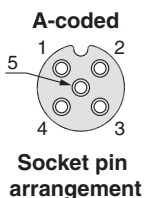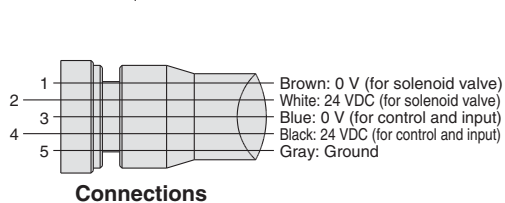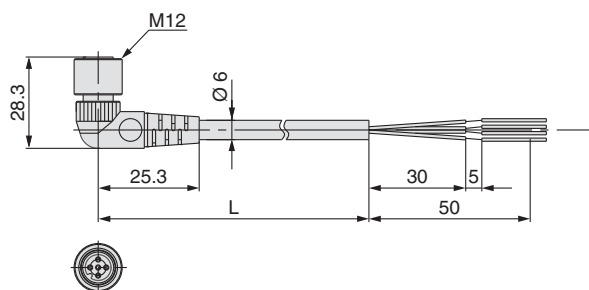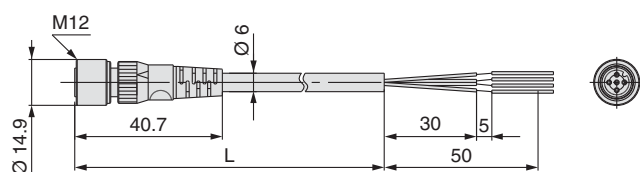

## ② Branch Cable





EX500-AC030-SSPS

Cable length (L)

003	300 [mm]
005	500 [mm]
010	1000 [mm]
030	3000 [mm]
050	5000 [mm]

Connector specification

SSPS	Socket side: Straight Plug side: Straight
SAPA	Socket side: Angle Plug side: Angle

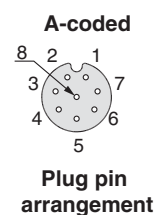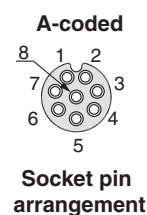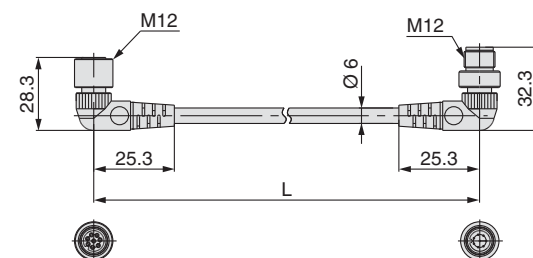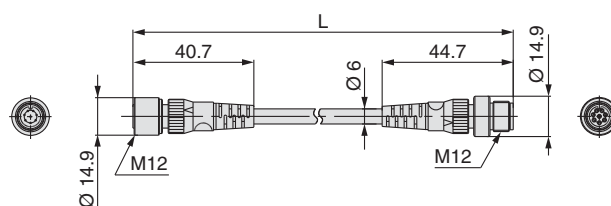

# Series EX500



## ③ Communication Cable

For DeviceNet™


### EX500 – AC 050 – DN

Cable length (L)●

010	1000 [mm]
050	5000 [mm]

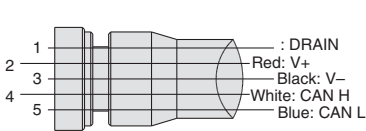
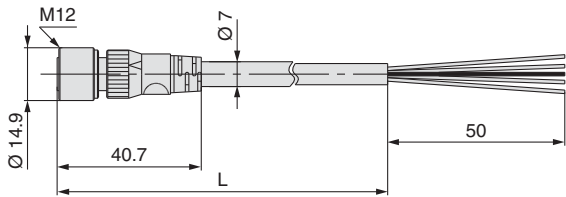


Connections

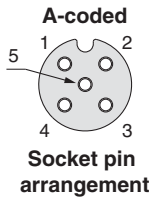


Socket pin arrangement

### PCA-1557633

 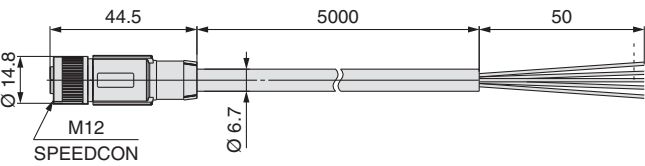



Connections

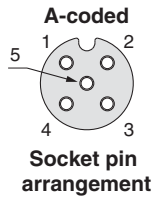


Socket pin arrangement

For PROFIBUS DP

### PCA-1557688

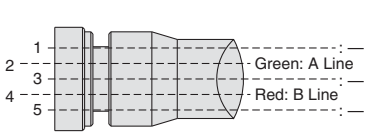
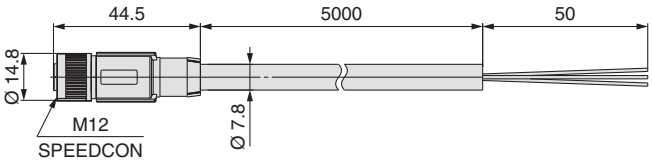


Connections

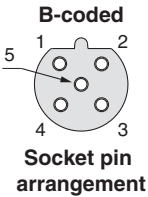


Socket pin arrangement

### PCA-1557691

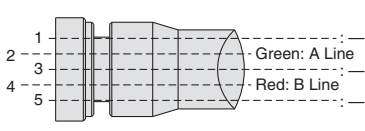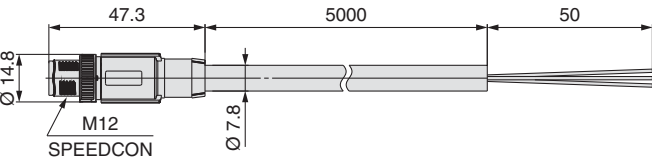

Connections

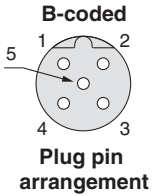


Plug pin arrangement

#### ④ Terminal Plug

Use this where an input unit manifold is not being used. (If a terminal plug is not used, the GW unit's COM LED will not light up.)


### EX500 – AC000 – S

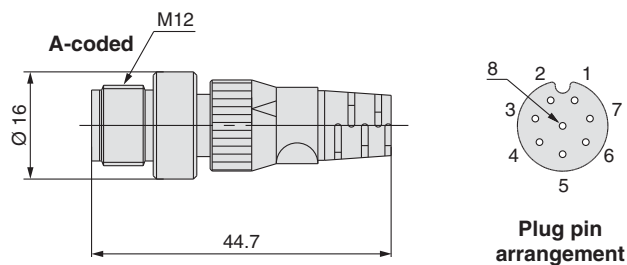

#### ⑤ Seal Cap (1 pc.)

Use with new connector (plug). By using these waterproof caps, the connector maintains IP65/67 enclosure.


### EX500 – AWTP

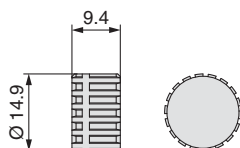

#### ⑥ Seal Cap (10 pcs.)

Use with new connector. By using these waterproof caps, the new connector maintains IP65/67 enclosure.

**EX9-AWES** For M8 connector socket  
**EX9-AWTS** For M12 connector socket

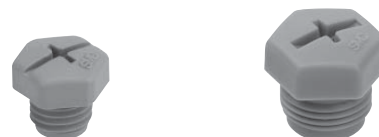

● Refer to page 16 for details about output block and power block.

Type 10  
Side Ported

Type 11  
Bottom Ported

# Gateway Decentralised System

## 5 Port Solenoid Valve

Series **SY3000/5000/7000**



RoHS

For detailed specifications, Common Precautions and Specific Product Precautions, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

### How to Order Manifold

**SS5Y** **3** - **10** **S** **A2** - **05** **U** **□** - **C6** **□**

① ② ③ ④ ⑤ ⑥ ⑦ ⑧

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

\* For mixed mounting, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

#### 2 Type

10	Side ported
11	Bottom ported <sup>Note)</sup>

Note) The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

\* When mixing top ported configurations, select from page 63.

In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

#### 3 SI Unit (Number of outputs, Output polarity, Max. number of valve stations)

A2	16 outputs, Positive common <sup>Note 1)</sup> , 1 to 8 stations (16 stations) <sup>Note 2)</sup>
A2N	16 outputs, Negative common <sup>Note 1)</sup> , 1 to 8 stations (16 stations) <sup>Note 2)</sup>

Note 1) Ensure a match with the common specification of the valve to be used.

Note 2) ( ): Maximum number of stations for single wiring.

#### 4 Valve stations

Stations	Note
02	2 stations
⋮	⋮
08	8 stations
02	2 stations
⋮	⋮
16	16 stations

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) For the product without the SI Unit (S0), note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

\* This also includes the number of blanking plate assembly.

#### 5 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
B	Both sides (2 to 16 stations)

#### 6 SUP/EXH block assembly


—	Internal pilot
S	Internal pilot, Built-in silencer <sup>Note 1) 2)</sup>
R	External pilot

Note 1) 3/5(E) port is plugged for the built-in silencer type.

Note 2) When built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

### How to Order Manifold Assembly

#### Example

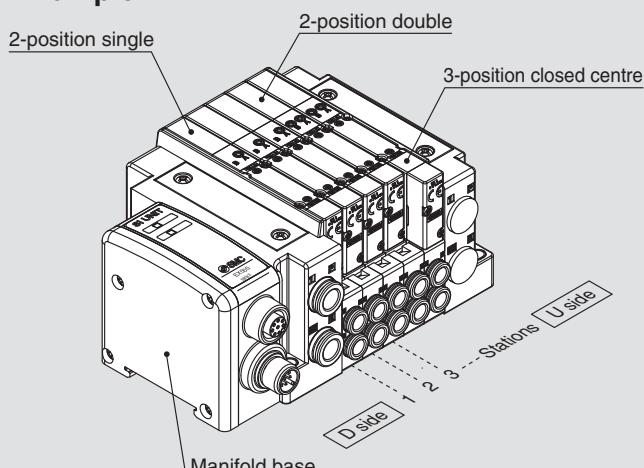

**SS5Y3-10SA2-05D-C6.....1 set (Manifold base part number)**  
 \* **SY3100-5U1.....3 sets (2-position single part number)**  
 \* **SY3200-5U1.....1 set (2-position double part number)**  
 \* **SY3300-5U1.....1 set (3-position closed centre part number)**

→ The asterisk denotes the symbol for assembly.  
 Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.

**7 A, B port size (Metric/One-touch fitting)**

	A, B port	Type 10/Side Ported			Type 11/Bottom Ported	
		SY3000	SY5000	SY7000	SY5000	SY7000
<b>C2</b>	Ø 2	●	—	—	—	—
<b>C3</b>	Ø 3.2	●	—	—	—	—
<b>C4</b>	Ø 4	●	●	—	●	—
<b>C6</b>	Ø 6	●	●	●	●	●
<b>C8</b>	Ø 8	—	●	●	●	●
<b>C10</b>	Ø 10	—	—	●	—	●
<b>C12</b>	Ø 12	—	—	●	—	●
<b>CM (Note 1)</b>	Mixed sizes	●	●	●	●	●
<b>L4</b>	Ø 4	●	●	—	—	—
<b>L6</b>	Ø 6	●	●	●	—	—
<b>L8</b>	Ø 8	—	●	●	—	—
<b>L10</b>	Ø 10	—	—	●	—	—
<b>L12</b>	Ø 12	—	—	●	—	—
<b>B4</b>	Ø 4	●	●	—	—	—
<b>B6</b>	Ø 6	●	●	●	—	—
<b>B8</b>	Ø 8	—	●	●	—	—
<b>B10</b>	Ø 10	—	—	●	—	—
<b>B12</b>	Ø 12	—	—	●	—	—
<b>LM (Note 1)</b>	Mixed sizes	●	●	●	—	—
P, E port (Note 3)		Ø 8	Ø 10	Ø 12	Ø 10	Ø 12

Note 1) Indicate the sizes on the manifold specification sheet.

Note 2) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly. For details, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

Note 3) The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

**8 Mounting and Option**

	Mounting	Option	
		Name plate	Station number
—	Direct mounting	—	—
<b>AA</b>		●	●
<b>BA</b>		●	—
<b>D</b> (Note 1)	DIN rail mounting	—	—
<b>A</b> (Note 1)		●	●
<b>B</b> (Note 1)		●	—

Note 1) Refer to "DIN Rail Option" below.

\* Select the direct mounting type for Type 11 (Bottom ported).

**DIN Rail Option**

—	With DIN bracket, DIN rail with standard length
<b>0</b>	With DIN bracket, without DIN rail
<b>3</b> (Note)	With DIN bracket, DIN rail for 3 stations
⋮	⋮
<b>16</b> (Note)	With DIN bracket, DIN rail for 16 stations

Note) Specify a longer rail than the length of valve stations.

\* If the DIN rail must be mounted without an SI Unit, select "D0" and order the DIN rail separately. Refer to L3 of the dimensions for the DIN rail length. For the DIN rail part number, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).


\* For the fixation of DIN rail mounting type manifold, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

**A, B port size (Inch/One-touch fitting)**

	A, B port	Type 10/Side Ported			Type 11/Bottom Ported	
		SY3000	SY5000	SY7000	SY5000	SY7000
<b>N1</b>	Ø 1/8"	●	—	—	—	—
<b>N3</b>	Ø 5/32"	●	●	—	●	—
<b>N7</b>	Ø 1/4"	●	●	●	●	●
<b>N9</b>	Ø 5/16"	—	●	●	●	●
<b>N11</b>	Ø 3/8"	—	—	●	—	●
<b>CM (Note 1)</b>	Mixed sizes	●	●	●	●	●
<b>LN3</b>	Ø 5/32"	●	—	—	—	—
<b>LN7</b>	Ø 1/4"	●	●	—	—	—
<b>LN9</b>	Ø 5/16"	—	●	—	—	—
<b>LN11</b>	Ø 3/8"	—	—	●	—	—
<b>BN3</b>	Ø 5/32"	●	—	—	—	—
<b>BN7</b>	Ø 1/4"	●	●	—	—	—
<b>BN9</b>	Ø 5/16"	—	●	—	—	—
<b>BN11</b>	Ø 3/8"	—	—	●	—	—
<b>LM (Note 1)</b>	Mixed sizes	●	●	●	—	—
P, E port (Note 3)		Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"



## How to Order Valves (With mounting screw)

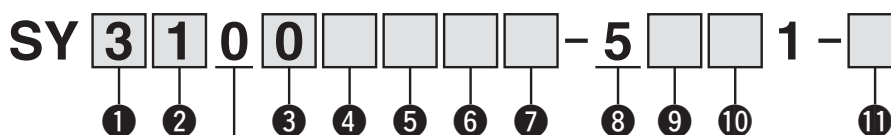

### 1 Series

3	SY3000
5	SY5000
7	SY7000

### 2 Type of actuation

1	2-position	Single
2		Double
3	3-position	Closed centre
4		Exhaust centre
5		Pressure centre
A Note)	4-position dual 3-port valve	N.C./N.C.
B Note)		N.O./N.O.
C Note)		N.C./N.O.

Note) Select the rubber seal type for the 4-position dual 3-port valve.

### 3 Seal type

0	Rubber seal
1	Metal seal

### 4 Pilot type

—	Internal pilot
R	External pilot

### 5 Back pressure check valve

—	None
H Note)	Built-in

Note) Select the rubber seal type when the back pressure check valve is built-in. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. For ordering example, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103). However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.

\* Select "—" for 3-position type and the SY7000.

### 6 Pilot valve option

—	Standard (0.7 MPa)
B	Quick response type (0.7 MPa)
K Note)	High pressure type (1.0 MPa)

Note) Select the metal seal type for high pressure type.

### 7 Coil type

—	Standard
T	With power saving circuit (Continuous duty type) Note 1) 2)

Note 1) Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.

Note 2) Be careful of the energising time when the power saving circuit is selected. For details, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

### 8 Rated voltage


5	24 V DC
---	---------

### 9 Light/surge voltage suppressor and common specification

	With light	Surge voltage suppressor	Common specification
R	—	●	Non-polar
U	●		
S	—		Positive common
Z	●		
NS	—		Negative common
NZ	●		

\* Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve from "R, U, S or Z" when the SI Unit specification is "A2" (positive common). Select a valve from "R, U, NS or NZ" when the SI Unit specification is "A2N" (negative common).

### 10 Manual override

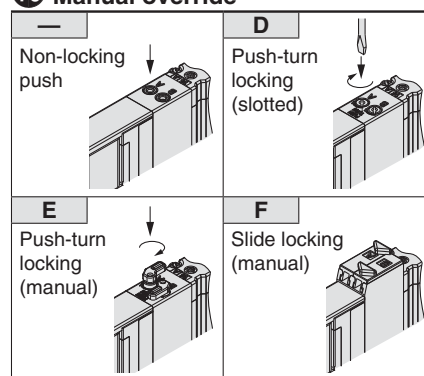

### 11 Type of mounting screw

—	Round head combination screw
B	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type) Note)
H	Hexagon socket head cap screw (Falling-out-prevention type) Note)

Note) For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.

\* **When ordering a valve individually, the base gasket is not included.**

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

For details, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

\* Select "—" or "K" for the optional individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

# Gateway Decentralised System

## 5 Port Solenoid Valve

Series **SY3000/5000/7000**



RoHS

Type 12  
Top Ported

For detailed specifications, Common Precautions and Specific Product Precautions, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

### How to Order Manifold

**SS5Y** **3** - **12S** **A2** - **05** **U** **□** - **□** **□**

1                      2                      3                      4                      5                      6                      7

#### 1 Series

3	SY3000
5	SY5000
7	SY7000

\* For mixed mounting, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

#### 2 SI Unit (Number of outputs, Output polarity, Max. number of valve stations)

A2	16 outputs, Positive common <sup>Note 1)</sup> , 1 to 8 stations (16 stations) <sup>Note 2)</sup>
A2N	16 outputs, Negative common <sup>Note 1)</sup> , 1 to 8 stations (16 stations) <sup>Note 2)</sup>

Note 1) Ensure a match with the common specification of the valve to be used.

Note 2) ( ): Maximum number of stations for single wiring.

#### 3 Valve stations

Stations	Note
02	2 stations
⋮	⋮
08	8 stations
02	2 stations
⋮	⋮
16	16 stations

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) For the product without the SI Unit (S0), note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

\* This also includes the number of blanking plate assembly.

#### 4 P, E port entry

U <sup>Note)</sup>	U side (2 to 10 stations)
D <sup>Note)</sup>	D side (2 to 10 stations)
B	Both sides (2 to 16 stations)

Note) For type "S", supply/exhaust block assembly with built-in silencer, choose "U" or "D" for P, E port entry.

#### 5 SUP/EXH block assembly


—	Internal pilot
S <sup>Note 1)</sup>	Internal pilot, Built-in silencer <sup>Note 2)</sup>
R	External pilot

Note 1) For type "S", supply/exhaust block assembly with built-in silencer, choose "U" or "D" for P, E port entry. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)

Note 2) When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

### How to Order Manifold Assembly

#### Example

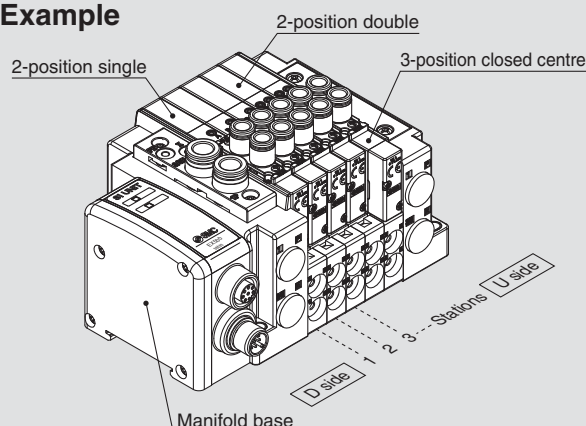

**SS5Y3-12SA2-05D.....1 set (Manifold base part number)**  
 \* SY3130-5U1-C6.....3 sets (2-position single part number)  
 \* SY3230-5U1-C6.....1 set (2-position double part number)  
 \* SY3330-5U1-C6.....1 set (3-position closed centre part number)  
 → The asterisk denotes the symbol for assembly.  
 Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.

#### 6 P, E port size (One-touch fittings)

	SY3000	SY5000	SY7000
—	Ø 8	Ø 10	Ø 12
N <sup>Note)</sup>	Ø 5/16"	Ø 3/8"	Ø 1/2"

Note) For "N", sizes are in inches.

#### 7 Mounting


—	Direct mounting
D	With DIN bracket, DIN rail with standard length
D0	With DIN bracket, without DIN rail
D3 <sup>Note)</sup>	With DIN bracket, DIN rail for 3 stations
⋮	⋮
D16 <sup>Note)</sup>	With DIN bracket, DIN rail for 16 stations

Note) Specify a longer rail than the length of valve stations.

\* If the DIN rail must be mounted without an SI Unit, select "D0". Then, refer to L3 of the dimensions for the DIN rail length and order separately. For the DIN rail part number, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

\* For the fixation of DIN rail mounting type manifold, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

## How to Order Valves (With mounting screw)

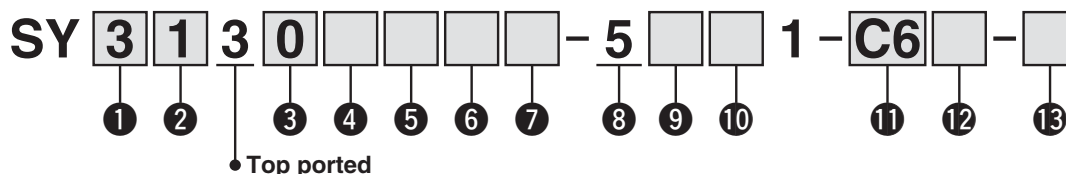

### 1 Series

3	SY3000
5	SY5000
7	SY7000

### 2 Type of actuation

1	2-position	Single
2		Double
3	3-position	Closed centre
4		Exhaust centre
5		Pressure centre
A Note)	4-position dual	N.C./N.C.
B Note)		N.O./N.O.
C Note)	3-port valve	N.C./N.O.

Note) Select the rubber seal type for the 4-position dual 3-port valve.

### 3 Seal type

0	Rubber seal
1	Metal seal

### 4 Pilot type

—	Internal pilot
R	External pilot

### 5 Back pressure check valve (Built-in valve type)

—	None
H Note)	Built-in

Note) Select the rubber seal type when the back pressure check valve is built-in. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. For ordering example, refer to the SY series catalogue (CAT. EUS11-103). However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.

\* Select “—” for 3-position type and the SY7000.

### 6 Pilot valve option

—	Standard (0.7 MPa)
B	Quick response type (0.7 MPa)
K Note)	High pressure type (1.0 MPa)

Note) Select the metal seal type for high pressure type.

### 7 Coil type

—	Standard
T	With power saving circuit (Continuous duty type) Note 1) 2)

Note 1) Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.

Note 2) Be careful of the energising time when the power saving circuit is selected. For details, refer to the SY series catalogue (CAT. EUS11-103).

### 8 Rated voltage


5	24 V DC
---	---------

### 9 Light/surge voltage suppressor and common specification

	With light	Surge voltage suppressor	Common specification
R	—	●	Non-polar
U	●		
S	—		Positive common
Z	●		
NS	—		Negative common
NZ	●		

\* Only “Z” and “NZ” types are available for with the power saving circuit. Select a valve from “R, U, S or Z” when the SI Unit specification is “A2” (positive common). Select a valve from “R, U, NS or NZ” when the SI Unit specification is “A2N” (negative common).

### 10 Manual override

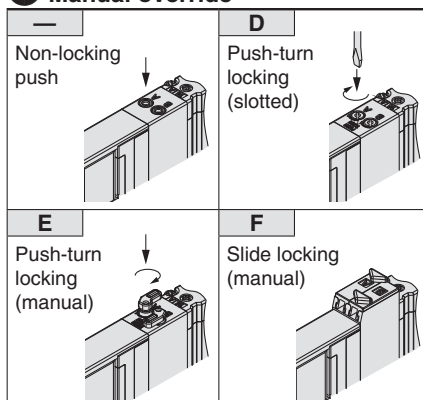

### 11 A, B port size

Thread piping	Port size	SY3000	SY5000	SY7000
M5	M5 x 0.8	●	—	—
01	1/8	—	●	—
02	1/4	—	—	●

### One-touch fitting (Metric)

A, B port	SY3000	SY5000	SY7000
C2	●	—	—
C3	●	—	—
C4	●	●	—
C6	●	●	●
C8	—	●	●
C10	—	—	●
C12	—	—	●

### One-touch fitting (Inch)

A, B port	SY3000	SY5000	SY7000
N1	●	—	—
N3	●	●	—
N7	●	●	●
N9	—	●	●
N11	—	—	●

### 12 A, B port thread type

—	Rc
F	G
N	NPT
T	NPTF

\* Select “—” for M5.

### 13 Type of mounting screw

—	Round head combination screw
B	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type) Note)
H	Hexagon socket head cap screw (Falling-out-prevention type) Note)


Note) For “K” and “H”, the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.

\* When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service. For details, refer to the SY series catalogue (CAT. EUS11-103).

\* Select “—” or “K” for the optional individual SUP/EXH spacer assembly or interface regulator.

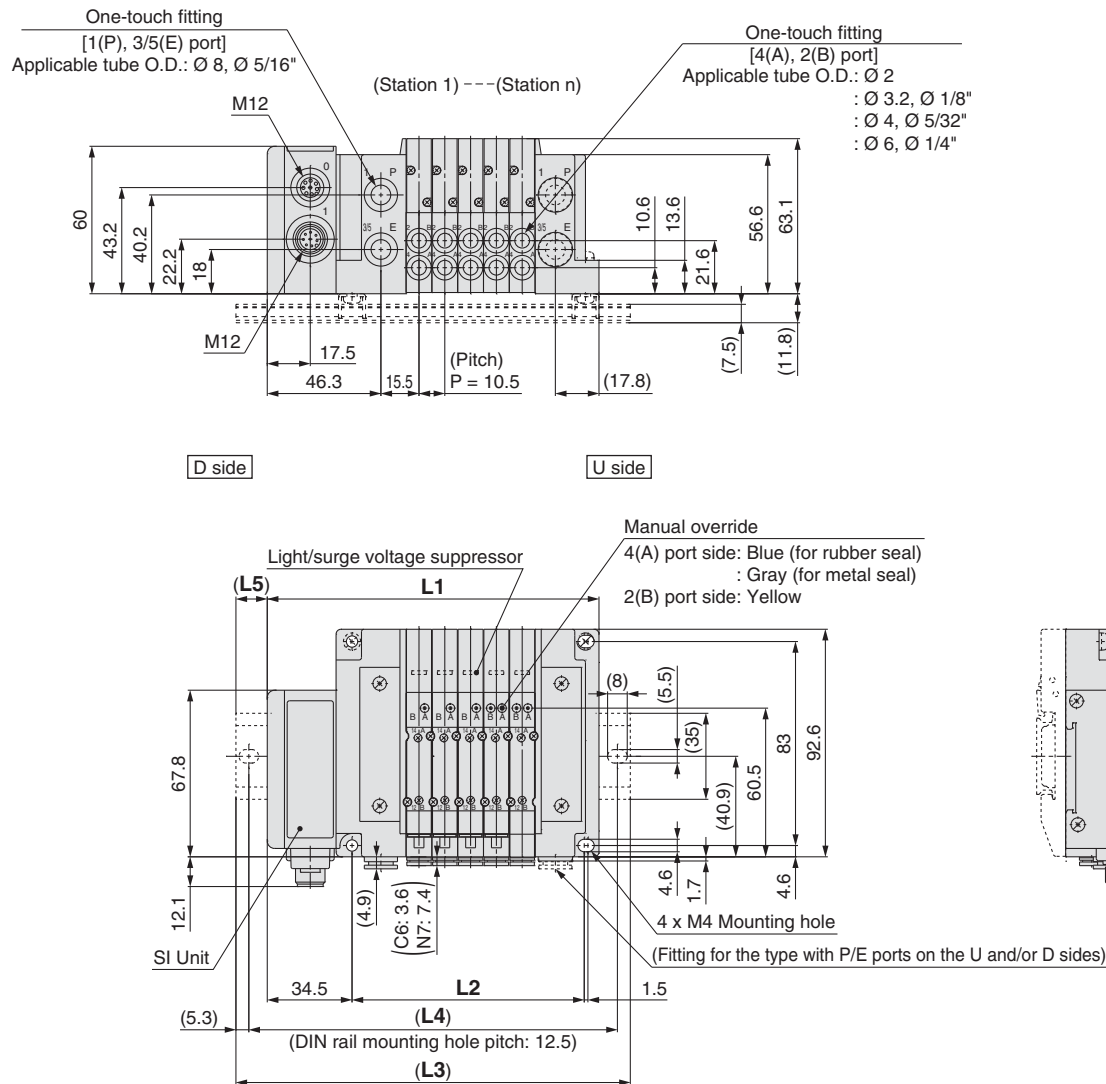

**Dimensions****Type 10/Side Ported****Series SY3000**

Note) These figures show the "SS5Y3-10SA2-05D-C6".




n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
<b>L1</b>	103.5	114	124.5	135	145.5	156	166.5	177	187.5	198	208.5	219	229.5	240	250.5
<b>L2</b>	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
<b>L3</b>	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5
<b>L4</b>	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275
<b>L5</b>	16	17	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5

For dimensions of Type 11/Bottom ported type and Type 12/Top ported type, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

## Dimensions

Type 10/Side Ported




Series SY5000

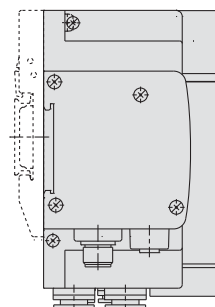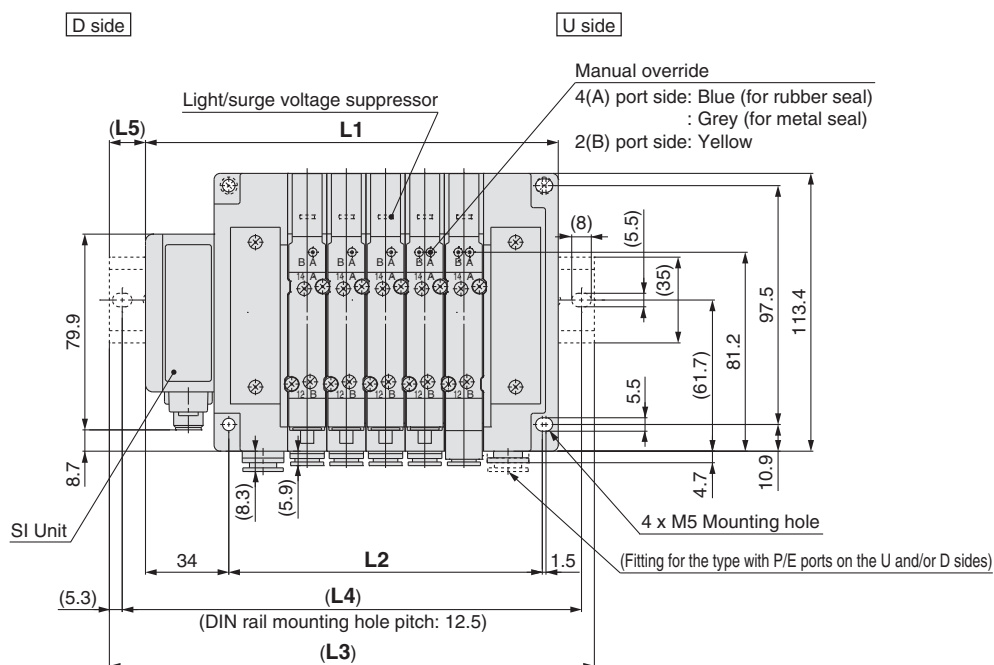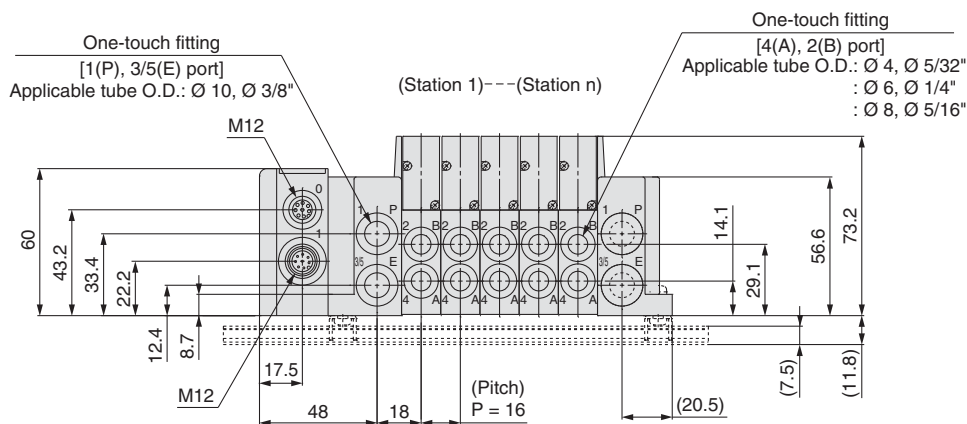

Note) These figures show the "SS5Y5-10SA2-05D-C8".

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	120.5	136.5	152.5	168.5	184.5	200.5	216.5	232.5	248.5	264.5	280.5	296.5	312.5	328.5	344.5
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5
L5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	18	16	14.5

For dimensions of Type 11/Bottom ported type and Type 12/Top ported type, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

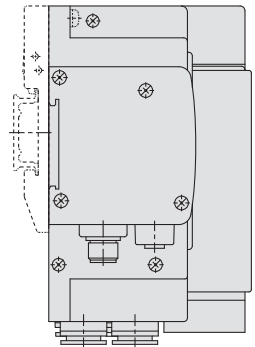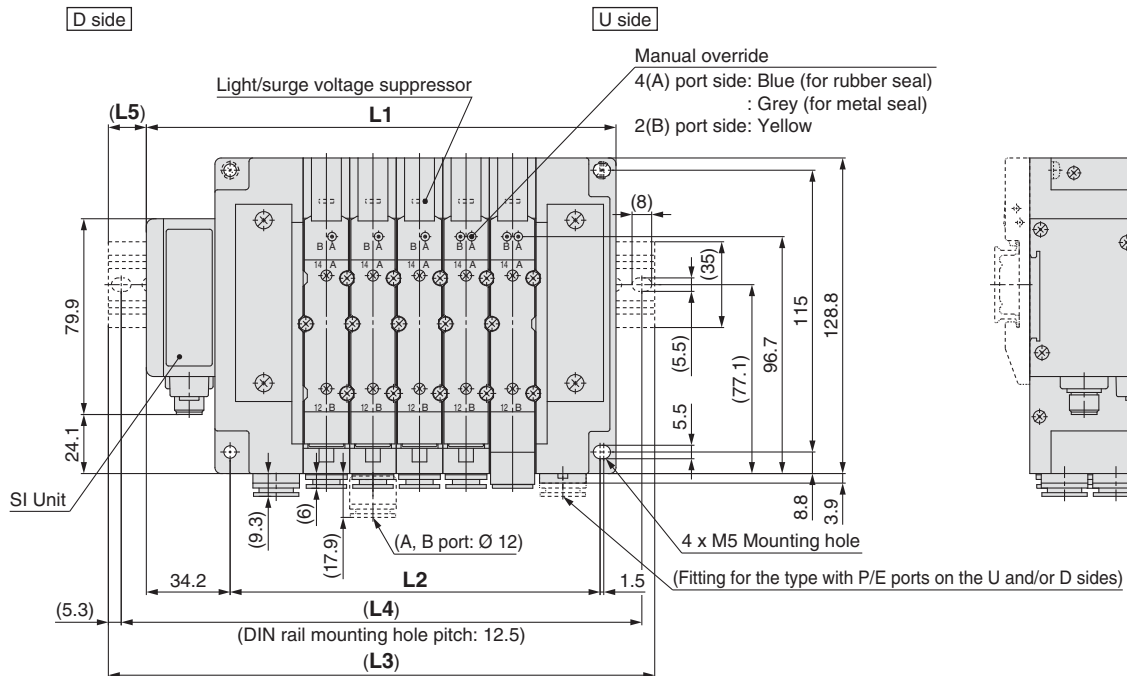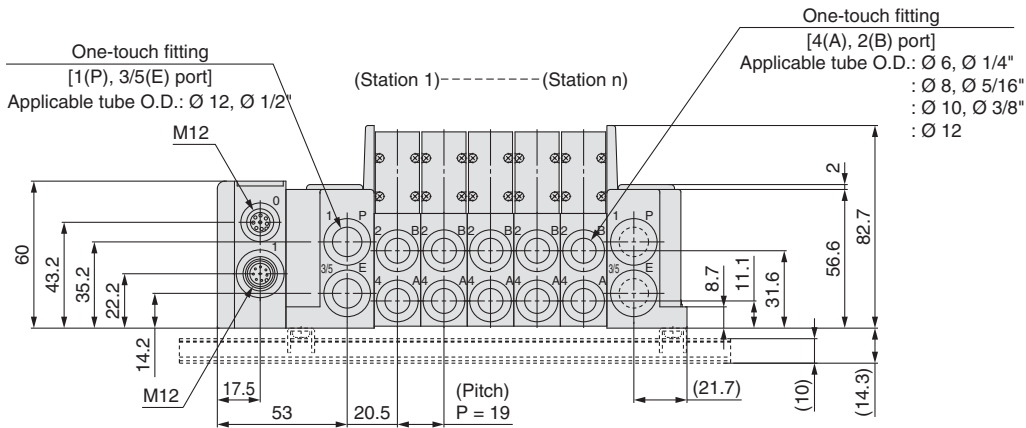**Dimensions****Type 10/Side Ported****Series SY7000**

Note) These figures show the "SS5Y7-10SA2-05D-C10".

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	134.7	153.7	172.7	191.7	210.7	229.7	248.7	267.7	286.7	305.7	324.7	343.7	362.7	381.7	400.7
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5

For dimensions of Type 11/Bottom ported type and Type 12/Top ported type, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).



# Gateway Decentralised System

## 5 Port Solenoid Valve



### Series VQC1000

For detailed specifications, Common Precautions and Specific Product Precautions, refer to the **WEB catalogue** or the VQC1000/2000 series catalogue (CAT. EUS11-101).

#### How to Order Manifold

VV5QC 1 1 - **08** **C6** **SDA2** **N** -  

1
2
3
4
5

#### 1 Valve stations

	Stations	Note
01	1 station	Double wiring
⋮	⋮	
08	8 stations	
01	1 station	Mixed wiring, Specified layout <sup>Note)</sup> (Available up to 16 solenoids)
⋮	⋮	
16	16 stations	

Note) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.) In addition, select the option "K".

#### 2 A, B port size

##### Metric size

<b>C3</b>	Straight piping: Ø 3.2 One-touch fitting
<b>C4</b>	Straight piping: Ø 4 One-touch fitting
<b>C6</b>	Straight piping: Ø 6 One-touch fitting
<b>M5</b>	Straight piping: M5 thread
<b>CM</b> <sup>Note 1)</sup>	Straight piping: Mixed sizes and with port plug
<b>L3</b>	Top ported elbow: Ø 3.2 One-touch fitting
<b>L4</b>	Top ported elbow: Ø 4 One-touch fitting
<b>L6</b>	Top ported elbow: Ø 6 One-touch fitting
<b>L5</b>	Top ported elbow: M5 thread
<b>B3</b>	Bottom ported elbow: Ø 3.2 One-touch fitting
<b>B4</b>	Bottom ported elbow: Ø 4 One-touch fitting
<b>B6</b>	Bottom ported elbow: Ø 6 One-touch fitting
<b>B5</b>	Bottom ported elbow: M5 thread
<b>LM</b> <sup>Note 1)</sup>	Elbow piping: Mixed sizes and with port plug
<b>MM</b> <sup>Note 2)</sup>	Mixed size for different types of piping, option installed

##### Inch size

<b>N1</b>	Straight piping: Ø 1/8" One-touch fitting
<b>N3</b>	Straight piping: Ø 5/32" One-touch fitting
<b>N7</b>	Straight piping: Ø 1/4" One-touch fitting
<b>NM</b> <sup>Note 1)</sup>	Straight piping: Mixed sizes and with port plug
<b>LN1</b>	Top ported elbow: Ø 1/8" One-touch fitting
<b>LN3</b>	Top ported elbow: Ø 5/32" One-touch fitting
<b>LN7</b>	Top ported elbow: Ø 1/4" One-touch fitting
<b>BN1</b>	Bottom ported elbow: Ø 1/8" One-touch fitting
<b>BN3</b>	Bottom ported elbow: Ø 5/32" One-touch fitting
<b>BN7</b>	Bottom ported elbow: Ø 1/4" One-touch fitting
<b>LNM</b> <sup>Note 1)</sup>	Elbow piping: Mixed sizes and with port plug
<b>BNM</b> <sup>Note 2)</sup>	Mixed size for different types of piping, option installed

Note 1) Indicate the sizes on the manifold specification sheet.

Note 2) When a combination of straight and elbow piping is or when option such as dual flow fitting assembly is mounted, please mention the mounting conditions in the Manifold Specification.

#### 3 SI Unit (Number of outputs, Max. number of valve stations)

<b>SD0</b>	Without SI Unit
<b>SDA2</b>	16 outputs, 1 to 8 stations (16 stations <sup>Note)</sup> )

Note) ( ): Maximum number of stations for mixed single and double wiring.

#### 4 SI Unit (Output polarity)

<b>—</b>	Positive common
<b>N</b>	Negative common

\* Ensure a match with the common specification of the valve to be used.

\* Select "—" for without SI Unit.

#### 5 Option

<b>—</b>	None
<b>B</b> <sup>Note 1)</sup>	With back pressure check valve (All stations)
<b>D</b>	With DIN bracket, DIN rail with standard length
<b>D0</b>	With DIN bracket, without DIN rail
<b>D□</b> <sup>Note 2)</sup>	With DIN bracket, DIN rail for □ stations
<b>K</b> <sup>Note 3)</sup>	Special wiring specification (Except double wiring)
<b>N</b>	With name plate
<b>R</b> <sup>Note 4)</sup>	External pilot
<b>S</b> <sup>Note 5)</sup>	Built-in silencer, Direct exhaust

\* When multiple symbols are specified, indicate them alphabetically. Example) -BRS

Note 1) When a back pressure check valve is used only for specified station, specify the back pressure check valve part number, and specify the station number to which the valve is mounted, on the manifold specification sheet.

Note 2) □: Specify a longer rail than the length of valve stations.

Example) "-D08"

In this case, the valves will be mounted on the DIN rail for 8 stations, regardless of the number of manifold stations.

Note 3) When single wiring and double wiring are mixed, specify wiring type of each station on the manifold specification sheet.

Note 4) For external pilot option "-R", indicate the external pilot specification "R" for the applicable valves as well.

Note 5) Built-in silencer type does not satisfy IP67.

## How to Order Valves

VQC 1 **1** 0 **0** **N** - **5** **1**

A      B      C      D      E      F

**A** Type of actuation

1	2-position single	<b>A</b> Note)	4-position dual 3-port valve (N.C./N.C.)
2	2-position double	<b>B</b> Note)	4-position dual 3-port valve (N.O./N.O.)
3	3-position closed centre	<b>C</b> Note)	4-position dual 3-port valve (N.C./N.O.)
4	3-position exhaust centre		
5	3-position pressure centre		

Note) Only rubber seal type

**B** Seal type

0	Metal seal
1	Rubber seal

**C** Function

—	Standard (0.4 W)
<b>B</b>	Quick response type (0.95 W)
<b>K</b> Note 2)	High pressure type (1.0 MPa, 0.95 W)
<b>N</b> Note 3)	Negative common
<b>R</b> Note 4)	External pilot

Note 1) When multiple symbols are specified, indicate them alphabetically. However, combination of "B" and "K" is not possible.

Note 2) Metal seal type only

Note 3) When the negative common is specified for the SI Unit, select and mount the valve of negative common.

Note 4) Dual 3-port is not applicable.

**D** Coil voltage

5	24 V DC
---	---------

**E** Light/surge voltage suppressor


—	With light/surge voltage suppressor
---	-------------------------------------

**F** Manual override

—	Non-locking push (tool required)
<b>B</b>	Push-turn locking (tool required)
<b>C</b>	Turn locking (manual)
<b>D</b>	Slide locking (manual)

## How to Order Manifold Assembly


## Example

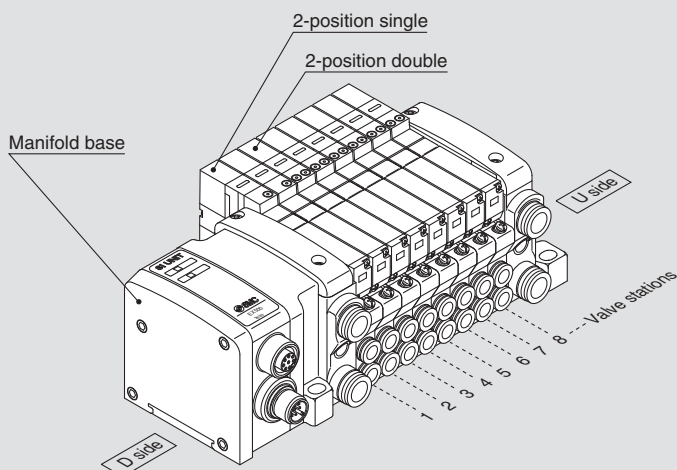

VV5QC11-08C6SDA2N ... 1 set (Manifold base part number)  
 \* VQC1100N-51 ..... 2 sets (2-position single part number)  
 \* VQC1200N-51 ..... 6 sets (2-position double part number)  
 ↳ The asterisk denotes the symbol for assembly.  
 Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.

Dimensions

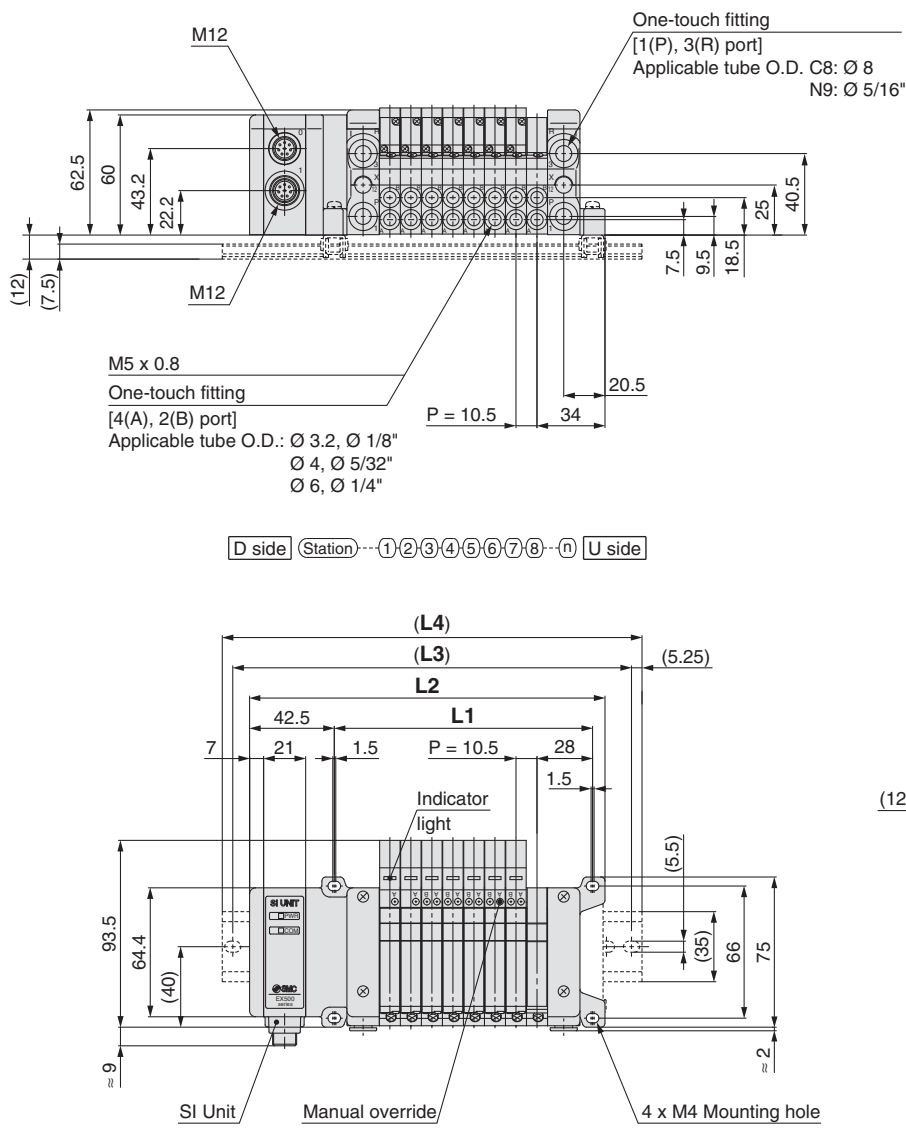

Formula: L1 = 10.5n + 45, L2 = 10.5n + 93.5 n: Stations (Maximum 16 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	55.5	66	76.5	87	97.5	108	118.5	129	139.5	150	160.5	171	181.5	192	202.5	213
L2	104	114.5	125	135.5	146	156.5	167	177.5	188	198.5	209	219.5	230	240.5	251	261.5
L3	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5
L4	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298

# Gateway Decentralised System

## 5 Port Solenoid Valve

### Series VQC2000



For detailed specifications, Common Precautions and Specific Product Precautions, refer to the **WEB catalogue** or the VQC1000/2000 series catalogue (CAT. EUS11-101).

#### How to Order Manifold

VV5QC 2 1 - **08** **C8** **SDA2** **N** - **□**

1      2      3      4      5

#### 1 Valve stations

Stations	Note
<b>01</b> 1 station	Double wiring
⋮	
<b>08</b> 8 stations	Mixed wiring, Specified layout <sup>Note)</sup> (Available up to 16 solenoids)
<b>01</b> 1 station	
⋮	
<b>16</b> 16 stations	

Note) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.) In addition, select the option "K".

#### 3 SI Unit (Number of outputs, Max. number of valve stations)

<b>SD0</b>	Without SI Unit
<b>SDA2</b>	16 outputs, 1 to 8 stations (16 stations <sup>Note)</sup> )

Note) ( ): Maximum number of stations for mixed single and double wiring.

#### 2 A, B port size

##### Metric size

<b>C4</b>	Straight piping: Ø 4 One-touch fitting
<b>C6</b>	Straight piping: Ø 6 One-touch fitting
<b>C8</b>	Straight piping: Ø 8 One-touch fitting
<b>CM</b> <sup>Note 1)</sup>	Straight piping: Mixed sizes and with port plug
<b>L4</b>	Top ported elbow: Ø 4 One-touch fitting
<b>L6</b>	Top ported elbow: Ø 6 One-touch fitting
<b>L8</b>	Top ported elbow: Ø 8 One-touch fitting
<b>B4</b>	Bottom ported elbow: Ø 4 One-touch fitting
<b>B6</b>	Bottom ported elbow: Ø 6 One-touch fitting
<b>B8</b>	Bottom ported elbow: Ø 8 One-touch fitting
<b>LM</b> <sup>Note 1)</sup>	Elbow piping: Mixed sizes and with port plug
<b>MM</b> <sup>Note 2)</sup>	Mixed size for different types of piping, option installed

##### Inch size

<b>N1</b>	Straight piping: Ø 1/8" One-touch fitting
<b>N3</b>	Straight piping: Ø 5/32" One-touch fitting
<b>N7</b>	Straight piping: Ø 1/4" One-touch fitting
<b>NM</b> <sup>Note 1)</sup>	Straight piping: Mixed sizes and with port plug
<b>LN1</b>	Top ported elbow: Ø 1/8" One-touch fitting
<b>LN3</b>	Top ported elbow: Ø 5/32" One-touch fitting
<b>LN7</b>	Top ported elbow: Ø 1/4" One-touch fitting
<b>BN1</b>	Bottom ported elbow: Ø 1/8" One-touch fitting
<b>BN3</b>	Bottom ported elbow: Ø 5/32" One-touch fitting
<b>BN7</b>	Bottom ported elbow: Ø 1/4" One-touch fitting
<b>LNM</b> <sup>Note 1)</sup>	Elbow piping: Mixed sizes and with port plug
<b>BNM</b> <sup>Note 2)</sup>	Mixed size for different types of piping, option installed

Note 1) Indicate the sizes on the manifold specification sheet.

Note 2) When a combination of straight and elbow piping is or when option such as dual flow fitting assembly is mounted, please mention the mounting conditions in the Manifold Specification.

#### 4 SI Unit (Output polarity)

—	Positive common
<b>N</b>	Negative common

\* Ensure a match with the common specification of the valve to be used.

\* Select "—" for without SI Unit.

#### 5 Option

—	None
<b>B</b> <sup>Note 1)</sup>	With back pressure check valve (All stations)
<b>D</b>	With DIN bracket, DIN rail with standard length
<b>D0</b>	With DIN bracket, without DIN rail
<b>D□</b> <sup>Note 2)</sup>	With DIN bracket, DIN rail for □ stations
<b>K</b> <sup>Note 3)</sup>	Special wiring specification (Except double wiring)
<b>N</b>	With name plate
<b>R</b> <sup>Note 4)</sup>	External pilot
<b>S</b> <sup>Note 5)</sup>	Built-in silencer, Direct exhaust
<b>T</b> <sup>Note 6)</sup>	P and R ports included on both sides of the U side

\* When multiple symbols are specified, indicate them alphabetically. Example) -BRS

Note 1) When a back pressure check valve is used only for specified station, specify the back pressure check valve part number, and specify the station number to which the valve is mounted, on the manifold specification sheet.

Note 2) □: Specify a longer rail than the length of valve stations.

Example) "D08"

In this case, the valves will be mounted on the DIN rail for 8 stations, regardless of the number of manifold stations.

Note 3) When single wiring and double wiring are mixed, specify wiring type of each station on the manifold specification sheet.

Note 4) For external pilot option "R", indicate the external pilot specification "R" for the applicable valves as well.

Note 5) Built-in silencer type does not satisfy IP67.

Note 6) P and R ports are included on both sides of U side (cylinder port and coil side) with Ø 12 One-touch fittings.

## How to Order Valves

VQC 2 **1** 0 **0** **N** - **5** **1**

A      B      C      D      E      F

### A Type of actuation

1	2-position single	<b>A</b> Note)	4-position dual 3-port valve (N.C./N.C.)
2	2-position double	<b>B</b> Note)	4-position dual 3-port valve (N.O./N.O.)
3	3-position closed centre	<b>C</b> Note)	4-position dual 3-port valve (N.C./N.O.)
4	3-position exhaust centre		
5	3-position pressure centre		

Note) Only rubber seal type

### B Seal type

0	Metal seal
1	Rubber seal

### C Function

—	Standard (0.4 W)
<b>B</b>	Quick response type (0.95 W)
<b>K</b> Note 2)	High pressure type (1.0 MPa, 0.95 W)
<b>N</b> Note 3)	Negative common
<b>R</b> Note 4)	External pilot

Note 1) When multiple symbols are specified, indicate them alphabetically. However, combination of "B" and "K" is not possible.

Note 2) Metal seal type only

Note 3) When the negative common is specified for the SI Unit, select and mount the valve of negative common.

Note 4) Dual 3-port is not applicable.

 
 
 

### D Coil voltage

5	24 V DC
---	---------

### E Light/surge voltage suppressor


—	With light/surge voltage suppressor
---	-------------------------------------

### F Manual override

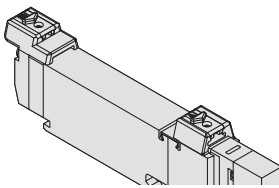—	Non-locking push (tool required)	
<b>B</b>	Push-turn locking (tool required)	
<b>C</b>	Turn locking (manual)	
<b>D</b>	Slide locking (manual)	

## How to Order Manifold Assembly

### Example


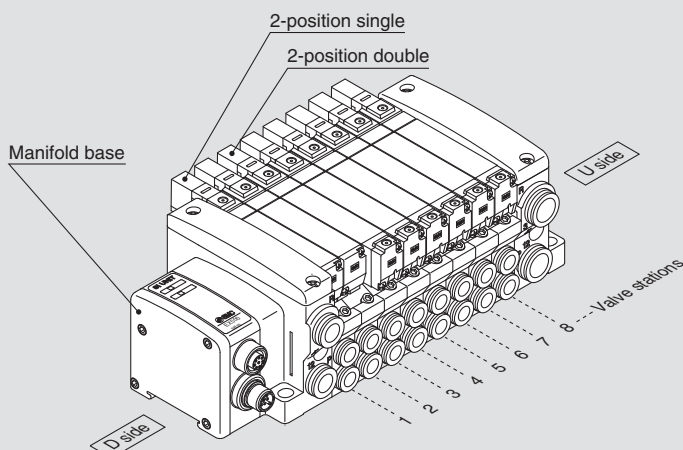


VVQC21-08C6SDA2N.....1 set (Manifold base part number)  
 \* VQC2100-51.....2 sets (2-position single part number)  
 \* VQC2200-51.....6 sets (2-position double part number)

→ The asterisk denotes the symbol for assembly.  
 Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.

## Dimensions

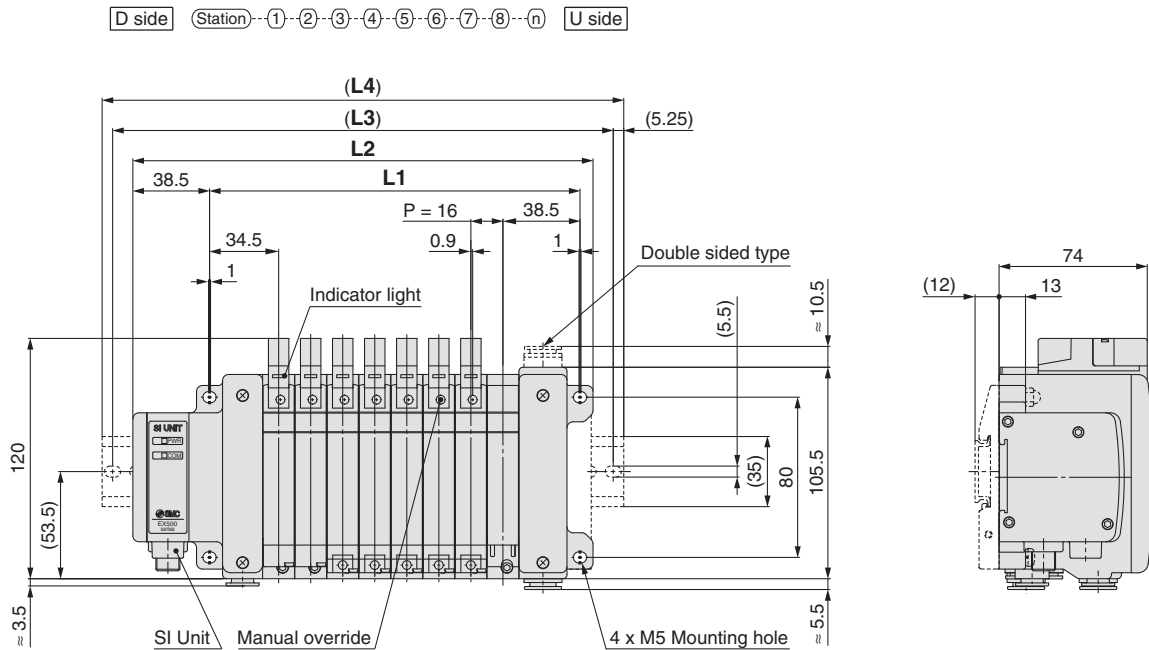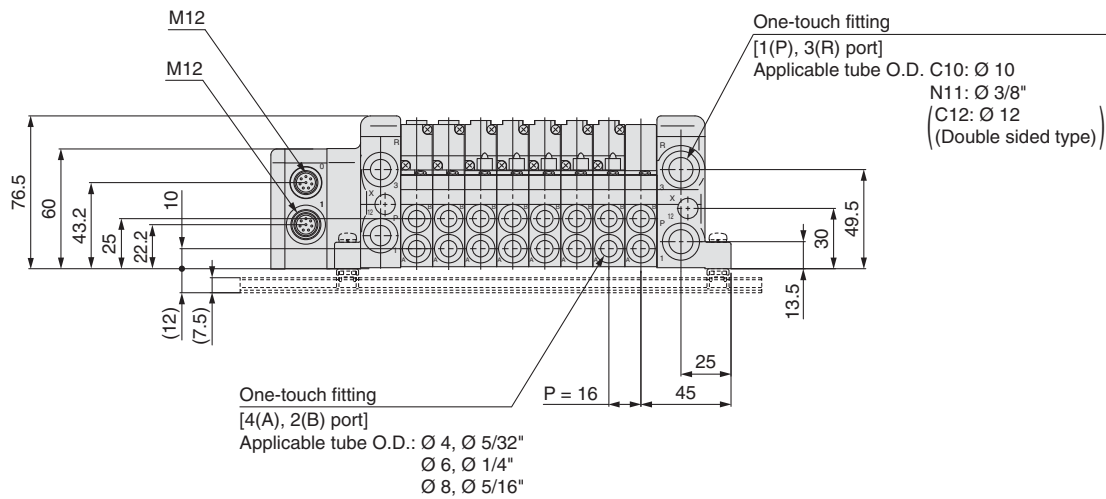

Formula:  $L1 = 16n + 57$ ,  $L2 = 16n + 102$  n: Stations (Maximum 16 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	73	89	105	121	137	153	169	185	201	217	233	249	265	281	297	313
L2	118	134	150	166	182	198	214	230	246	262	278	294	310	326	342	358
L3	137.5	162.5	175	187.5	212.5	225	237.5	250	275	287.5	300	325	337.5	350	362.5	387.5
L4	148	173	185.5	198	223	235.5	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398



# Gateway Decentralised System

## 5 Port Solenoid Valve



### Series VQC4000

For detailed specifications, Common Precautions and Specific Product Precautions, refer to the **WEB catalogue** or the VQC4000/5000 series catalogue (CAT. EUS11-108).

#### How to Order Manifold

VV5QC 4 1 - **08** **02** **SDA2** **N** -

1
2
3
4
5
6

#### 1 Valve stations

Stations	Note
<b>01</b> 1 station	Double wiring
⋮	
<b>08</b> 8 stations	Mixed wiring, Specified layout <sup>Note)</sup> (Available up to 16 solenoids)
<b>01</b> 1 station	
⋮	
<b>16</b> 16 stations	

Note) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.) In addition, select the option "K".

#### 4 SI Unit (Number of outputs, Max. number of valve stations)

<b>SD0</b>	Without SI Unit
<b>SDA2</b>	16 outputs, 1 to 8 stations (16 stations <sup>Note)</sup> )

Note) ( ): Maximum number of stations for mixed single and double wiring.

#### 2 Cylinder port size

<b>C6</b>	With Ø 6 One-touch fitting
<b>C8</b>	With Ø 8 One-touch fitting
<b>C10</b>	With Ø 10 One-touch fitting
<b>C12</b>	With Ø 12 One-touch fitting
<b>N7</b>	Ø 1/4" One-touch fitting
<b>N9</b>	Ø 5/16" One-touch fitting
<b>N11</b>	Ø 3/8" One-touch fitting
<b>02</b>	1/4 <sup>Note)</sup>
<b>03</b>	3/8 <sup>Note)</sup>
<b>B</b>	Bottom ported 1/4 <sup>Note)</sup>
<b>CM</b>	Mixed sizes

Note) Compatible with Rc, G, NPT/NPTF.  
Part number displayed is as shown below.

#### 5 SI Unit (Output polarity)

—	Positive common
<b>N</b>	Negative common

\* Select "—" for without SI Unit.

#### 6 Option

—	None
<b>K</b> <sup>Note)</sup>	Special wiring specification (Except double wiring)

Note) When single wiring and double wiring are mixed, specify wiring type of each station on the manifold specification sheet.

#### 3 Thread type

—	Rc
<b>F</b>	G
<b>N</b>	NPT
<b>T</b>	NPTF

## How to Order Valves

VQC 4 **1** 0 0 **5** **1**

A      B      C      D      E      F

**A** Type of actuation

<b>1</b>	2-position single	<b>4</b>	3-position exhaust centre
<b>2</b>	2-position double	<b>5</b>	3-position pressure centre
<b>3</b>	3-position closed centre	<b>6</b> (Note)	3-position double check

Note) For double check type, refer to the **WEB catalogue** or the VQC4000/5000 series catalogue (CAT. EUS11-108).

**B** Seal type

<b>0</b>	Metal seal
<b>1</b>	Rubber seal

**C** Function

— (Note 1)	Standard (0.95 W)
<b>Y</b>	Low wattage type (0.4 W)
<b>R</b> (Note 2)	External pilot

\* When multiple symbols are specified, indicate them alphabetically.

Note 1) When the power is energised continuously, refer to "Specific Product Precautions 1" in the **WEB catalogue** or the VQC4000/5000 series catalogue (CAT. EUS11-108).


Note 2) For details about the external pilot type, refer to the **WEB catalogue** or the VQC4000/5000 series catalogue (CAT. EUS11-104). In addition, an external pilot type cannot be combined with the double check spacer.

**D** Coil voltage

<b>5</b>	24 V DC
----------	---------


**E** Light/surge voltage suppressor

—	With
<b>E</b>	Without light, with surge voltage suppressor

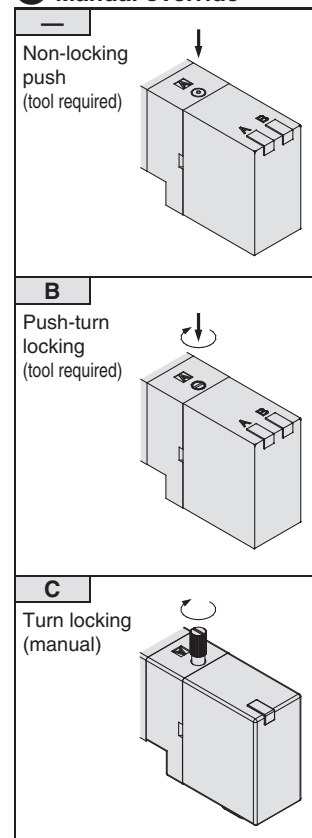**F** Manual override

## How to Order Manifold Assembly

## Example


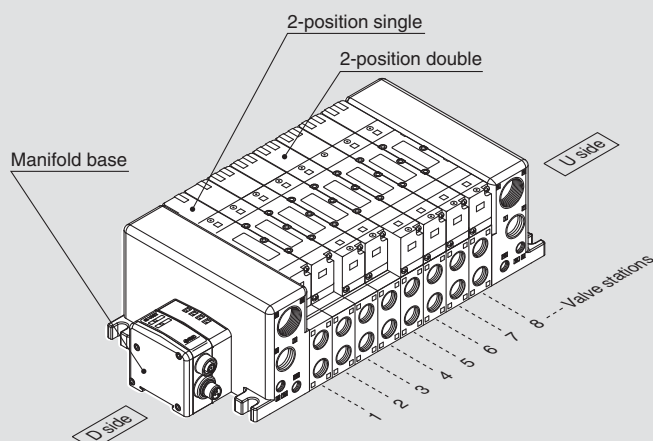


VV5QC41-0802SDA2N.....1 set (Manifold base part number)  
 \* VQC4100-51 .....4 sets (2-position single part number)  
 \* VQC4200-51 .....4 sets (2-position double part number)  
 ↳ The asterisk denotes the symbol for assembly.  
 Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.

# Series VQC4000

## Dimensions

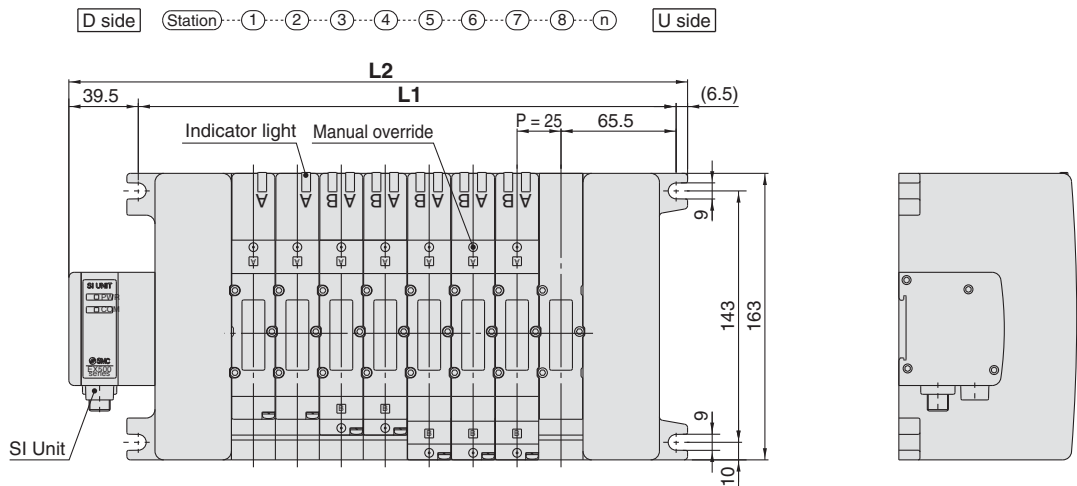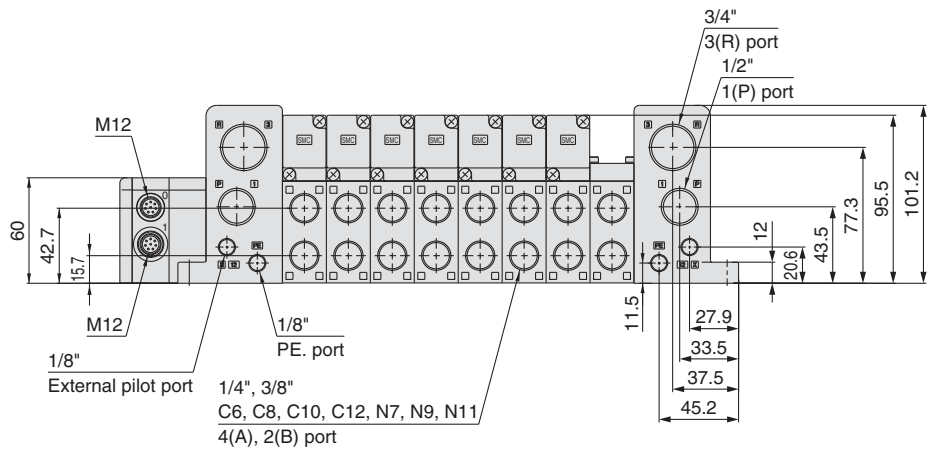

Formula:  $L1 = 25n + 106$ ,  $L2 = 25n + 152$  n: Stations (Maximum 16 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	177	202	227	252	277	302	327	352	377	402	427	452	477	502	527	552

# Gateway Decentralised System

## 5 Port Solenoid Valve

### Series VQC5000



For detailed specifications, Common Precautions and Specific Product Precautions, refer to the **WEB catalogue** or the VQC4000/5000 series catalogue (CAT. EUS11-108).

#### How to Order Manifold

VV5QC 5 1 - **08** **03** **SDA2** **N** -

1
2
3
4
5
6

#### 1 Valve stations

	Stations	Note
01	1 station	Double wiring
⋮	⋮	
08	8 stations	
01	1 station	Mixed wiring, Specified layout <sup>Note)</sup> (Available up to 12 solenoids)
⋮	⋮	
12	12 stations	

Note) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.) In addition, select the option "K".

#### 4 SI Unit (Number of outputs, Max. number of valve stations)

SD0	Without SI Unit
SDA2	16 outputs, 1 to 8 stations (12 stations <sup>Note)</sup> )

Note) ( ): Maximum number of stations for mixed single and double wiring.

#### 2 Cylinder port size

03	3/8 <sup>Note)</sup>
04	1/2 <sup>Note)</sup>
B	Bottom ported 1/4 <sup>Note)</sup>
CM	Mixed sizes

Note) Compatible with Rc, G, NPT/NPTF.  
Part number displayed is as shown below.

#### 5 SI Unit (Output polarity)

—	Positive common
N	Negative common

\* Select "—" for without SI Unit.

#### 6 Option

—	None
K <sup>Note)</sup>	Special wiring specification (Except double wiring)

Note) When single wiring and double wiring are mixed, specify wiring type of each station on the manifold specification sheet.

#### 3 Thread type

—	Rc
F	G
N	NPT
T	NPTF

## How to Order Valves

VQC5 **1** **0** **0** **□** - **5** **□** **□** **1**

A      B      C      D      E      F

### A Type of actuation

<b>1</b>	2-position single	<b>4</b>	3-position exhaust centre
<b>2</b>	2-position double	<b>5</b>	3-position pressure centre
<b>3</b>	3-position closed centre	<b>6</b> (Note)	3-position double check

Note) For double check type, refer to the **WEB catalogue** or the VQC4000/5000 series catalogue (CAT. EUS11-108).

### B Seal type

<b>0</b>	Metal seal
<b>1</b>	Rubber seal

### C Function

— (Note 1)	Standard (0.95 W)
<b>Y</b> (Note 1)	Low wattage type (0.4 W)
<b>R</b> (Note 2)	External pilot

\* When multiple symbols are specified, indicate them alphabetically.

Note 1) When the power is energised continuously, refer to "Specific Product Precautions 1" in the **WEB catalogue** or the VQC4000/5000 series catalogue (CAT. EUS11-108).

Note 2) For details about the external pilot type, refer to the **WEB catalogue** or the VQC4000/5000 series catalogue (CAT. EUS11-104). In addition, an external pilot type cannot be combined with the double check spacer.


### D Coil voltage

<b>5</b>	24 V DC
----------	---------

### E Light/surge voltage suppressor


—	With
<b>E</b>	Without light, with surge voltage suppressor

### F Manual override

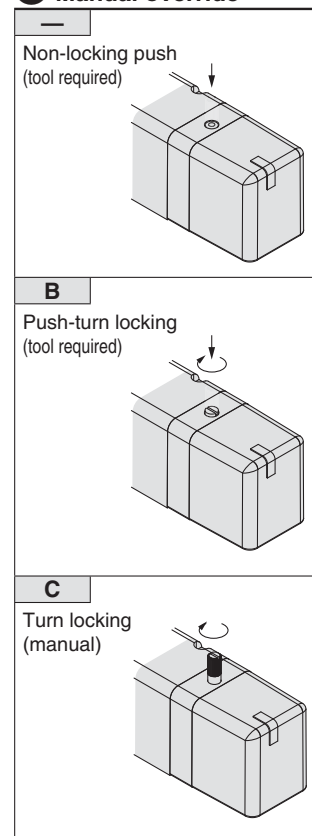

## How to Order Manifold Assembly

### Example

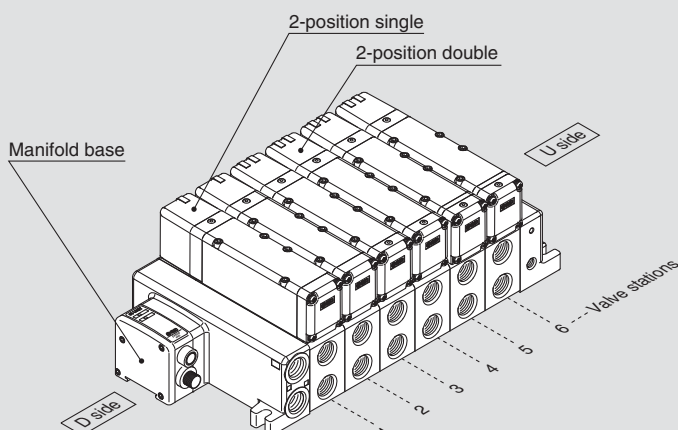


VV5QC51-0603SDA2N.....1 set (Manifold base part number)  
 \* VQC5100-51.....2 sets (2-position single part number)  
 \* VQC5200-51.....2 sets (2-position double part number)  
 \* VQC5300-51.....2 sets (3-position closed centre part number)

→ The asterisk denotes the symbol for assembly.  
 Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.

## Dimensions

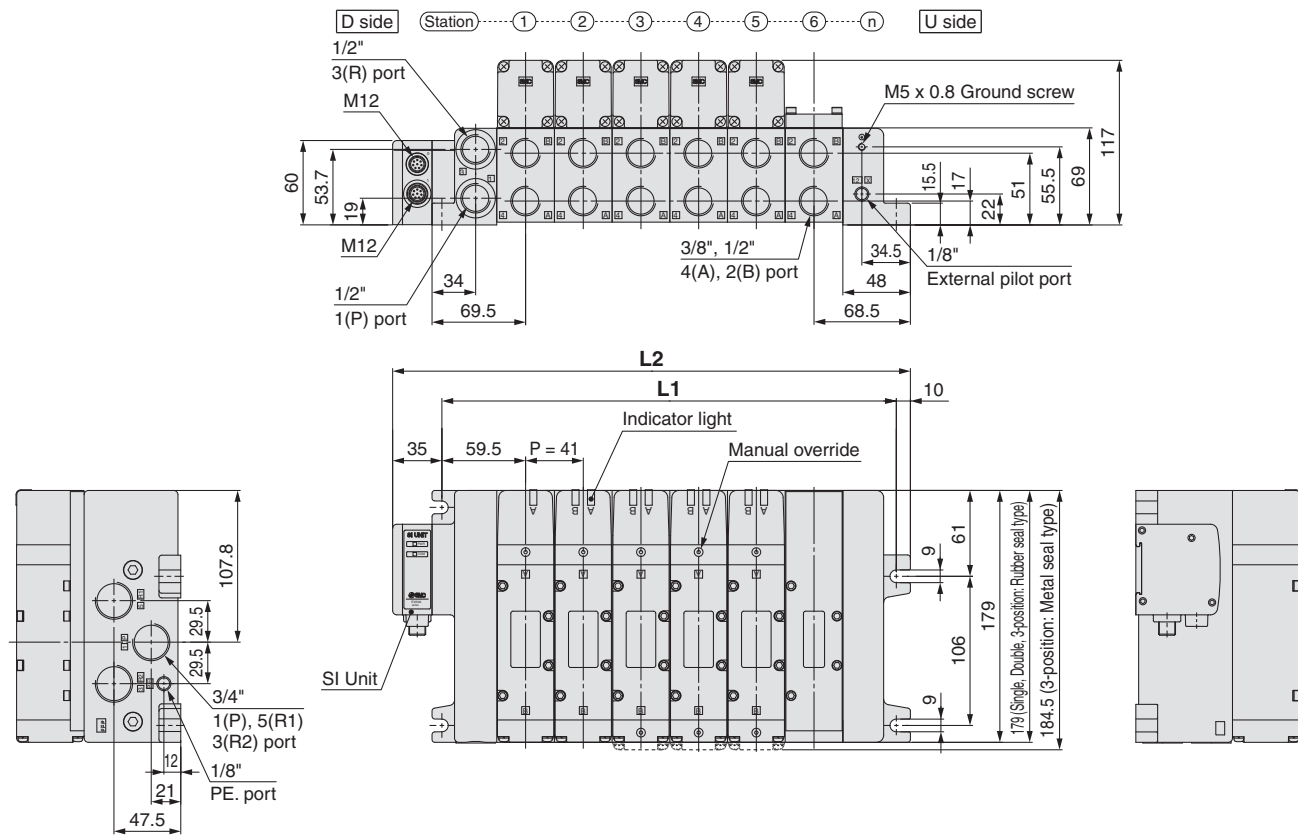

Formula:  $L1 = 41n + 77$ ,  $L2 = 41n + 122$  n: Stations (Maximum 12 stations)

$\frac{n}{L}$	1	2	3	4	5	6	7	8	9	10	11	12
<b>L1</b>	118	159	200	241	282	323	364	405	446	487	528	569
<b>L2</b>	163	204	245	286	327	368	409	450	491	532	573	614



# Gateway Decentralised System

## 5 Port Solenoid Valve

### Series S0700



For detailed specifications, Common Precautions and Specific Product Precautions, refer to the **WEB catalogue** or the S0700 series catalogue (CAT. EUS11-88).

#### How to Order Manifold

**SS0750-08C4C8SDA2N-B**

1
2
3
4
5
6

#### 1 Valve stations

	Stations	Note
01	1 station	Double wiring
⋮	⋮	
08	8 stations	Mixed wiring, Specified layout <sup>Note)</sup> (Available up to 16 solenoids)
01	1 station	
⋮	⋮	
16	16 stations	

Note) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.) In addition, select the option "K".

#### 4 SI Unit (Number of outputs, Max. number of valve stations)

<b>SD0</b>	Without SI Unit
<b>SDA2</b>	16 outputs, 1 to 8 stations (16 stations) <sup>Note)</sup>

Note) ( ): Maximum number of stations for mixed single and double wiring.

#### 2 A, B port size

##### Metric size

<b>C2</b>	Ø 2 One-touch fitting
<b>C3</b>	Ø 3.2 One-touch fitting
<b>C4</b>	Ø 4 One-touch fitting
<b>CM</b> <sup>Note)</sup>	Mixed sizes and with port plug

##### Inch size

<b>N1</b>	Ø 1/8" One-touch fitting
<b>N3</b>	Ø 5/32" One-touch fitting
<b>NM</b> <sup>Note)</sup>	Mixed sizes and with port plug

Note) Indicate the sizes on the manifold specification sheet.

#### 3 P, R port size

##### Metric size

—	Ø 8 One-touch fitting <sup>Note)</sup>
<b>C6</b>	Ø 6 One-touch fitting
<b>C8</b>	Ø 8 One-touch fitting

##### Inch size

<b>N7</b>	Ø 1/4" One-touch fitting
<b>N9</b>	Ø 5/16" One-touch fitting

Note) When A and B ports are inch size, the One-touch fitting will be changed to Ø 5/16".

#### 5 SI Unit (Output polarity)

—	Positive common
<b>N</b>	Negative common

\* Ensure a match with the common specification of the valve to be used.

\* Select "—" for without SI Unit.

#### 6 Option

—	None
<b>B</b> <sup>Note 1)</sup>	With back pressure check valve (All stations)
<b>D</b>	With DIN bracket, DIN rail with standard length
<b>D0</b>	With DIN bracket, without DIN rail
<b>D□</b> <sup>Note 2)</sup>	With DIN bracket, DIN rail for □ stations
<b>K</b> <sup>Note 3)</sup>	Special wiring specification (Except double wiring)
<b>N</b>	With name plate
<b>R</b> <sup>Note 4)</sup>	External pilot
<b>S</b>	Built-in silencer

\* When multiple symbols are specified, indicate them alphabetically. Example) "-BKN"

Note 1) When a back pressure check valve is used only for specified station, specify the back pressure check valve part number, and specify the station number to which the valve is mounted, on the manifold specification sheet.

Note 2) □: Specify a longer rail than the length of valve stations.  
Example) "-D08"

In this case, the valves will be mounted on the DIN rail for 8 stations, regardless of the number of manifold stations.

Note 3) When single wiring and double wiring are mixed, specify wiring type of each station on the manifold specification sheet.

Note 4) For external pilot option "-R", indicate the external pilot specification "R" for the applicable valves as well.

## How to Order Valves

S07 **1** 0 **5** - **5**

A                  B                  C

### A Type of actuation

<b>1</b>	2-position single
<b>2</b>	2-position double
<b>A</b> (Note)	4-position dual 3-port (N.C. + N.C.) [Exhaust centre]
<b>B</b> (Note)	4-position dual 3-port (N.O. + N.O.) [Pressure centre]
<b>C</b> (Note)	4-position dual 3-port (N.C. + N.O.)

Note) For 4-position dual 3-port, select “—”  
internal pilot.

### B Function

—	Internal pilot
<b>R</b> (Note)	External pilot


Note) For external pilot, select “1” 2-position  
single or “2” 2-position double.

### C Rated voltage

<b>5</b>	24 V DC
----------	---------

## How to Order Manifold Assembly

### Example

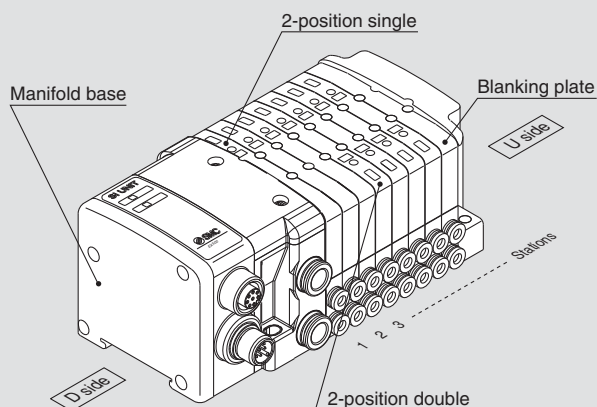


SS0750-08C4SDA2.....1 set (Manifold base part number)  
 \* S0710-5 .....3 sets (2-position single part number)  
 \* S0720-5 .....4 sets (2-position double part number)  
 \* SS0700-10A-1 .....1 set (Blanking plate part number)  
 → The asterisk denotes the symbol for assembly.  
 Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.

Series S0700

Dimensions

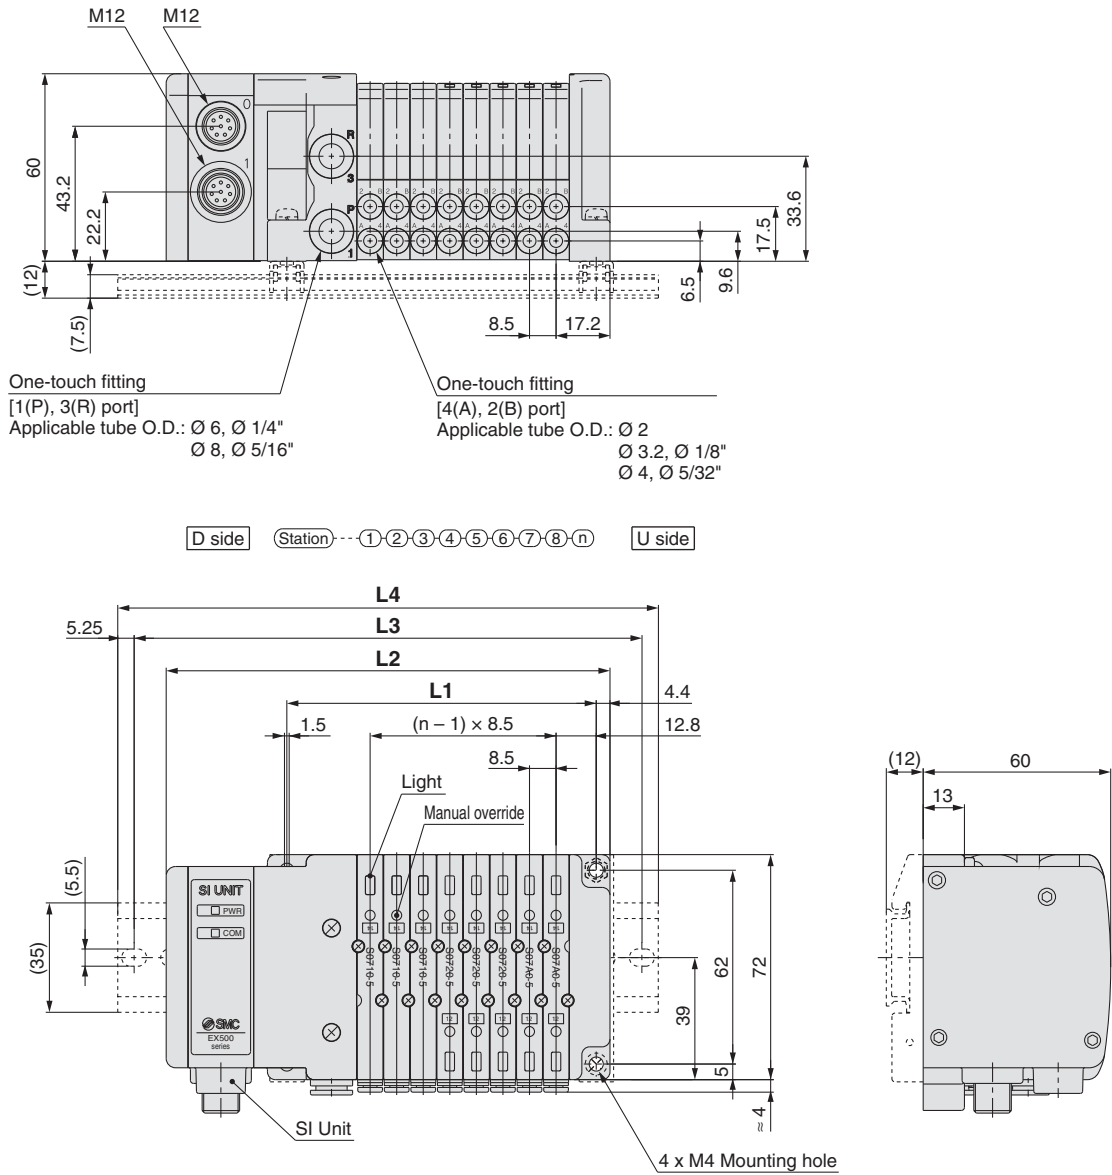

Dimensions

Formula: L1 = 8.5n + 31, L2 = 8.5n + 74 n: Stations (Maximum 16 stations)

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	48	56.5	65	73.5	82	90.5	99	107.5	116	124.5	133	141.5	150	158.5	167
L2	91	99.5	108	116.5	125	133.5	142	150.5	159	167.5	176	184.5	193	201.5	210
L3	112.5	125	137.5	137.5	150	162.5	162.5	175	187.5	187.5	200	212.5	212.5	225	237.5
L4	123	135.5	148	148	160.5	173	173	185.5	198	198	210.5	223	223	235.5	248

# Gateway Decentralised System


## 5 Port Solenoid Valve

Series **SV1000/2000/3000/4000**



For detailed specifications, Common Precautions and Specific Product Precautions, refer to the **WEB catalogue** or the SV series catalogue (CAT. EUS11-81).

### How to Order Manifold

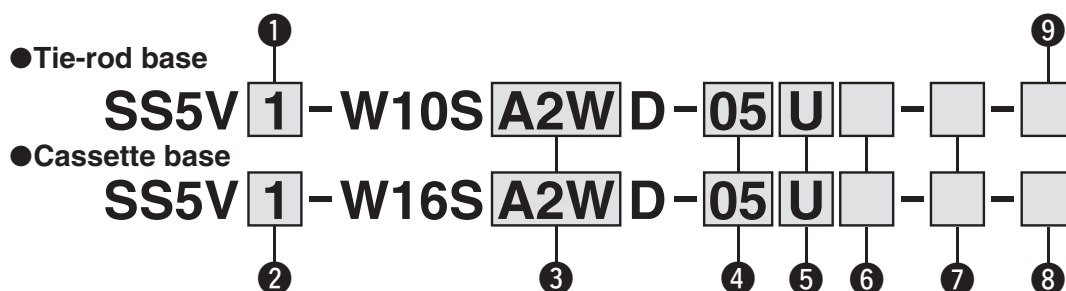

#### 1 Series

1	SV1000
2	SV2000
3	SV3000
4	SV4000

#### 2 Series

1	SV1000
2	SV2000

#### 3 SI Unit (Number of outputs, Output polarity, Max. number of valve stations)

0	Without SI Unit
A2W	16 outputs, Positive common, 1 to 8 stations (16 stations) <i>Note</i>

*Note* ( ) : Maximum number of stations for mixed single and double wiring.

#### 4 Valve stations

Stations	Note
02	2 stations
08	8 stations
02	2 stations
16	16 stations

*Note* 1) Double wiring: single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

*Note* 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

#### 5 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
B	Both sides (2 to 16 stations)

#### 6 SUP/EXH block assembly

—	Internal pilot
S	Internal pilot, Built-in silencer <i>Note</i>
R	External pilot
RS	External pilot, Built-in silencer <i>Note</i>

*Note*) When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### 8 DIN rail length specified

—	With DIN bracket, DIN rail with standard length
3 <i>Note</i>	With DIN bracket, DIN rail for 3 stations
16 <i>Note</i>	With DIN bracket, DIN rail for 16 stations

*Note*) Specify a longer rail than the length of valve stations.

\* If the DIN rail must be mounted without an SI Unit, select "D0" and order the DIN rail separately. Refer to L3 of the dimensions for the DIN rail length. For the DIN rail part number, refer to the **WEB catalogue** or the SY series catalogue (CAT. EUS11-103).

#### 7 A, B port size

##### Metric size

Symbol	A, B port	P, E port	Applicable series
C3	Ø 3.2 One-touch fitting	Ø 8	SV1000
C4	Ø 4 One-touch fitting	One-touch fitting	
C6	Ø 6 One-touch fitting	Ø 10	SV2000
C8	Ø 8 One-touch fitting	One-touch fitting	
C6	Ø 6 One-touch fitting	Ø 12	SV3000
C8	Ø 8 One-touch fitting	One-touch fitting	
C10	Ø 10 One-touch fitting	Ø 12	SV4000
C8	Ø 8 One-touch fitting	One-touch fitting	
C10	Ø 10 One-touch fitting	One-touch fitting	
C12	Ø 12 One-touch fitting	One-touch fitting	
02	Rc1/4	Rc3/8	
03	Rc3/8	G3/8	
02F	G1/4		
03F	G3/8		
M <i>Note</i>	A, B port mixed		

##### Inch size

Symbol	A, B port	P, E port	Applicable series
N1	Ø 1/8" One-touch fitting	Ø 5/16"	SV1000
N3	Ø 5/32" One-touch fitting	One-touch fitting	
N7	Ø 1/4" One-touch fitting	Ø 3/8"	SV2000
N3	Ø 5/32" One-touch fitting	One-touch fitting	
N7	Ø 1/4" One-touch fitting	Ø 3/8"	SV3000
N9	Ø 5/16" One-touch fitting	One-touch fitting	
N11	Ø 3/8" One-touch fitting	One-touch fitting	
N9	Ø 5/16" One-touch fitting	Ø 3/8"	SV4000
N11	Ø 3/8" One-touch fitting	One-touch fitting	
02N	NPT1/4	NPT3/8	
03N	NPT3/8	NPTF3/8	
02T	NPTF1/4		
03T	NPTF3/8		
M <i>Note</i>	A, B port mixed		

*Note*) Indicate the sizes on the manifold specification sheet.

\* The X and PE port size of external pilot type [R, RS] are Ø 4 (mm) or Ø 5/32" (inch) for the SV1000/2000 series, and Ø 6 (mm) or Ø 1/4" (inch) for the SV3000/4000 series.

# Series SV1000/2000/3000/4000

## How to Order Valves

SV **1** **1** 00 **□** **□** - **5** F **□** **□** - **□** - **□**

A      B                      C      D                      E                      F      G                      H                      I

### A Series

1	SV1000
2	SV2000
3	SV3000
4	SV4000

### B Type of actuation

1	2-position single
2	2-position double
3	3-position closed centre
4	3-position exhaust centre
5	3-position pressure centre
A Note)	4-position dual 3-port valve (N.C./N.C.)
B Note)	4-position dual 3-port valve (N.O./N.O.)
C Note)	4-position dual 3-port valve (N.C./N.O.)

Note) Select the SV1000 or SV2000 series for the 4-position dual 3-port valve.

\* Select the internal pilot type for the 4-position dual 3-port valve.

### C Pilot type

—	Internal pilot
R	External pilot

### D Back pressure check valve

—	None
K	Built-in

\* Built-in back pressure check valve type is applicable to the SV1000 series only.

\* The product with a back pressure check valve is not available for 3-position valves.

\* Refer to the **WEB catalogue** for built-in back pressure check valve type.


### E Rated voltage

5	24 V DC
---	---------

### F Light/surge voltage suppressor

U	With light/surge voltage suppressor
R	Without light, with surge voltage suppressor

### G Manual override

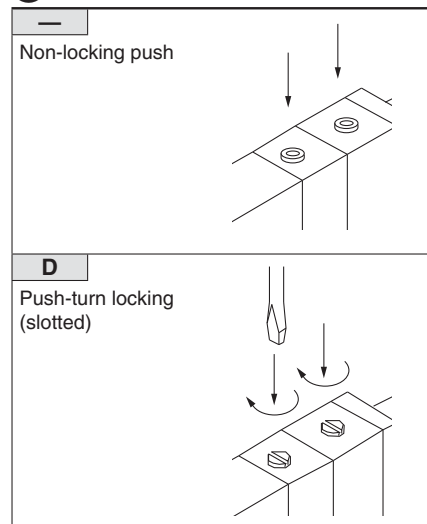

### H Manifold block

If stations are to be added, order the product with manifold block.


(For details, refer to the **WEB catalogue**.)

### I Made to Order

—	—
X90	Main valve fluororubber specification (For details, refer to the <b>WEB catalogue</b> .)

## How to Order Manifold Assembly





### Example

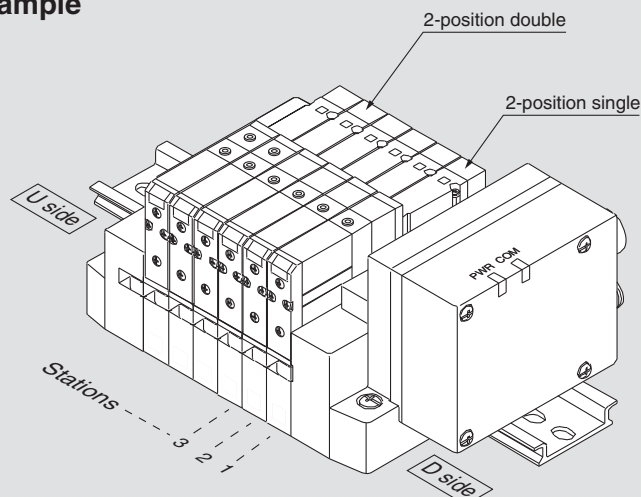

SS5V1-W16SA2WD-06B-C6.....1 set (Manifold base part number)  
 \* SV1100-5FU .....4 sets (2-position single part number)  
 \* SV1200-5FU .....2 sets (2-position double part number)

The asterisk denotes the symbol for assembly.  
 Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.

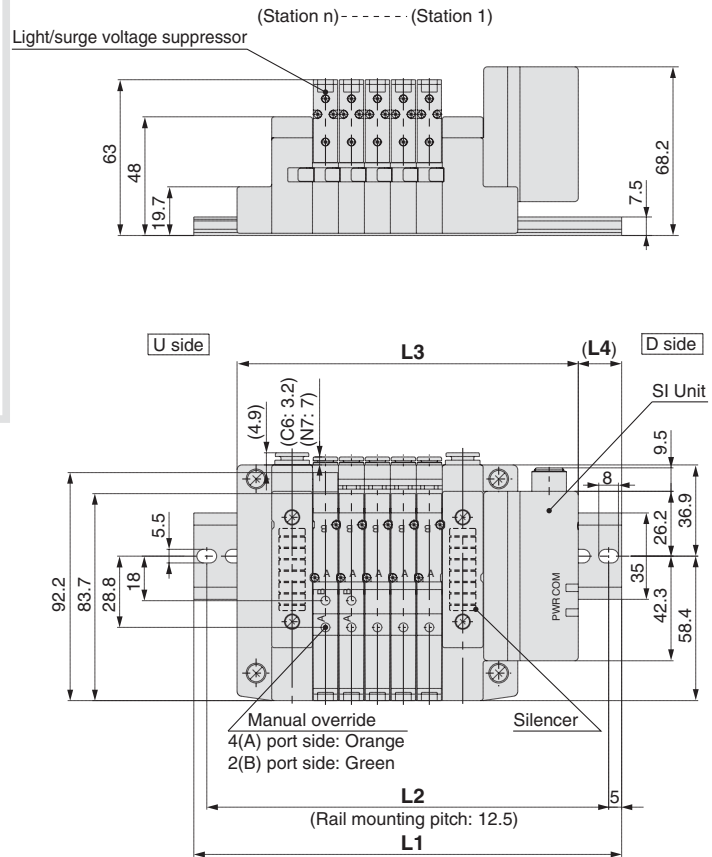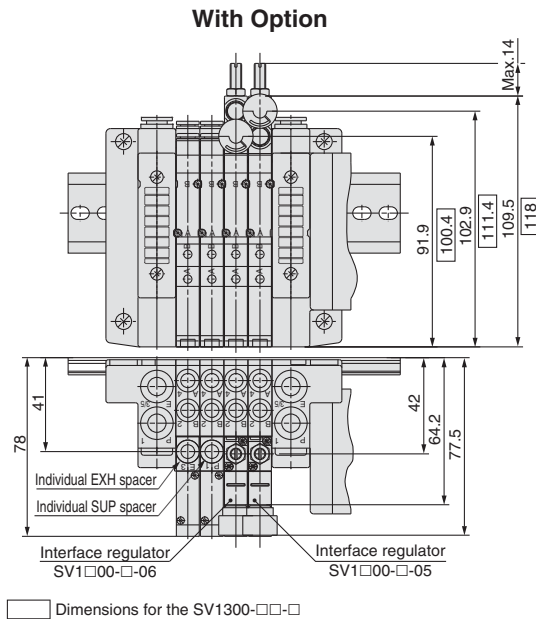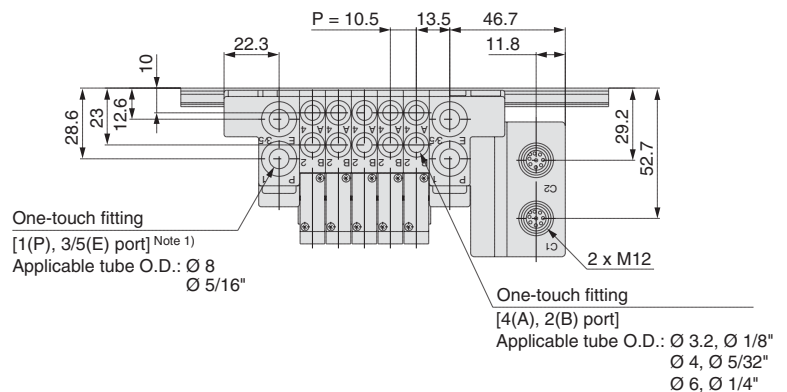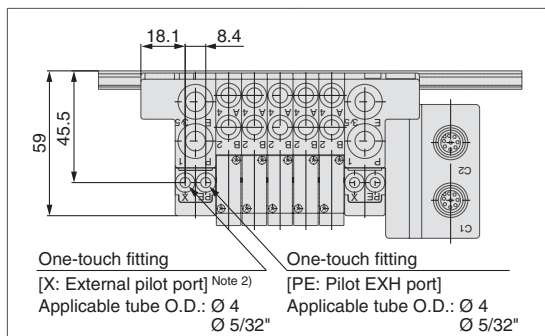**Dimensions****With External Pilot Specification**

Note 1) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.

Note 2) External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

**L: Dimensions**

n: Stations



L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273	285.5
L2		125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5	275
L3		106.5	117	127.5	138	148.5	159	169.5	180	190.5	201	211.5	222	232.5	243	253.5
L4		14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16





## Dimensions

Cassette Base

Series SV2000

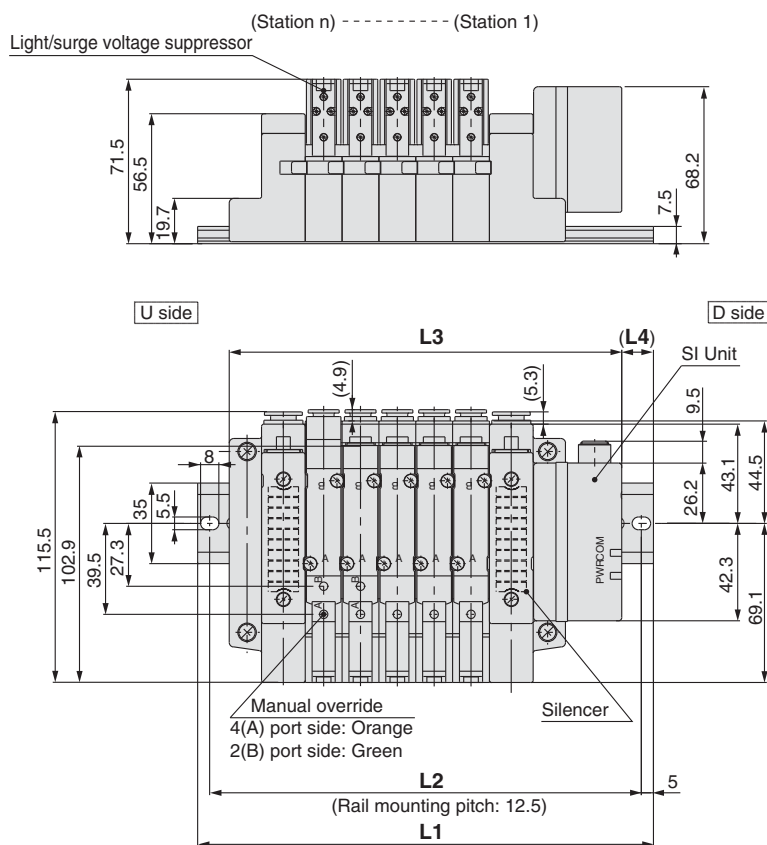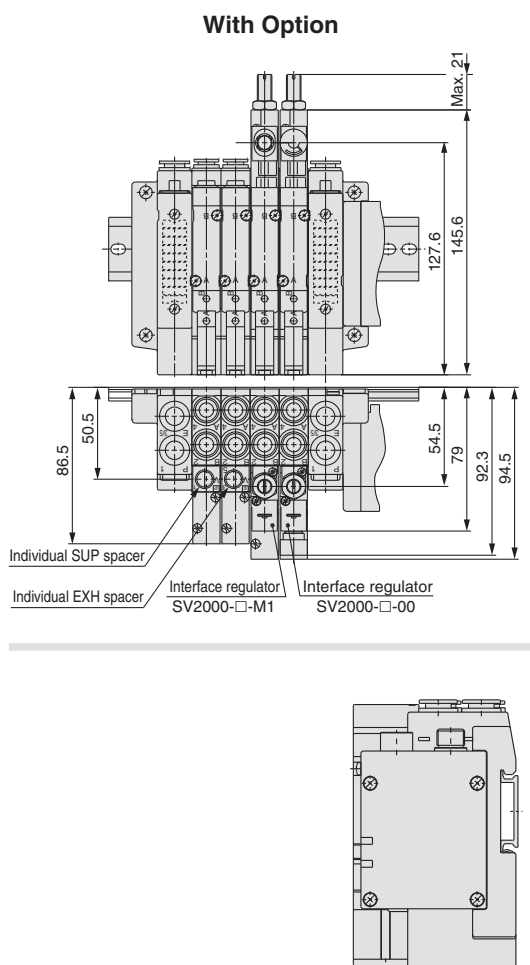







## With External Pilot Specification

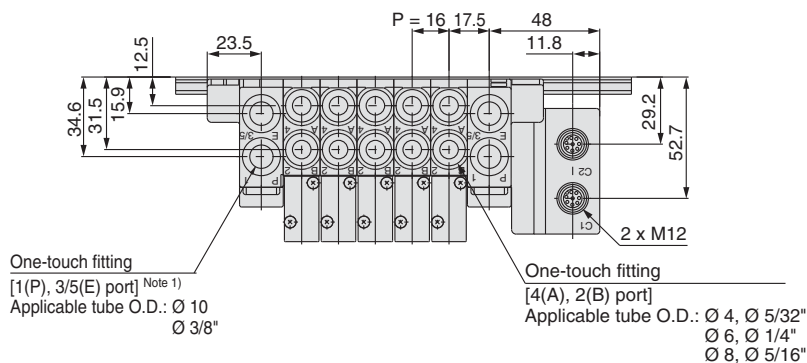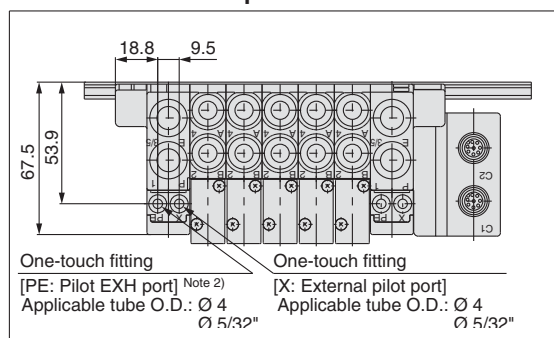

Note 1) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.  
 Note 2) External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

## L: Dimensions

L: Dimensions															n: Stations	
L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	
L1	148	173	185.5	198	210.5	235.5	248	260.5	285.5	298	310.5	323	348	360.5	373	
L2	137.5	162.5	175	187.5	200	225	237.5	250	275	287.5	300	312.5	337.5	350	362.5	
L3	122.5	138.5	154.5	170.5	186.5	202.5	218.5	234.5	250.5	266.5	282.5	298.5	314.5	330.5	346.5	
L4	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	

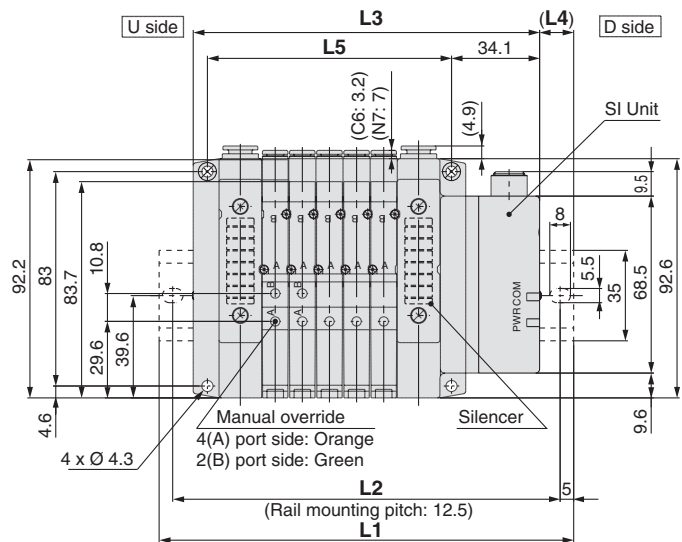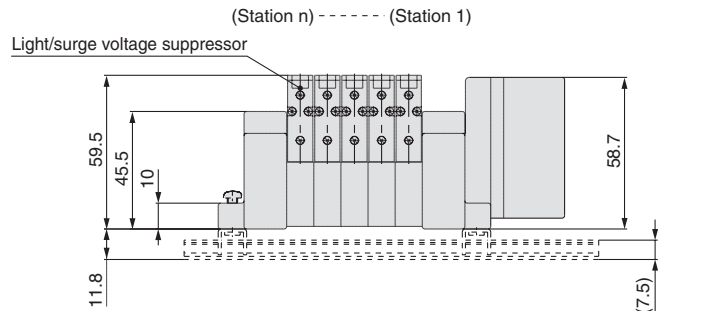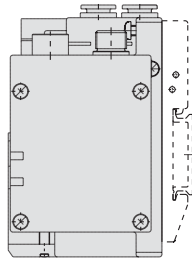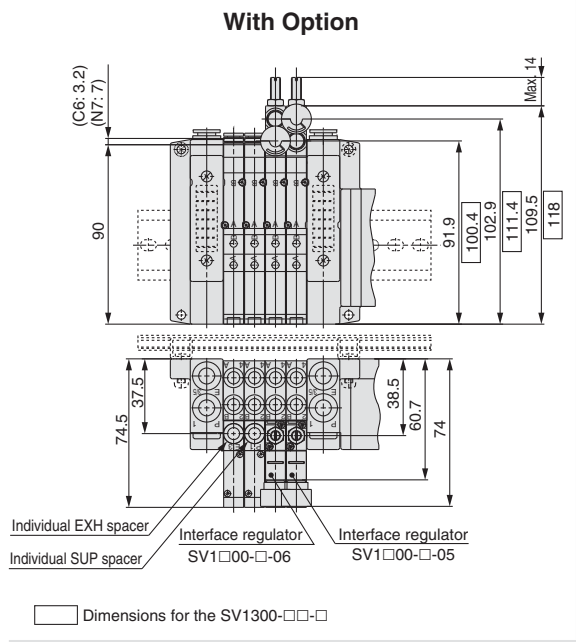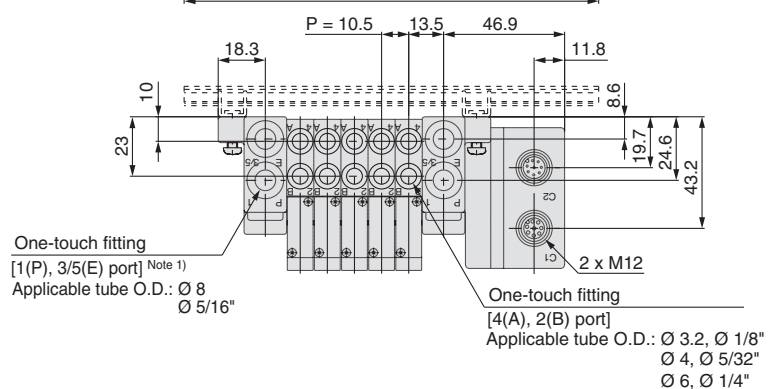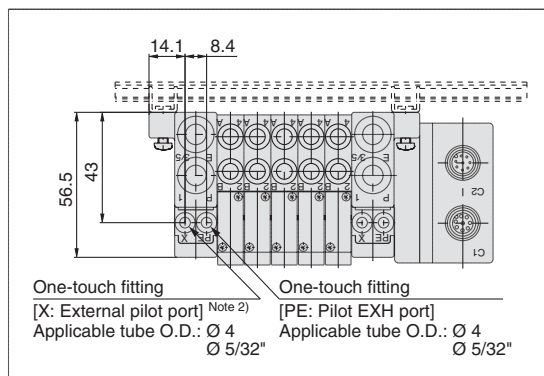**Dimensions****Tie-rod Base****Series SV1000****With External Pilot Specification**

Note 1) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.

Note 2) External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

**L: Dimensions**

n: Stations


L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		135.5	148	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273
L2		125	137.5	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5
L3		102.6	113.1	123.6	134.1	144.6	155.1	165.6	176.1	186.6	197.1	207.6	218.1	228.6	239.1	249.6
L4		16.5	17.5	12	13	14	15	16	17	12	13	14	15	16	17	11.5
L5		63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210

## Dimensions



Tie-rod Base

Series SV2000



With Option

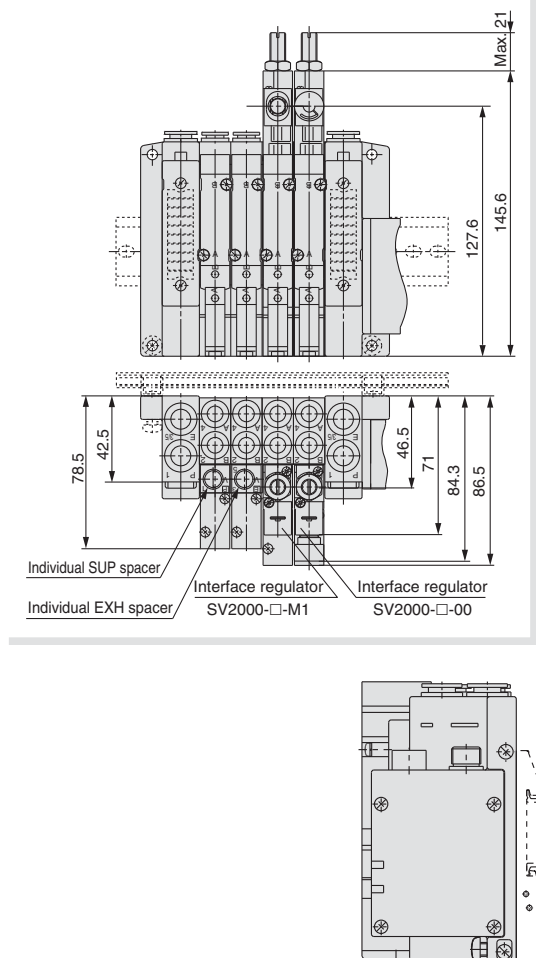

(Station n) ----- (Station 1)  
Light/surge voltage suppressor

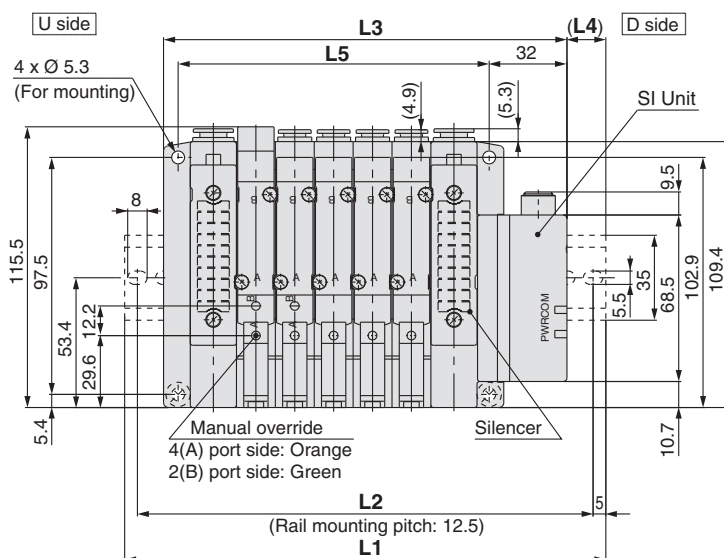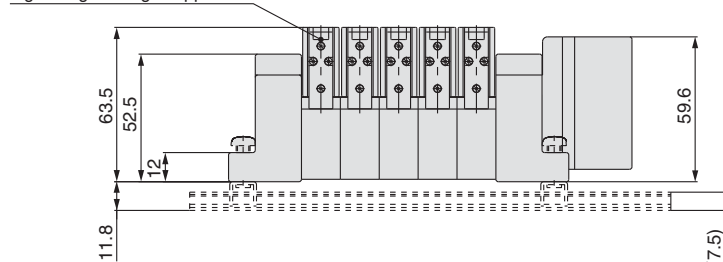

With External Pilot Specification



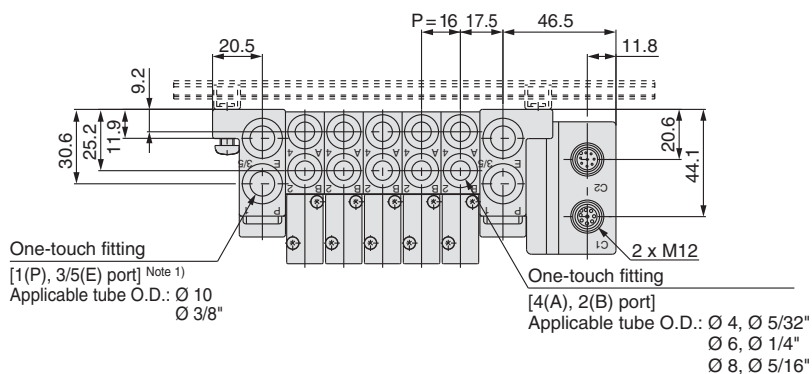
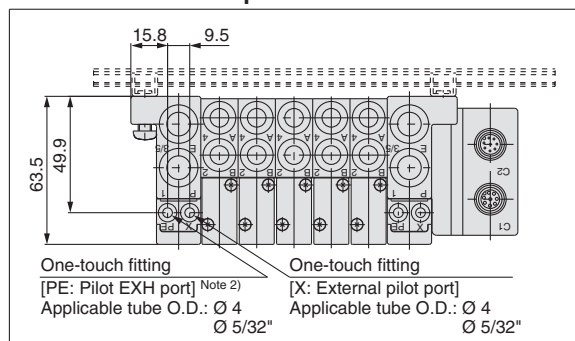


Note 1) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.  
Note 2) External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

## L: Dimensions

n: Stations

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		148	160.5	185.5	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373
L2		137.5	150	175	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5
L3		118	134	150	166	182	198	214	230	246	262	278	294	310	326	342
L4		15	13.5	18	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5
L5		80	96	112	128	144	160	176	192	208	224	240	256	272	288	304

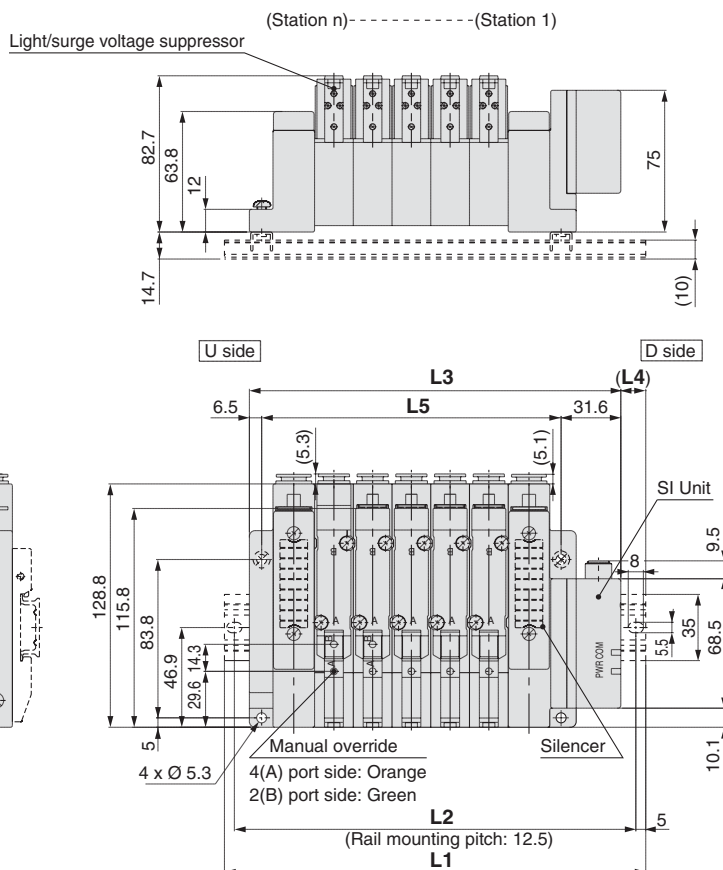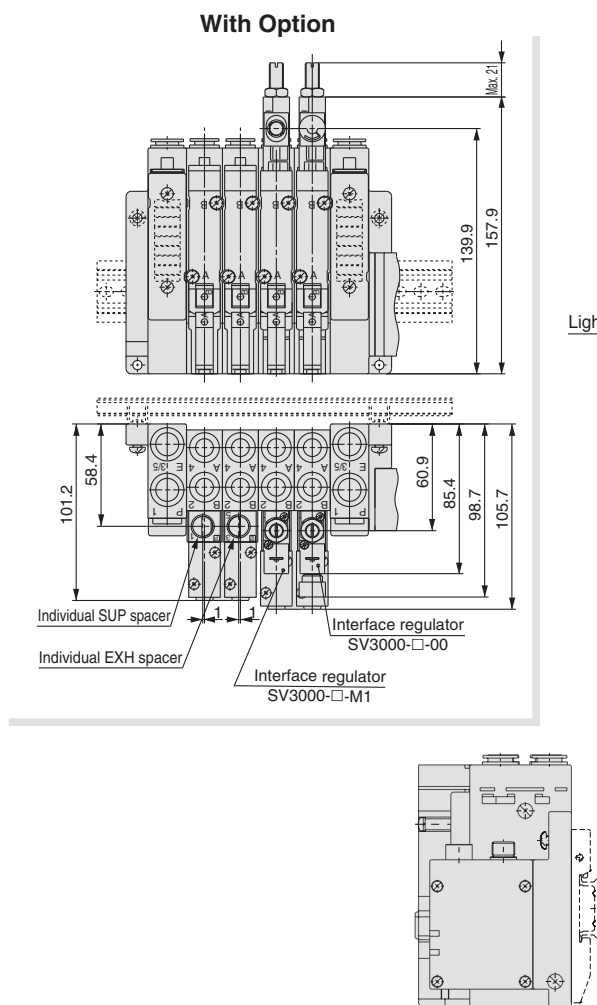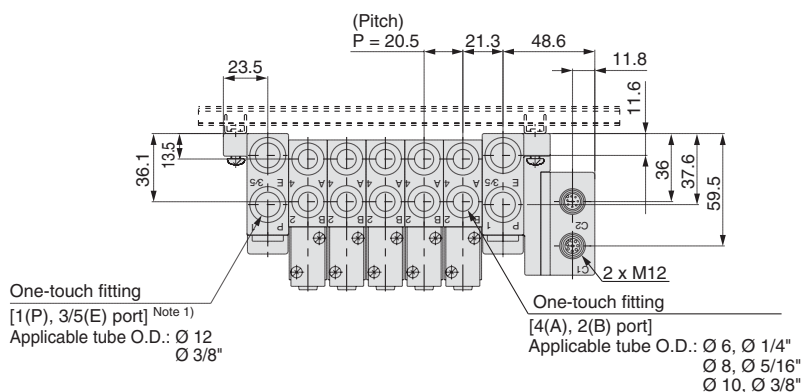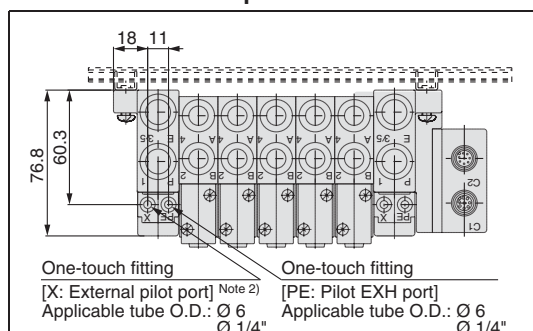**Dimensions****Tie-rod Base Series SV3000****With External Pilot Specification**

Note 1) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.

Note 2) External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

**L: Dimensions**

n: Stations




L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		160.5	185.5	210.5	223	248	273	285.5	310.5	323	348	373	385.5	410.5	435.5	448
L2		150	175	200	212.5	237.5	262.5	275	300	312.5	337.5	362.5	375	400	425	437.5
L3		135.1	155.6	176.1	196.6	217.1	237.6	258.1	278.6	299.1	319.6	340.1	360.6	381.1	401.6	422.1
L4		12.5	15	17	13	15.5	17.5	13.5	16	12	14	16.5	12.5	14.5	17	13
L5		97	117.5	138	158.5	179	199.5	220	240.5	261	281.5	302	322.5	343	363.5	384

## Dimensions



Tie-rod Base

Series SV4000

With Option

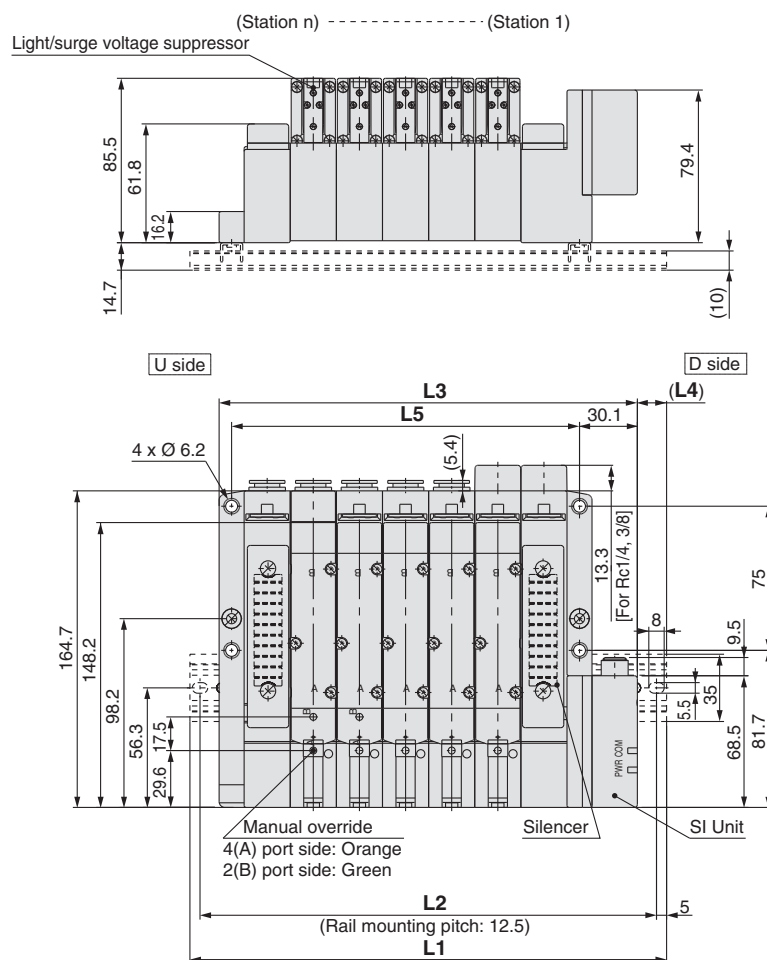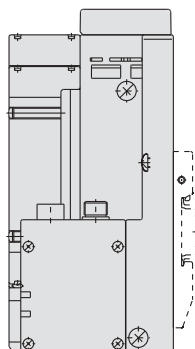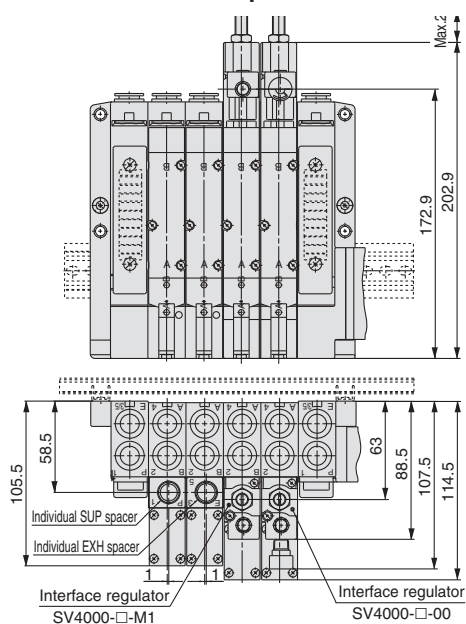

With External Pilot Specification

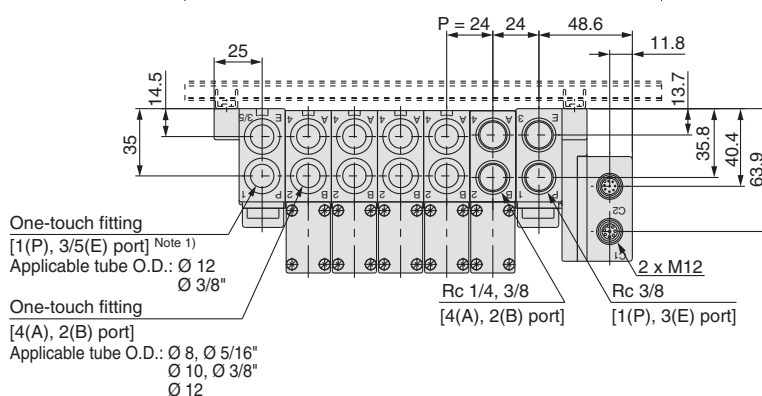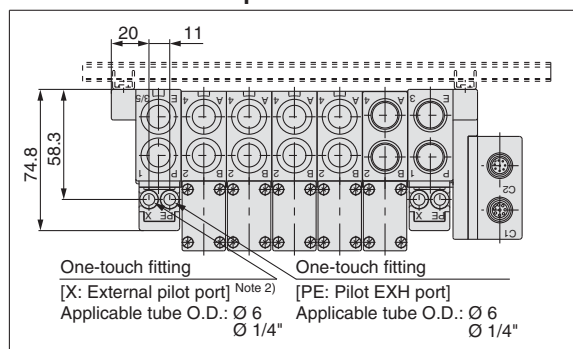

Note 1) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.  
Note 2) External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

## L: Dimensions

n: Stations

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	173	198	223	248	273	298	323	348	373	385.5	410.5	435.5	460.5	485.5	510.5	
L2	162.5	187.5	212.5	237.5	262.5	287.5	312.5	337.5	362.5	375	400	425	450	475	500	
L3	145.6	169.6	193.6	217.6	241.6	265.6	289.6	313.6	337.6	361.6	385.6	409.6	433.6	457.6	481.6	
L4	13.5	14	14.5	15	15.5	16	16.5	17	17.5	12	12.5	13	13.5	14	14.5	
L5	109	133	157	181	205	229	253	277	301	325	349	373	397	421	445	



## Series EX500

# Specific Product Precautions 1

Be sure to read this before handling. Refer to the back cover for Safety Instructions.  
For 3/4/5 Port Solenoid Valve Precautions, refer to “Handling Precautions for SMC Products” and the Operation Manual on the SMC website, <http://www.smc.eu>

### Design / Selection

#### Warning

- 1. Do not use beyond the specification range.**  
Using beyond the specification range can cause a fire, malfunction, or damage to the system.  
Check the specifications before operation.
- 2. When using for an interlock circuit:**
  - **Provide a multiple interlock system which is operated by another system (such as mechanical protection function).**
  - **Perform an inspection to confirm that it is working properly.**Otherwise, this may cause possible injuries due to malfunction.

#### Caution

- 1. When applicable to UL, use a Class 2 power supply unit conforming to UL1310 for direct current power supply.**
- 2. Use within the specified voltage range.**  
Using beyond the specified voltage range is likely to cause the product to be damaged or to malfunction.
- 3. Do not install in places where it can be used as a foothold.**  
Applying any excessive load such as stepping on the product by mistake or placing a foot on it, will cause it to break.
- 4. Keep the surrounding space free for maintenance.**  
When designing a system, take into consideration the amount of free space needed for performing maintenance.
- 5. Do not remove the name plate.**  
Improper maintenance or incorrect use of Operation Manual can cause equipment failure or malfunction. Also, there is a risk of losing conformity with safety standards.

### Mounting

#### Caution

- 1. When removing from / attaching to the valve manifold,**
  - **Do not apply excessive force to the Unit.**  
The connecting portions are firmly joined with seals.
  - **Take care not to get fingers caught.**  
Injury can result.
- 2. Do not drop, bump, or apply excessive impact.**  
Otherwise, this can cause damage, equipment failure or malfunction.
- 3. Observe the tightening torque range.**  
Tightening outside of the allowable torque range will likely damage the screw.  
IP65/IP67 cannot be guaranteed if the screws are not tightened to the specified torque.

### Mounting

#### Caution

- 4. When lifting a large size valve manifold, take care to avoid causing stress to the valve connection joint.**  
The connection joint of the product may be damaged.  
Because the product may be heavy, carrying and installation should be performed by more than one operator to avoid strain or injury.
- 5. When placing a manifold, mount it on a flat surface.**  
Torsion in the whole manifold can lead to trouble such as air leakage or contact failure.

### Wiring

#### Caution

- 1. Provide the grounding to maintain the safety of the product and to improve the noise immunity.**  
Provide a specific grounding as close to the product as possible to minimise the distance to grounding.
- 2. Avoid repeatedly bending or stretching the cable and applying a heavy object or force to it.**  
Wiring applying repeated bending and tensile stress to the cable can break the circuit.
- 3. Avoid miswiring.**  
If miswired, there is a danger of malfunction or damage to the product.
- 4. Do not wire while energising the product.**  
There is a danger of malfunction or damage to the product or input/output device.
- 5. Avoid wiring the power line and high pressure line in parallel.**  
Noise or surge produced by signal line resulting from the power line or high pressure line could cause a malfunction.  
Wiring of the product or input/output device and the power line or high pressure line should be separated from each other.
- 6. Check for the wiring insulation.**  
Defective insulation (contact with other circuits, improper insulation between terminals, etc.) may cause damage to the product or input/output device due to excessive voltage or current.





## Series EX500

# Specific Product Precautions 2

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, <http://www.smc.eu>

### Wiring

#### Caution

7. **When the product is installed in machinery/equipment, provide adequate protection against noise by using noise filters etc.**  
Noise in signal lines may cause a malfunction.
8. **When connecting wires, prevent water, solvent or oil from entering inside from the connector section.**  
Otherwise, this can cause damage, equipment failure or malfunction.
9. **Avoid wiring patterns in which excessive stress is applied to the connector.**  
This may cause equipment failure or malfunction due to contact failure.

### Operating Environment

#### Warning

1. **Do not use in an atmosphere containing an inflammable gas or explosive gas.**  
Use in such an atmosphere is likely to cause a fire or explosion. This system is not explosion-proof.

#### Caution

1. **Select the proper type of enclosure according to the environment of operation.**  
IP65/67 is achieved when the following conditions are met.
  - 1) Provide appropriate wiring between the products using electrical wiring cables, communication connectors and cables with M12 connectors.
  - 2) Suitable mounting of the product and valve manifold.
  - 3) Be sure to mount a seal cap on any unused connectors.  
If using in an environment that is exposed to water splashes, please take measures such as using a cover.  
When the enclosure is IP40, do not use in an operating environment or atmosphere where it may come in contact with corrosive gas, chemical agents, seawater, water, or water vapor.
2. **Provide adequate protection when operating in locations such as the following.**  
Failure to do so may cause a malfunction or equipment failure. The effect of countermeasures should be checked in individual equipment and machine.
  - 1) Where noise is generated by static electricity etc.
  - 2) Where there is a strong electric field
  - 3) Where there is a danger of exposure to radiation
  - 4) When in close proximity to power supply lines
3. **Do not use in an environment where oil and chemicals are used.**  
Operating in environments with coolants, cleaning solvents, various oils or chemicals may cause adverse effects (damage, malfunction) to the product even in a short period of time.

### Operating Environment

#### Caution

4. **Do not use in an environment where the product could be exposed to corrosive gas or liquid.**  
This may damage the product and cause it to malfunction.
5. **Do not use in locations with sources of surge generation.**  
Installation of the product in an area around the equipment (electromagnetic lifters, high frequency induction furnaces, welding machine, motors, etc.), which generates the large surge voltage could cause to deteriorate an internal circuitry element of the product or result in damage. Implement countermeasures against the surge from the generating source, and avoid touching the lines with each other.
6. **When directly driving a load (output device) which generates surge voltage by relay, solenoid valves or lamp, use a load that has an integrated surge absorption element.**  
When a surge generating load is directly driven, the product may be damaged.
7. **The product is CE marked, but not immune to lightning strikes. Take measures against lightning strikes in your system.**
8. **Keep dust, wire scraps and other foreign matter from entering inside the product.**  
This may cause equipment failure or malfunction.
9. **Mount the product in such locations, where no vibration or shock is affected.**  
This may cause equipment failure or malfunction.
10. **Do not use in places where there are cyclic temperature changes.**  
In case that the cyclic temperature is beyond normal temperature changes, the internal product is likely to be adversely affected.
11. **Do not use in direct sunlight.**  
This may cause equipment failure or malfunction.
12. **Observe the ambient temperature range.**  
This may cause a malfunction.
13. **Do not use in places where there is radiated heat around it.**  
Such places are likely to cause a malfunction.



## Series EX500

# Specific Product Precautions 3

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to “Handling Precautions for SMC Products” and the Operation Manual on the SMC website, <http://www.smc.eu>

### Adjustment / Operation

#### Warning

1. **Do not perform operation or setting with wet hands.**  
There is a risk of electrical shock.

#### <Web server function>

2. **The valve operation test is a function which forcibly changes the signal status. Please check safety of the ambient environment and the device before using this function.**

This may cause injuries or equipment damage.

3. **If the communication line and PC are shut down during a valve operation test, the valve output status will be held (It remains in the output status before the communication line and/or PC was shut down). Please check safety of the ambient environment and the device when performing this function.**

This may cause injuries or equipment damage.

#### Caution

1. **Use a watchmaker's screwdriver with thin blade for the setting switch.**  
**When setting the switch, do not touch other unrelated parts.**

This may cause parts damage or malfunction due to a short circuit.

2. **Provide adequate setting for the operating conditions.**  
Failure to do so could result in malfunction.  
Refer to the Operation Manual for the setting switch.

3. **For details on programming and address setting, refer to the manual from the PLC manufacturer.**

The content of programming related to protocol is designed by the manufacturer of the PLC used.

### Maintenance

#### Warning

1. **Do not disassemble, modify (including circuit board replacement) or repair this product.**

Such actions are likely to cause injuries or equipment failure.

2. **When an inspection is performed,**
  - Turn off the power supply.
  - Stop the air supply, exhaust the residual pressure in piping and verify that the air is released before performing maintenance work.

Unexpected malfunction of system components and injury can result.

#### Caution

1. **When removing from / attaching to the valve manifold,**

- **Do not apply excessive force to the Unit.**  
The connecting portions are firmly joined with seals.
- **Take care not to get fingers caught.**  
Injury can result.

2. **Perform periodic inspection.**

Unexpected malfunction in the system composition devices is likely to occur due to malfunction of machinery or equipment.

3. **After maintenance, make sure to perform an appropriate functionality inspection.**

In cases of abnormality such as faulty operation, stop operation. Unexpected malfunction in the system composition devices is likely to occur.

4. **Do not use benzine and thinner for cleaning the product.**

Damage to the surface or erasure of the display can result. Wipe off any stains with a soft cloth. If the stain is persistent, wipe off with a cloth soaked in a dilute solution of neutral detergent and wring out tightly, and then finish with a dry cloth.

### Other

#### Caution




1. **Refer to the catalogue of each series for Common Precautions and Specific Product Precautions on valve manifolds.**

#### ■ Trademark

DeviceNet™ is a trademark of ODVA.  
EtherNet/IP™ is a trademark of ODVA.

## Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “**Caution**,” “**Warning**” or “**Danger**.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

- **Caution:** **Caution** indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
- **Warning:** **Warning** indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
- **Danger :** **Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

- \*1) ISO 4414: Pneumatic fluid power – General rules relating to systems.  
ISO 4413: Hydraulic fluid power – General rules relating to systems.  
IEC 60204-1: Safety of machinery – Electrical equipment of machines.  
(Part 1: General requirements)  
ISO 10218-1: Manipulating industrial robots - Safety.  
etc.

### Warning

- The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.**  
Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.
- Only personnel with appropriate training should operate machinery and equipment.**  
The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.
- Do not service or attempt to remove product and machinery/equipment until safety is confirmed.**
  - The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
  - When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
  - Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.**
  - Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
  - Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
  - An application which could have negative effects on people, property, or animals requiring special safety analysis.
  - Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

## Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”.  
Read and accept them before using the product.

### Limited warranty and Disclaimer

- The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.\*2)  
Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.

\*2) **Vacuum pads are excluded from this 1 year warranty.**

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

### Compliance Requirements

- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

### Caution

- The product is provided for use in manufacturing industries.**  
The product herein described is basically provided for peaceful use in manufacturing industries.  
If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.  
If anything is unclear, contact your nearest sales branch.

### Caution

**SMC products are not intended for use as instruments for legal metrology.**

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

## Safety Instructions

Be sure to read “Handling Precautions for SMC Products” (M-E03-3) before using.

### SMC Corporation (Europe)

<b>Austria</b>	☎ +43 (0)2262622800	www.smc.at	office@smc.at	<b>Lithuania</b>	☎ +370 5 2308118	www.smclt.lt	info@smclt.lt
<b>Belgium</b>	☎ +32 (0)33551464	www.smcpnautics.be	info@smcpneumatics.be	<b>Netherlands</b>	☎ +31 (0)205318888	www.smcpnautics.nl	info@smcpneumatics.nl
<b>Bulgaria</b>	☎ +359 (0)2807670	www.smc.bg	office@smc.bg	<b>Norway</b>	☎ +47 67129020	www.smc-norge.no	post@smc-norge.no
<b>Croatia</b>	☎ +385 (0)13707288	www.smc.hr	office@smc.hr	<b>Poland</b>	☎ +48 222119600	www.smc.pl	office@smc.pl
<b>Czech Republic</b>	☎ +420 541424611	www.smc.cz	office@smc.cz	<b>Portugal</b>	☎ +351 226166570	www.smc.eu	postpt@smc.smces.es
<b>Denmark</b>	☎ +45 70252900	www.smcdk.com	smc@smcdk.com	<b>Romania</b>	☎ +40 213205111	www.smcromania.ro	smcromania@smcromania.ro
<b>Estonia</b>	☎ +372 6510370	www.smcpnautics.ee	smc@smcpneumatics.ee	<b>Russia</b>	☎ +7 8127185445	www.smc-pneumatik.ru	info@smc-pneumatik.ru
<b>Finland</b>	☎ +358 207513513	www.smc.fi	smc@smc.fi	<b>Slovakia</b>	☎ +421 (0)413213212	www.smc.sk	office@smc.sk
<b>France</b>	☎ +33 (0)164761000	www.smc-france.fr	info@smc-france.fr	<b>Slovenia</b>	☎ +386 (0)73885412	www.smc.si	office@smc.si
<b>Germany</b>	☎ +49 (0)61034020	www.smc.de	info@smc.de	<b>Spain</b>	☎ +34 902184100	www.smc.eu	post@smc.smces.es
<b>Greece</b>	☎ +30 210 2717265	www.smchellas.gr	sales@smchellas.gr	<b>Sweden</b>	☎ +46 (0)86031200	www.smc.nu	post@smc.nu
<b>Hungary</b>	☎ +36 23511390	www.smc.hu	office@smc.hu	<b>Switzerland</b>	☎ +41 (0)523963131	www.smc.ch	info@smc.ch
<b>Ireland</b>	☎ +353 (0)14039000	www.smcpnautics.ie	sales@smcpneumatics.ie	<b>Turkey</b>	☎ +90 212 489 0 440	www.smcpnomatik.com.tr	info@smcpnomatik.com.tr
<b>Italy</b>	☎ +39 0292711	www.smcitalia.it	mailbox@smcitalia.it	<b>UK</b>	☎ +44 (0)845 121 5122	www.smcpnautics.co.uk	sales@smcpneumatics.co.uk
<b>Latvia</b>	☎ +371 67817700	www.smc.lv	info@smclv.lv				

**SMC CORPORATION** Akihbara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 FAX: 03-5298-5362