How to make EB8000 work under Vista

1. Go to EasyBuilder8000.exe, right click and select Properties

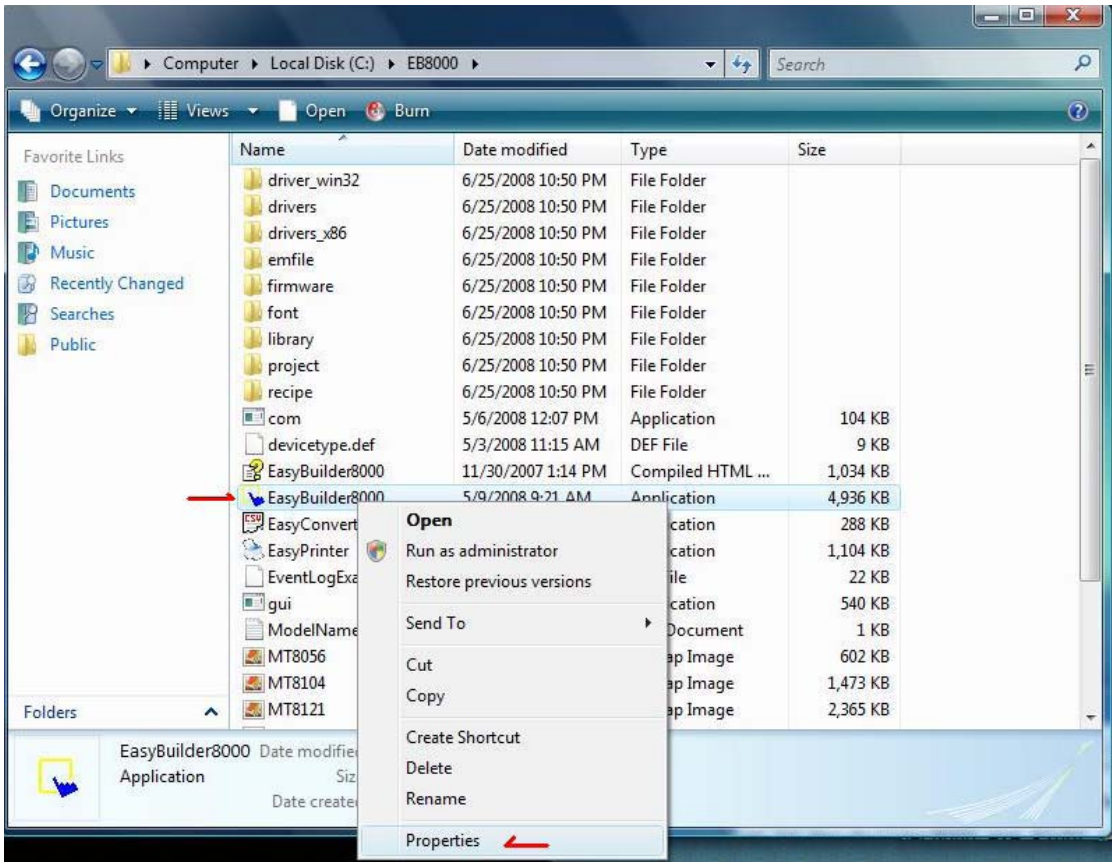

2. Go to tab “Compatibility” and choose Compatibility mode “Windows XP”, and on the Privilege Level to check “Run this program as an administrator”

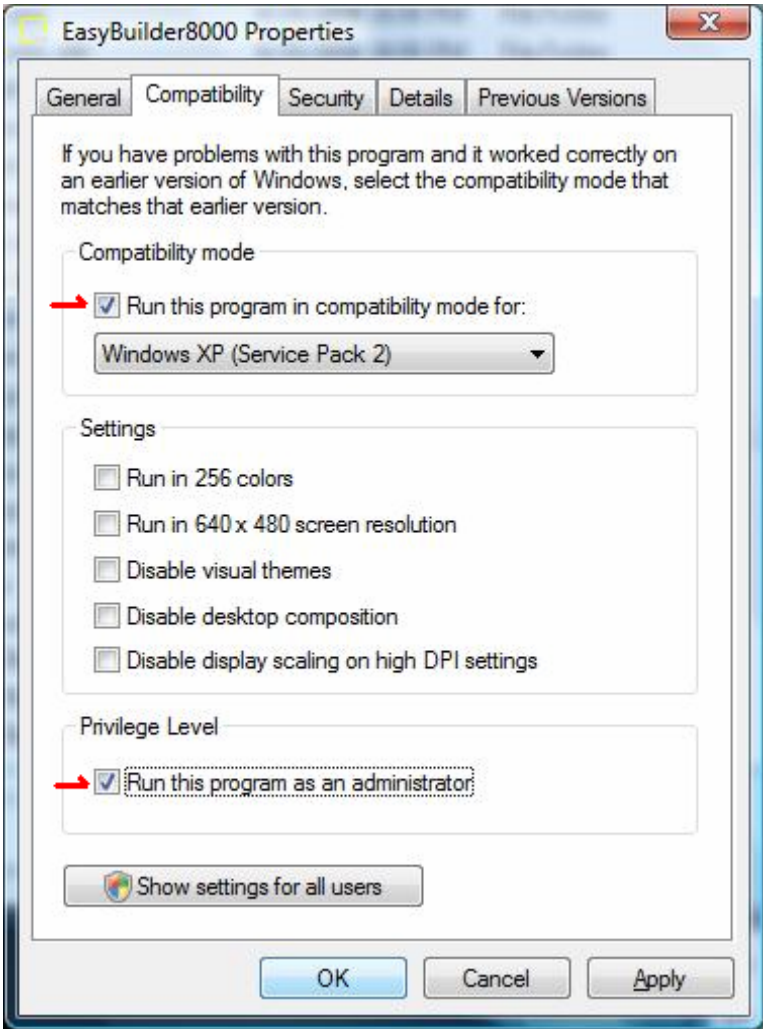

3. Go to Project Manager.exe, right click and select Properties

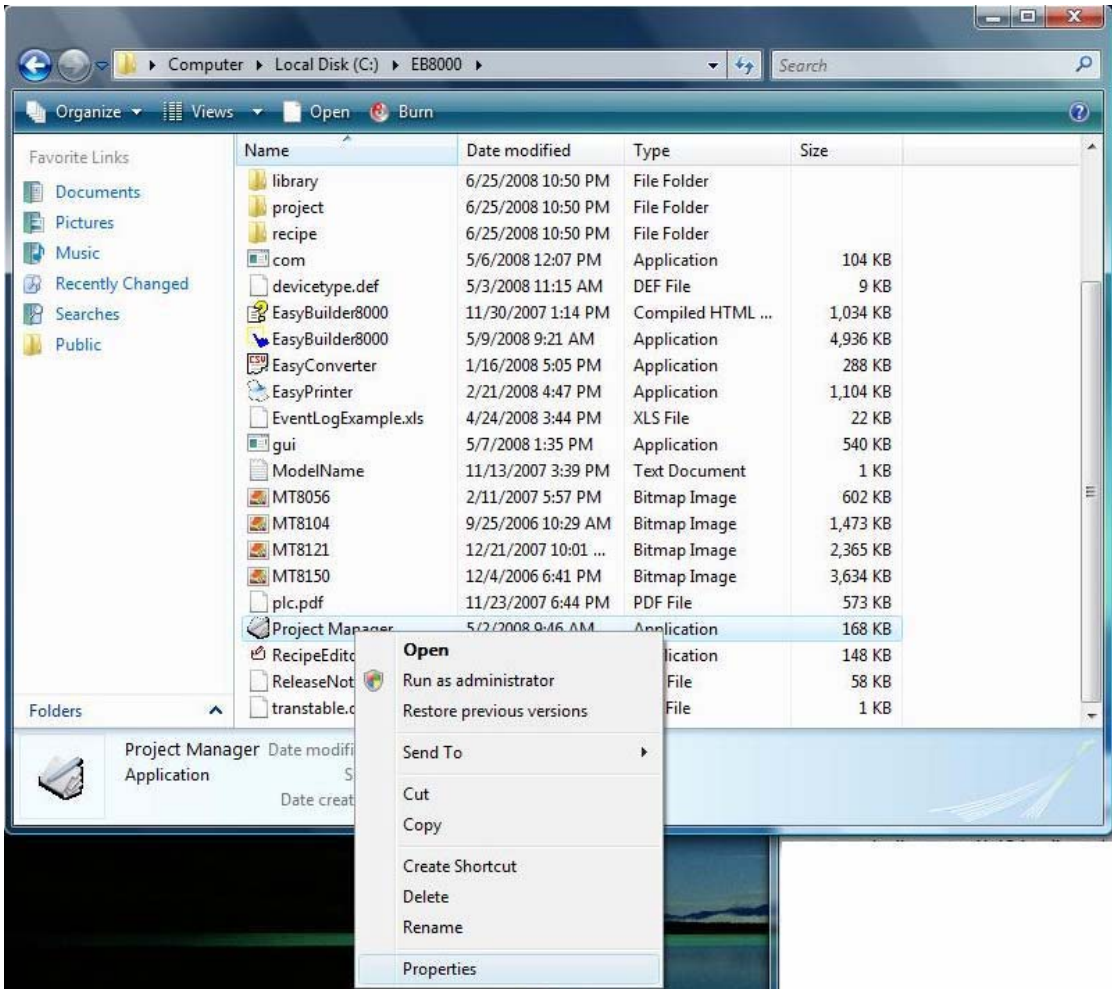

4. Go to tab “Compatibility” and choose Compatibility mode “Windows XP”, and on the Privilege Level to check “Run this program as an administrator”

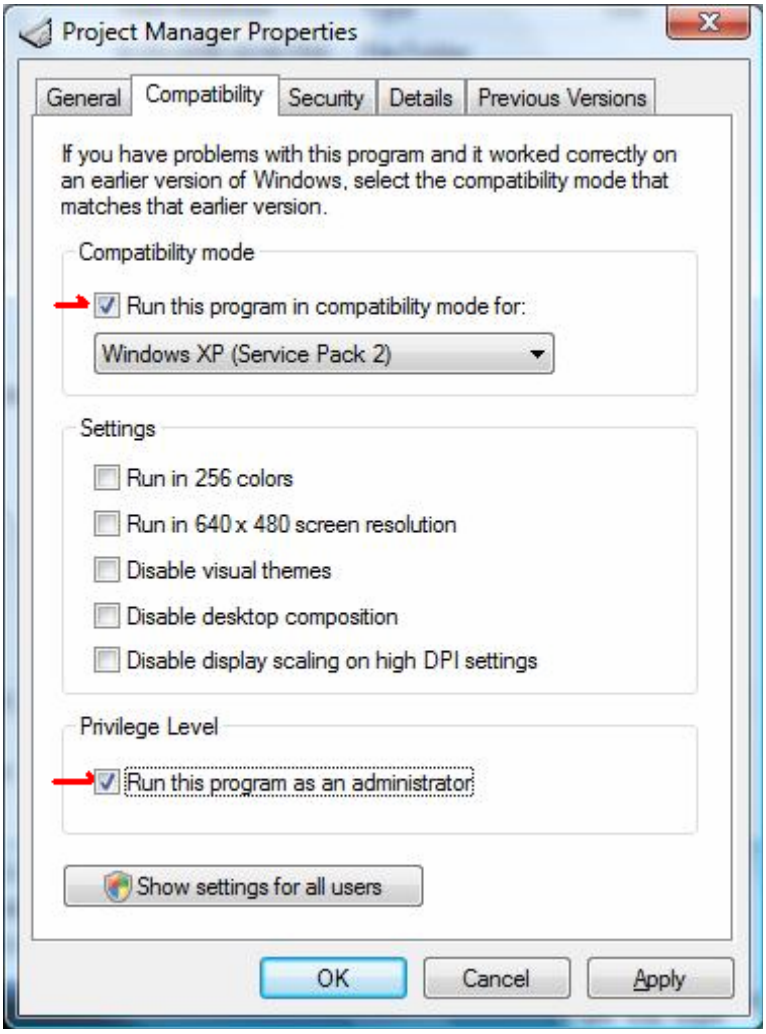

5. Go to EasyPrinter.exe, right click and select Properties

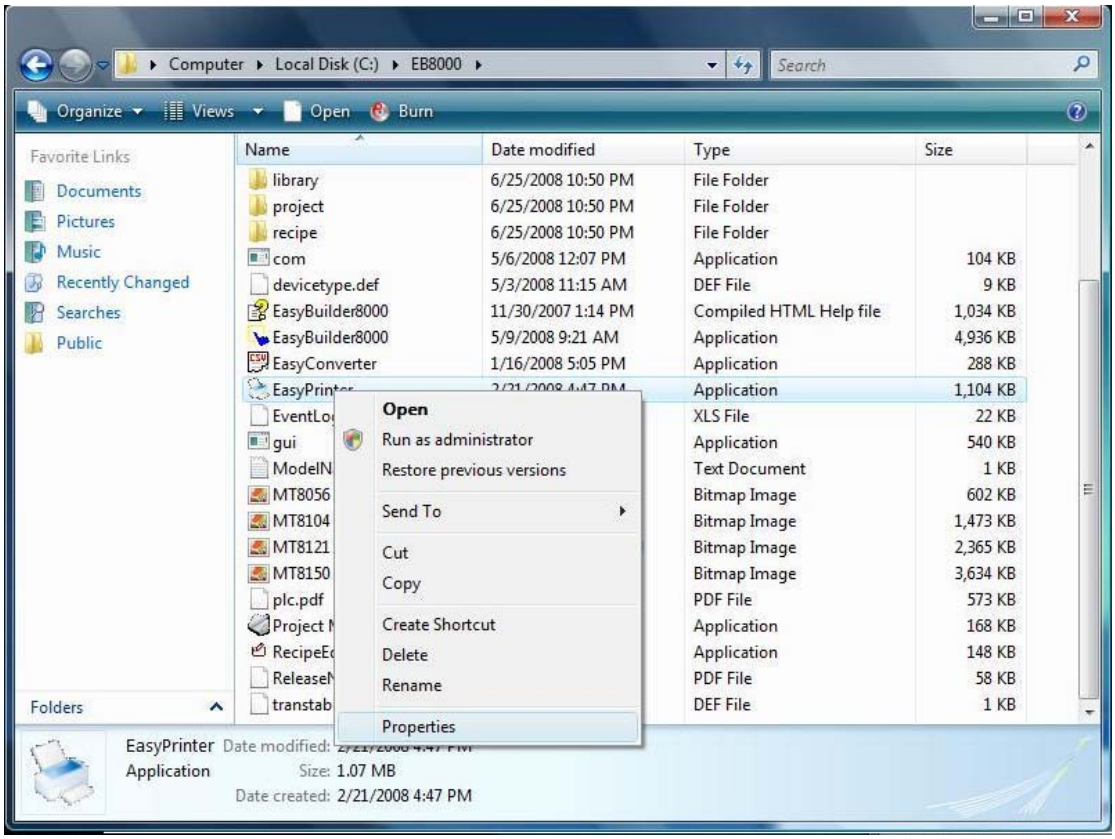

6. Go to tab “Compatibility” and choose Compatibility mode “Windows XP”, and on the Privilege Level to check “Run this program as an administrator”

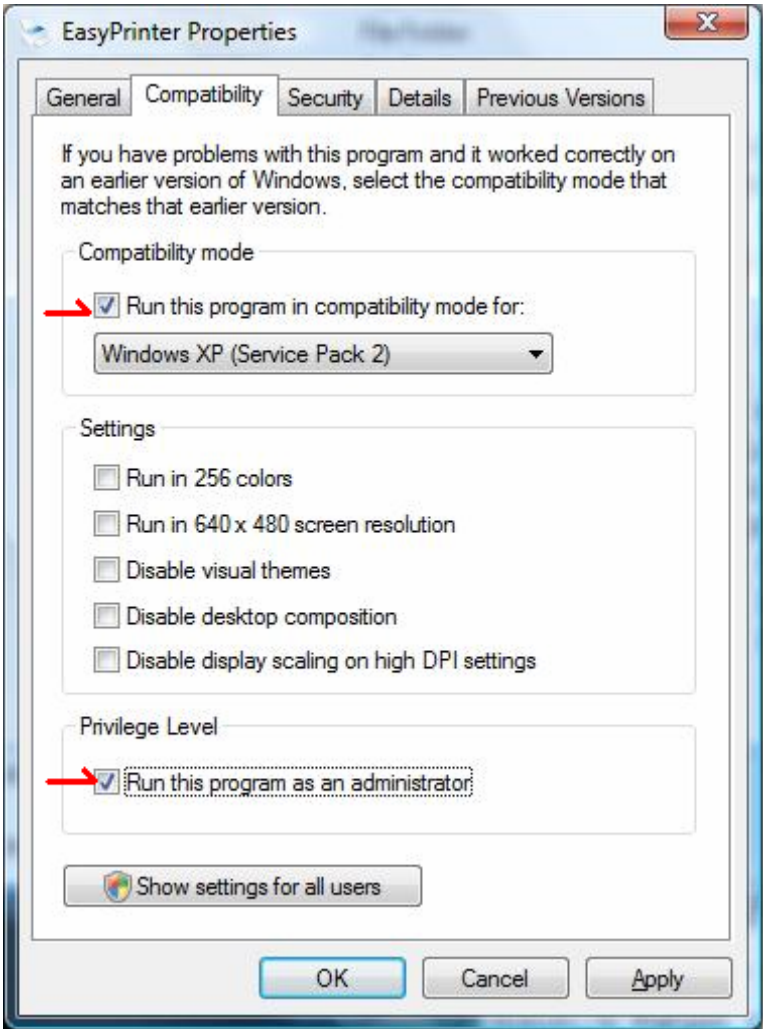
EasyPrinter Properties
General
Compatibility
Security
Details
Previous Versions
If you have problems with this program and it worked correctly on an earlier version of Windows, select the compatibility mode that matches that earlier version.
Compatibility mode
Run this program in compatibility mode for:
Windows XP (Service Pack 2)
Settings
Run in 256 colors
Run in 640 x 480 screen resolution
Disable visual themes
Disable desktop composition
Disable display scaling on high DPI settings
Privilege Level
Run this program as an administrator
Show settings for all users
OK
Cancel
Apply