

TYPE 8045

MAGNETIC INDUCTIVE FLOW TRANSMITTER



Instruction Manual

1	INTRODUCTION	
1.1	Symbols used	3
1.2	General Safety Instructions	3
2	QUICKSTART	
2.1	Installation	4
2.2	Programming	5
2.3	Testing	6
3	INSTALLATION	
3.1	Installation Guidelines	7
3.1.1	Mounting Positions	8-9
3.2	Installation	10
3.3	General Electrical Connection	11
3.3.1	Earthing the transmitter	11
3.4	Electrical wiring for the 8045 flow transmitter	12
3.4.1	18-30 VDC without relay	12
3.4.2	18-30 VDC with relays	13
3.4.3	Switches settings	13
3.4.4	Connection of the Pulse Output	14
3.5	Easy Link/Networking Connections	15
	<i>Easy</i> LINK 8630 Topcontrol	15
	<i>Easy</i> LINK 1067 Positioner without relay	16
	<i>Easy</i> LINK 8031 On/Off Top control	17
4	PROGRAMMING AND OPERATION	
4.1	Operating and Control Guide	18
4.2	Menu Guide	19
4.3	Main Menu	20
4.4	Calibration Menu	21
4.4.1	Language	22
4.4.2	Engineering Units	22
4.4.3	K-Factor	23-24
4.4.4	Output Current	25
4.4.5	Pulse Output	26
4.4.6	Relay (option)	27
4.4.7	Filter Function	28
4.4.8	Totalizer	29
4.4.9	50/60 Hz Noise Rejection	29
4.5	Test Menu	30
4.5.1	Offset adjustment	31
4.5.2	Span adjustment	31
4.5.3	Calibration of the zero point	32
4.5.4	Flow Simulation	32
4.6	8045 settings	33
4.6.1	Type 8045 Flow transmitter at delivery	33
4.6.2	8045 Flow transmitter user configuration	33
5	MAINTENANCE	
5.1	Storing and Cleaning of the Sensor	34
5.2	Trouble Shooting Guide	34-35
6	ANNEX	
6.1	Specifications	36-37
6.2	Dimensions	38
6.3	Design and Measuring Principle	39
6.4	Type specification	40
6.5	Standard Delivery	40
6.6	Label type	41
6.7	Spare Parts	41-42

1.1 SYMBOLS USED



Indicates information which must be followed. Failure to follow the information could endanger the user and affect the function of the device.



Indicates that the page contains general information.



Indicates a quickstart guide for quickly commissioning the transmitter.



Indicates that the page contains information about installation.



Indicates that the page contains information about configuration, programming and operation.



Indicates important information, tips and recommendations.



Indicates a worked example.



Indicates an action which has to be continued or reference to a relevant section.



Indicates information about repairs, service, maintenance and spare parts.

1.2 GENERAL SAFETY INSTRUCTIONS

Congratulations on purchasing our 8045 Electromagnetic Flow Transmitter.




Before installing or using this product, please read this manual and any other relevant documentation to ensure you fully benefit from all the advantages the product can offer.

- Please verify that the product is complete and free from any damage. (see reference table section 6.5).
- It is the customer's responsibility to select an appropriate transmitter for the application, ensure the unit is installed correctly, and maintain all components.
- This product should only be installed or repaired by specialist staff using the correct tools.
- Please observe the relevant safety regulations throughout the operation, maintenance and repair of the product.
- Always ensure that the power supply is switched off before working on the device / system.
- If these instructions are ignored, no liability will be accepted and the guarantee on the device and accessories will become invalid.

This section provides a comprehensive installation and operation guide which will assist with the commissioning of the 8045 Flow Transmitter.

2.1 INSTALLATION

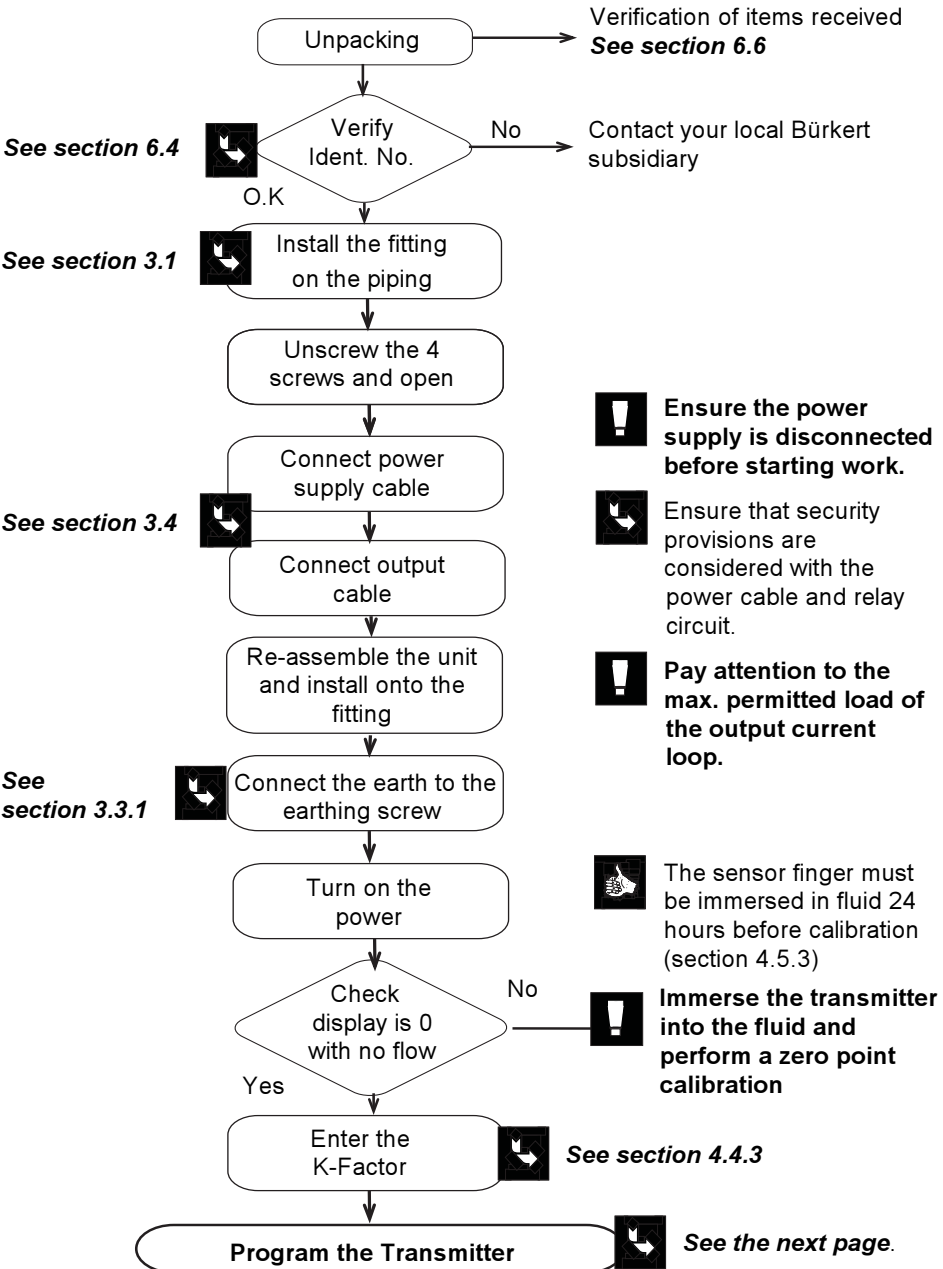


To access the **CALIBRATION MENU** simultaneously press for 5 seconds.






- Ensure that the enter key is unlocked - section 4.1.
- Reference can additionally be made to the menu guide - section 4.2.


2.2

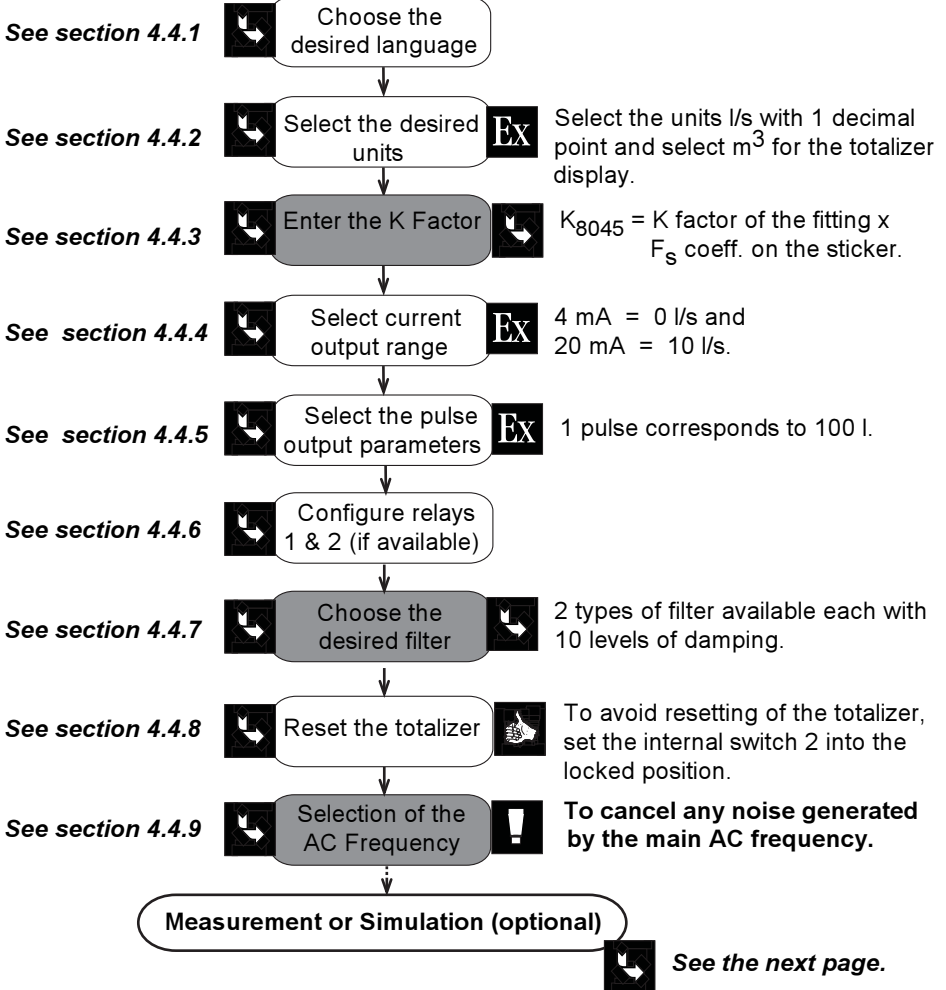PROGRAMMING




The actions which are highlighted in grey must be fully completed for accurate measurement.


To access the **TEST MENU** simultaneously press    for 5 seconds.

2.3**TESTING***See Section 4.5.1*


The mode Offset fixes the output current of 4mA.

See Section 4.5.2


The mode Span fixes the output of 20mA.


See Section 4.5.3

Put the displayed value at 0.00 in the selected unit when the liquid in the pipe is not moving.

See Section 4.5.4

This is optional although it is recommended for commissioning large systems.




The actions which are highlighted in grey  must be fully completed for accurate measurement.



3.1 INSTALLATION GUIDELINES

● Pressure - Temperature Diagram

Please be aware of the pressure-temperature dependence according to the respective fitting material as shown in the diagram below.

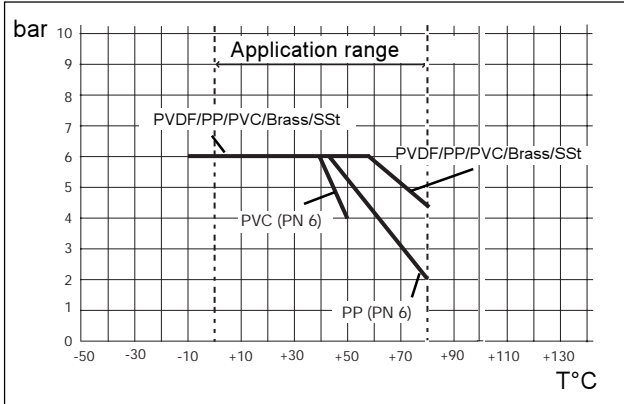

- The device must be protected against constant heat radiation and other environmental influences such as magnetic fields or direct exposure to sunlight.
- Ensure that the device is not located near any large machinery which may interfere with the transmitter as this can have an effect on the measurement readings.



In order to ensure a high precision of the measure and good stability of the zero point, the transmitter must be installed into the processed medium at least 24 H before calibration (electrode passivation).



Dismounting precautions:

All precautions must be taken before removing the transmitter depending on the process used as the pipe may contain dangerous / aggressive hot fluids.




INSTALLATION

3.1.1 MOUNTING POSITIONS




The 8045 electromagnetic flow transmitter can be mounted in the following ways to obtain an accurate flow measurement although the piping should be designed to ensure that the pipe is maintained full at all times to avoid inaccurate measurement.

Mounting horizontally

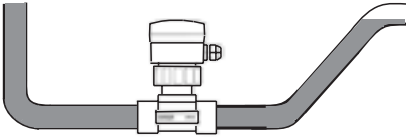


Correct

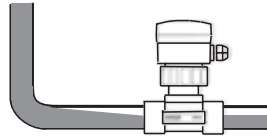


Incorrect

Mounting vertically

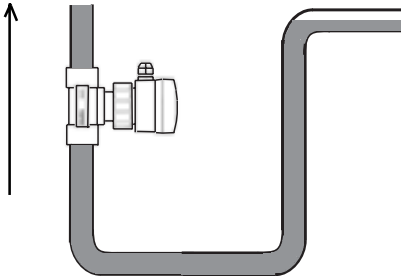

Correct

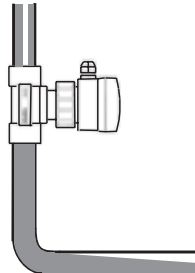


Incorrect



When mounting vertically ensure that the flow direction is in an upward direction as indicated by the arrow.



It is advisable to mount the transmitter at a 45° angle to the horizontal centre of the pipe as shown in the diagram.

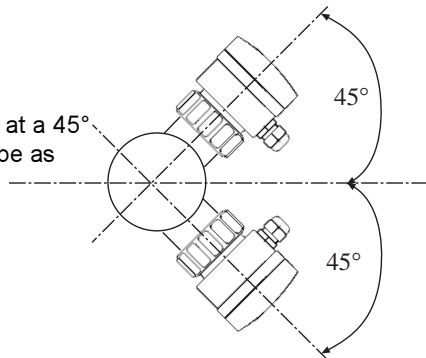




Measuring flow direction:


The measuring flow direction depends on the mounting direction of the transmitter. To inverse the measure turn the transmitter 180° on the fitting for a positive flow direction ensuring that the lug is in the upstream direction (see Fig. 3.1). The flow display is always positive but the totalizers increase or decrease depending on the flow direction.



The minimum upstream ($10 \times D$) and downstream ($3 \times D$) distances must be observed.

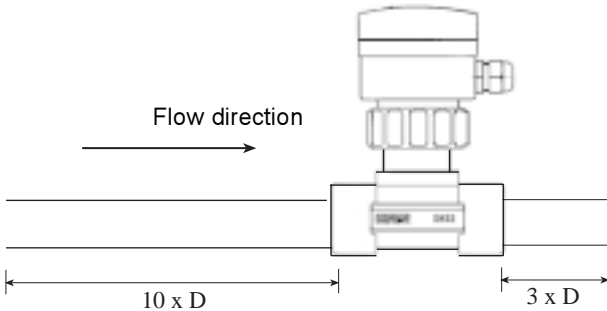

Please ensure that the pipe design does not allow the build up of air bubbles or cavities within the medium as this will cause measuring errors.

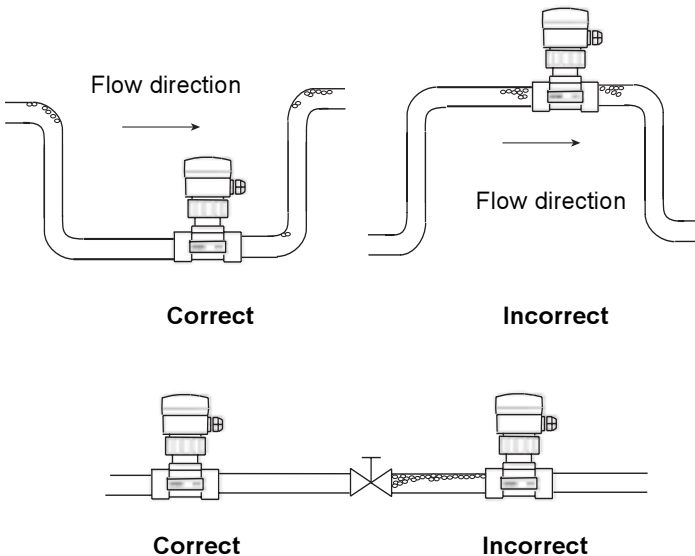



INSTALLATION

3.2 INSTALLATION

The 8045 flow transmitter can be easily installed into pipes using our specially designed fitting system S020.

The fitting 4 must be installed into the pipe according to the installation specifications within section 3.1.

- Insert the plastic nut 3 onto the fitting 4 and snap the plastic ring 2 into the guide -bush 5.
- Ensure that the sensor is fully inserted and sitting correctly, making sure that the lug 6 is aligned correctly onto the fitting and that the sensor housing 1 cannot be rotated.



The plastic nut must only be tightened by hand!

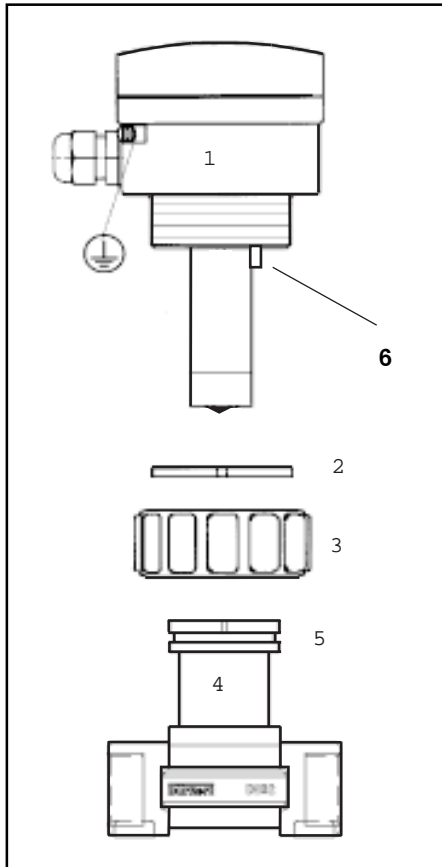


Fig. 3.1 Installation of flow transmitter



3.3 GENERAL ELECTRICAL CONNECTION

- Use cables with a temperature limit of 80°C minimum.
- For normal operating conditions the measuring signal can be transmitted by a simple cable of 0.75 mm² cross section.
- The line must not be installed in combination with carrying lines with a higher voltage or frequency.
- If a combined installation cannot be avoided, a minimum space of 30 cm (1 ft) or shielded cables should be adopted.
- When using shielded cables observe faultless grounding of the shield.



- In case of doubt, always use shielded cables.
- The power supply must be regulated - section 6.1



- **Do not open and wire the transmitter with the power supply connected.**
- **It is advisable to put security devices on :**
Power supply: Fuse (eg/ 250mA) and an interrupter
Relay: 3A fuse max. and circuit breaker (depending on application).

3.3.1 EARTHING THE TRANSMITTER




For EMC purposes and in order to ensure accurate measurement, it is important that the transmitter is connected to the earth correctly as improper earthing can have an adverse effect on the transmitter and flow measurement. For correct earthing, the earth lug on the side of the enclosure must be connected to a good local earthing point via an insulated cable of 2mm² and one of the diagrams below must be followed.




The earthing rings shown in the diagram below must be in contact with the fluid and are not supplied by Bürkert.

For Metal pipe applications

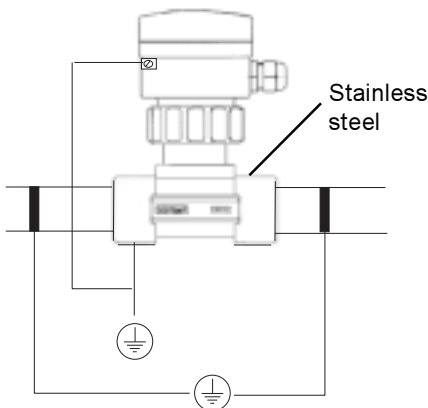

For plastic pipe applications

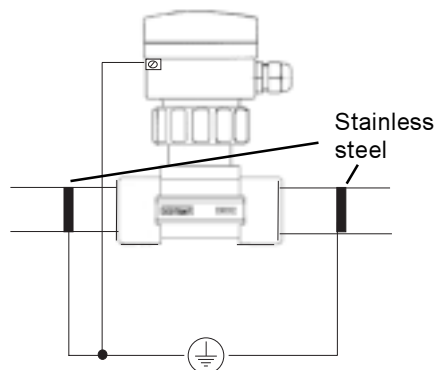



INSTALLATION

3.4 ELECTRICAL WIRING FOR THE 8045 FLOW TRANSMITTER

3.4.1 18-30 VDC without relays

Remove the cover via the screws on the front display and pull the cable through the PG 13.5 and wire according to one of the pin assignment diagrams below.

The electronics within the 8045 allows a sourcing or sinking PLC to be connected.

Position A (Fig 3.3) provides a sourcing configuration and Position B (Fig 3.4) a sinking configuration.

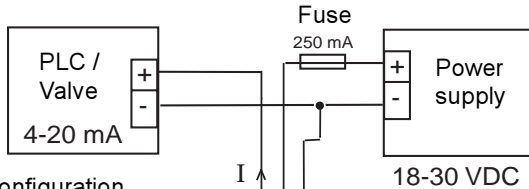


Fig. 3.3 Sourcing configuration
Position A



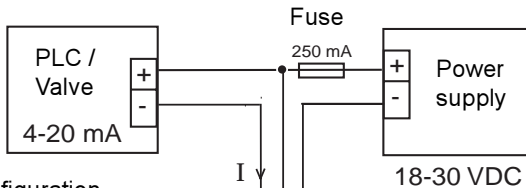


Fig. 3.4 Sinking configuration
Position B

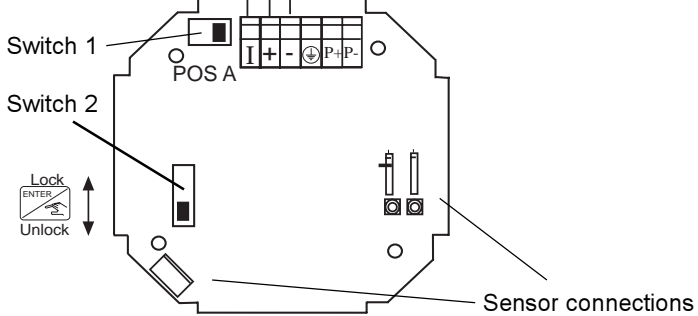

3.4 ENGLISH

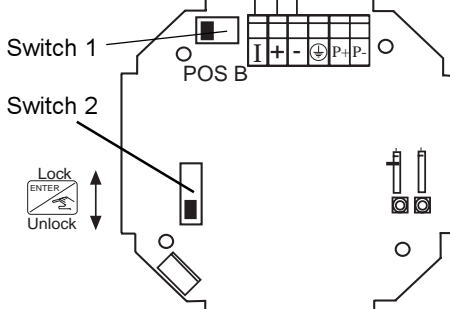

3.4.2 18-30 VDC with relays

The electrical wiring of this model is possible via the use of 2 cable glands. Remove the cover via the screws on the front display and pull the cables through the PG 13.5's and wire according to pin assignment diagram below (Fig. 3.5).

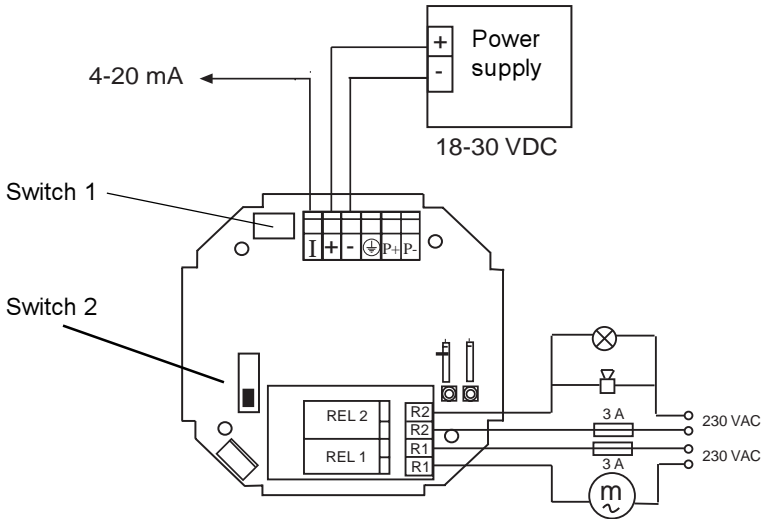


Fig. 3.5 Pin assignment for relays



The device can be easily connected to a PLC independently of the respective version.

3.4.3 Switch Settings

Switch1: This switch allows a sinking or sourcing PLC to be connected (output current). For further information see section 3.4.1.

Switch2 :

- This switch allows the 'Enter' key to be locked to avoid accidental or unauthorized access to the Programming and Test menus.
- The Switch2 when set in the unlocked position allows the parameter values to be changed (K-Factor, relays, current, ...) and when in the locked position access to the programming and test menus is restricted.



INSTALLATION

3.4.4 CONNECTION OF THE PULSE OUTPUT

The pulse output can be easily connected to a PLC or counter independently of the power supply or version.

3.4.4.1 Connection of a PLC

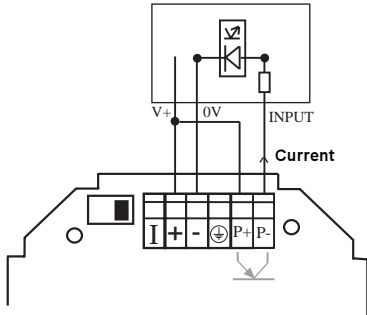


Fig. 3.6 PLC with common -

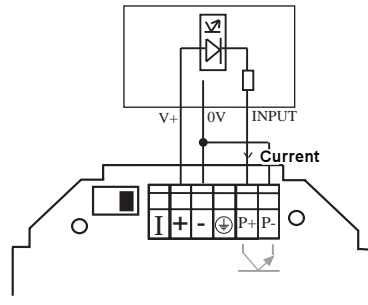


Fig. 3.7 PLC with common +

3.4.4.2 Connection of a load

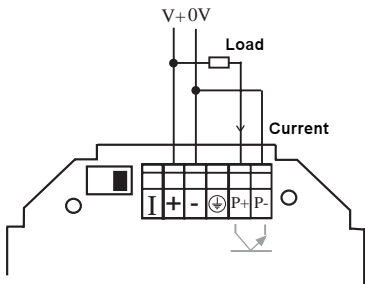


Fig. 3.8 Electromechanical counter or relay

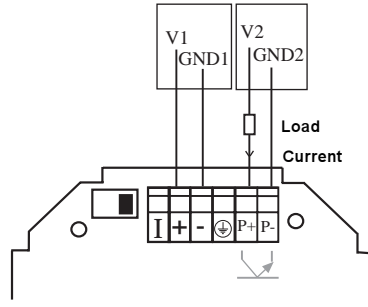


Fig. 3.9 Electronic counter with powered input



In the figures above ensure that the current does not exceed 100 mA.



For calculation of the load the following equation can be used;

$$\text{Load} = \frac{V - 5}{I}$$

Example:

$$V = 30V$$


$$I = 20mA$$

$$\text{Load} = 1250 \Omega$$



3.5 EASY LINK / NETWORKING CONNECTIONS

Easy CONTINUOUS PNEUMATIC FLOW CONTROL

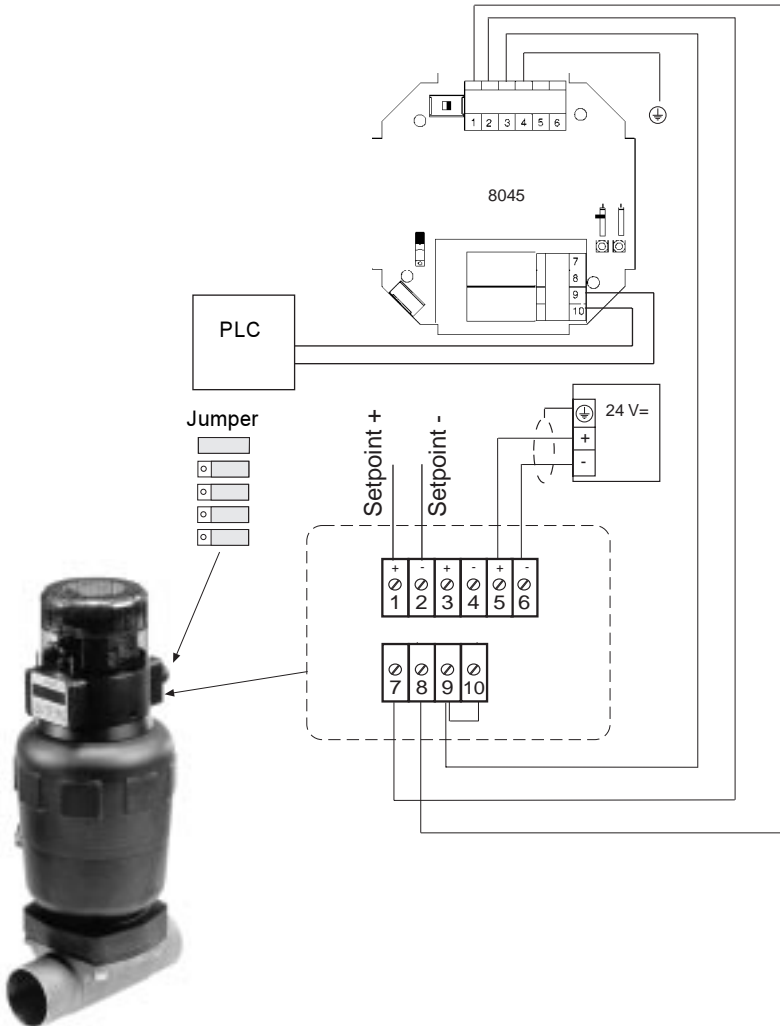

Example of *Easy* LINK between the 8045 flow transmitter 18-30VDC and the 8630 Top Control mounted on a diaphragm valve type 2031.


Easy NETWORKING provided by the relay outputs



INSTALLATION

Easy CONTINUOUS PNEUMATIC FLOW CONTROL

3.6 ENGLISH

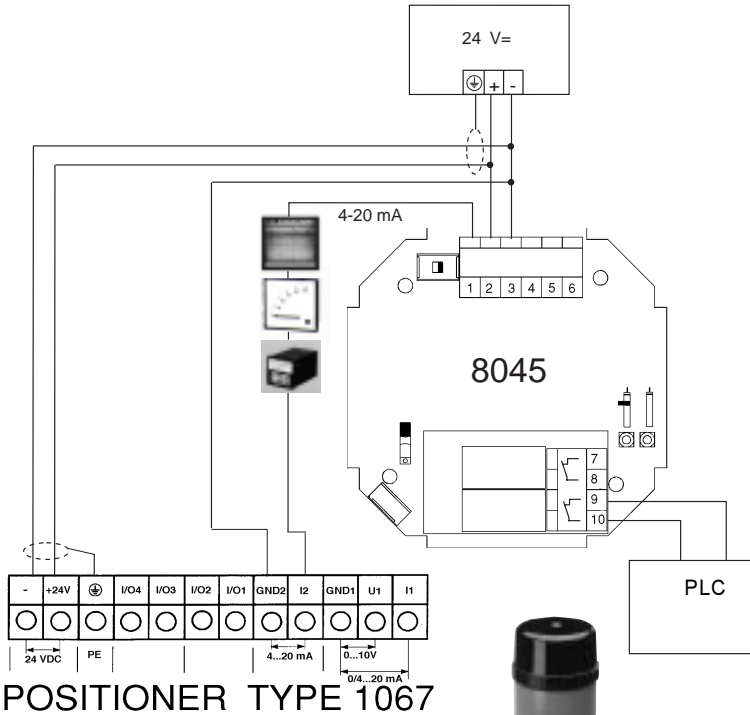


Example of *Easy* LINK between the 8045 flow transmitter 18-30VDC and the 1067 positioner mounted on a diaphragm valve type 2031.

Easy NETWORKING provided by the relay outputs



Easy ON/OFF FLOW CONTROL

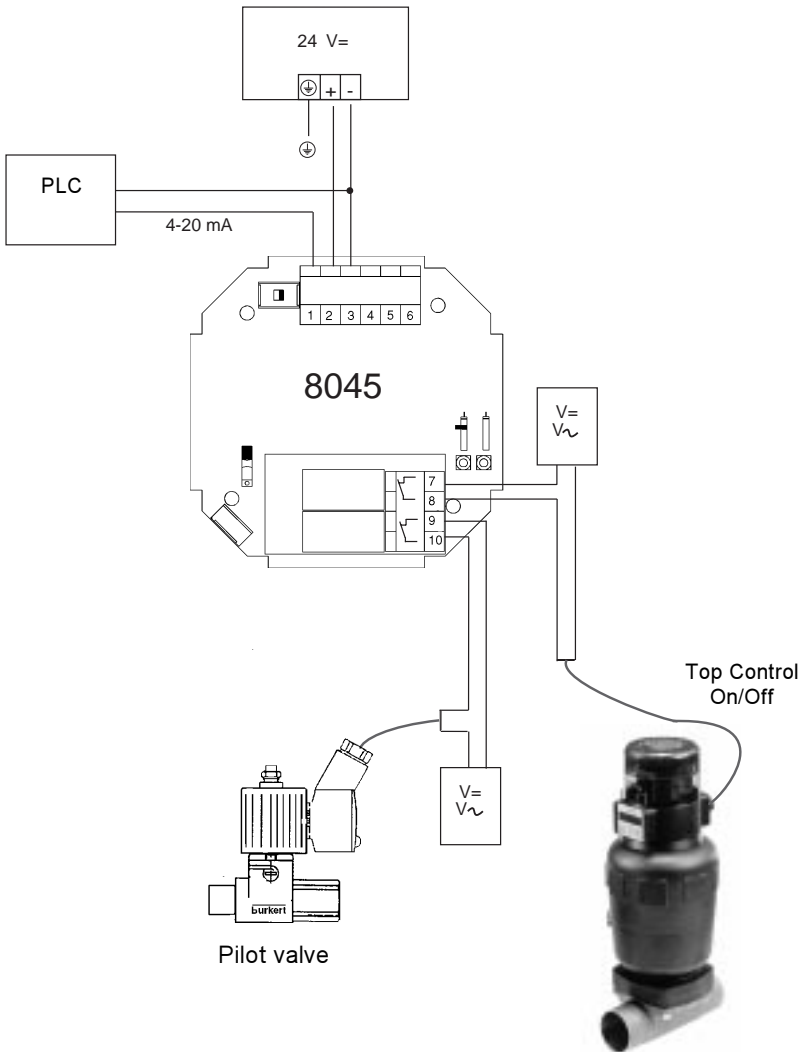


3.6 ENGLISH

Example of *Easy* LINK between the 8045 flow transmitter 18-30VDC and the 8631 Top Control mounted on a diaphragm valve type 2031 and pilot valve type 6012.

Easy NETWORKING provided by the 4-20mA output



4.1 OPERATING AND CONTROL GUIDE

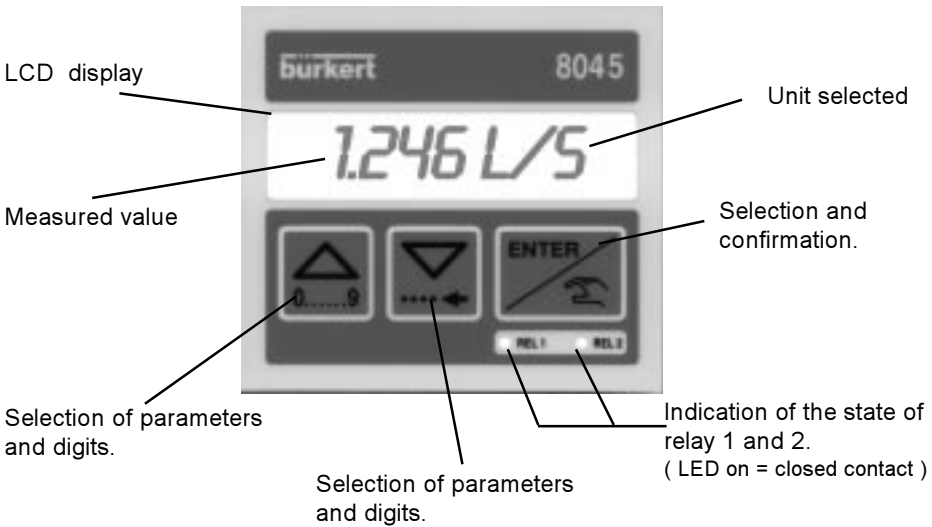

4.1 ENGLISH

Keys	Menu Mode	Finding a value
	Previous Menu	Increase from the blinking digit
	Next Menu	Advance to the next digit
	Activate the menu displayed (If "END" is displayed, save the modified parameters and return to the main menu)	Validate the displayed value
 2 Seconds	Resetting of the daily totalizer* (only available within daily totalizer option § - 4.3)	Modification of the decimal point: Know the K-Factor and impulse volume
 5 Seconds	Access or return to the CALIBRATION MENU*	
 5 Seconds	Access or return to the TEST MENU*	

* Only available within the main menu.



The Key can be locked to avoid accidental or unauthorized access.


For further information see sections 3.4.1 & 3.4.3.



4.2 MENU GUIDE



The menu guide below will assist in quickly and easily finding a desired parameter and programming the 8045 flow transmitter.

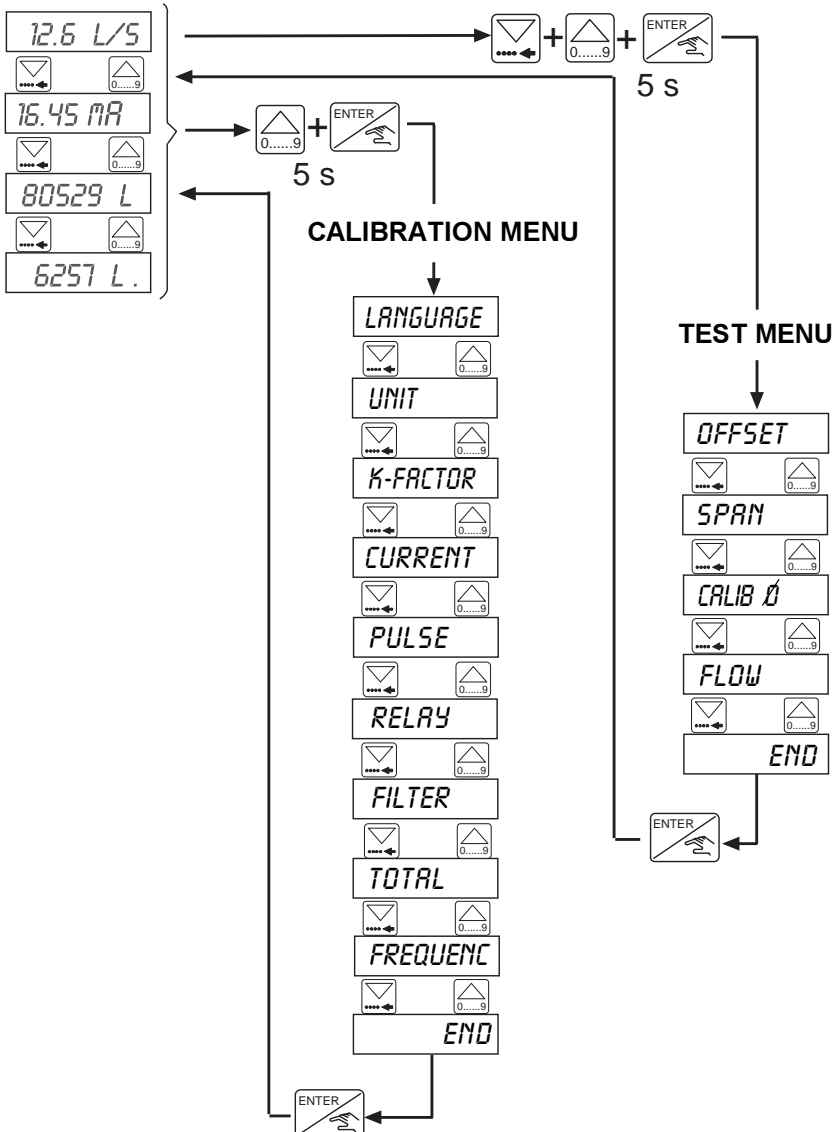


4.2 ENGLISH



MAIN MENU

4.3 MAIN MENU

The following information is displayed within the Main Menu:

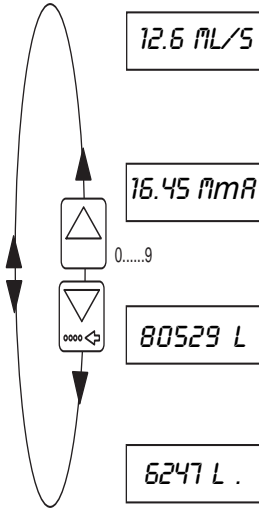

12.6 ML/S

Flowrate : This is displayed in the selected engineering units (see calibration menu).



16.45 mmA

Output Signal : The output signal is 4-20mA and is proportional to the flow according to the selected measuring range.

80529 L

Main Totalizer : This is displayed in the required engineering units (see calibration menu). To reset this totalizer see section 4.4.8 in the next menu.

6247 L .

Daily Totalizer : This is displayed with the same engineering units as the main totalizer. A point behind the unit differentiates this totalizer from the main totalizer. To reset this value, simultaneously press the   keys for 2 seconds within this menu.

4.3 ENGLISH



4.4 CALIBRATION MENU

PRESS   **SIMULTANEOUSLY FOR 5 SECONDS**



The internal Switch2 must be set in the unlocked position to enter parameters within this menu. (§ 3.4.3)

The following parameters can be set within this menu:

SECTIONS

	LANGUAGE	Selection between English, German, French, Italian and Spanish.	4.4.1
	UNIT	Selection of engineering units to display flowrate and totalizer.	4.4.2
	K-FACTOR	Input of K-factor according to chart or Teach-in function in order to determine the specific K-factor.	4.4.3
	CURRENT	Determination of 4-20 mA measuring range.	4.4.4
	PULSE	Parameter definition of pulse output (unit and volume).	4.4.5
	RELAY	Parameter definition of relays. This message only appears if the relay option has been installed.	4.4.6
	FILTER	Damping selection. There are 10 steps available and 2 filtering modes.	4.4.7
	TOTAL	Totalizer resetting.	4.4.8
	FREQUENC	Selection of the mains AC frequency (50 or 60 Hz).	4.4.9
END	Return to operation mode and storage of new parameters.		




The following sections explain how to change the parameter values within the calibration menu above.




CALIBRATION

4.4.1 LANGUAGE

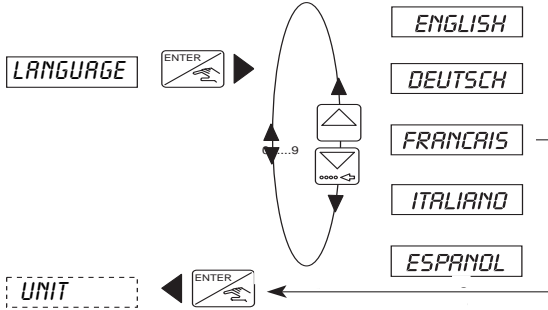

The required language is confirmed and activated via the ENTER-key.

4.4.2 ENGINEERING UNITS

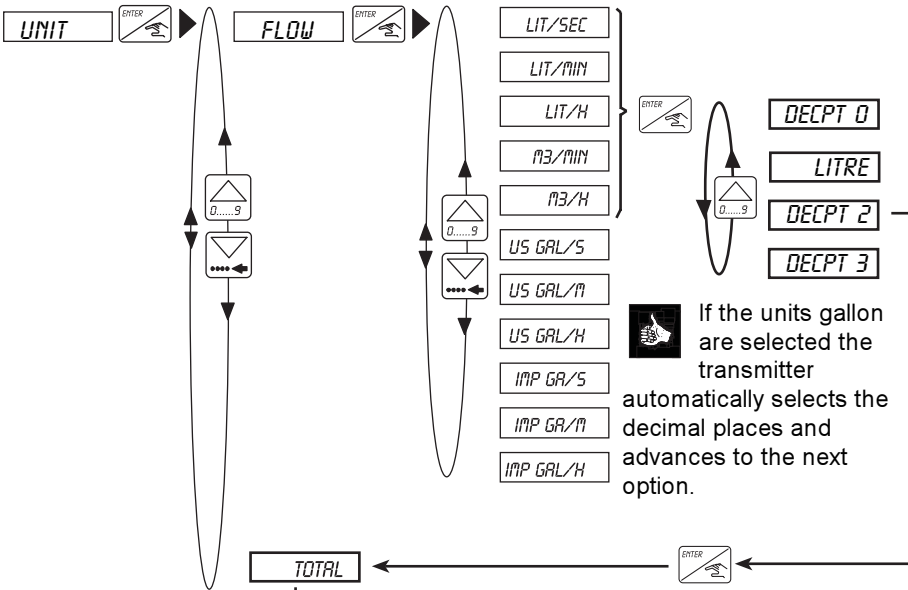

If the units gallon are selected the transmitter automatically selects the decimal places and advances to the next option.



Return to the main-menu via the sub-menu "TOTAL".

K-FACTOR



The flow can be displayed in any engineering units with 0, 1, 2 or 3 decimal digits. (except m³/min)



4.4.3 K-FACTOR

Within this menu the K-factor of the fitting can be entered manually according to the DN and material of the used fitting (see Type S020/1500/1501 Fitting reference manual) or a Teach-In procedure can be completed.

The teach-in procedure consists either of a volume measurement or a comparison measurement with another flow meter.



The transmitter uses the last K-factor entered or determined.

4.4.3.1 Manual Calculation of the K-Factor

For manual calculation and entry of the K-factor, the following equation can be used to determine the value. After the value has been determined select "TEACH IN" within the *K-FACTOR* option and enter the determined value.

$$K_{8045} = K_{\text{fitting}} \times F_s \times K_w$$

Where :

K fitting is the specific K-Factor of the fitting

F s is the specific cell constant of the sensor. This value is written on a sticker on the side of the sensor housing or on the cell cable.

K w is the temperature correction coefficient. This only needs to be used if the temperature > 40°C.



The correction coefficient depends on the pipe dimensions. Use the correct coefficient from the values below.

DN15 = + 0.2 %/°C Kw= 1-(0,2 x (Tw °C- 20 °C)/100)

DN20/25 = + 0.1 %/°C Kw= 1-(0,1 x (Tw °C- 20 °C)/100)

> DN25 = + 0.05 %/°C Kw= 1-(0,05 x (Tw °C- 20 °C)/100)



To assist with the manual determination of the K-Factor a worked example is displayed below;

K fitting = 1.69 (DN15 in Brass)

F s = 1.01

Temp. of the fluid = 70°C

K w = 1 - (0.2 x (70°C - 20°C) / 100) = 0.9 (§ 6.1 - Temp. Coeff.)

K 8045 = 1.69 x 1.01 x 0.9 = 1.54



CALIBRATION

4.4.3.2 Determination of the K-Factor via Teach-In Procedure

The K-Factor can be practically determined via volume or flow measurement depending on the application.




Steps for successful measurement (Teach-In)

- In order to determine an accurate volume, fill a tank to 100 litres of the liquid to be measured.
- When the message "TEACH Y" appears, press the ENTER key and select the "VOLUME" option to start the measuring procedure.
- The message "FILL END" (end of filling) will then appear.
- After switch on a pump or open a valve.
- When the tank is full, switch off the pump or close the valve. If ENTER is pressed it will end the measurement.
- The user will then be asked to enter the volume (100 litres).
- The calculated K-factor is displayed after validation.



The Teach-In is also available with reference to a flow meter. In this case select the "FLOW" option on entry to the Teach-In function.

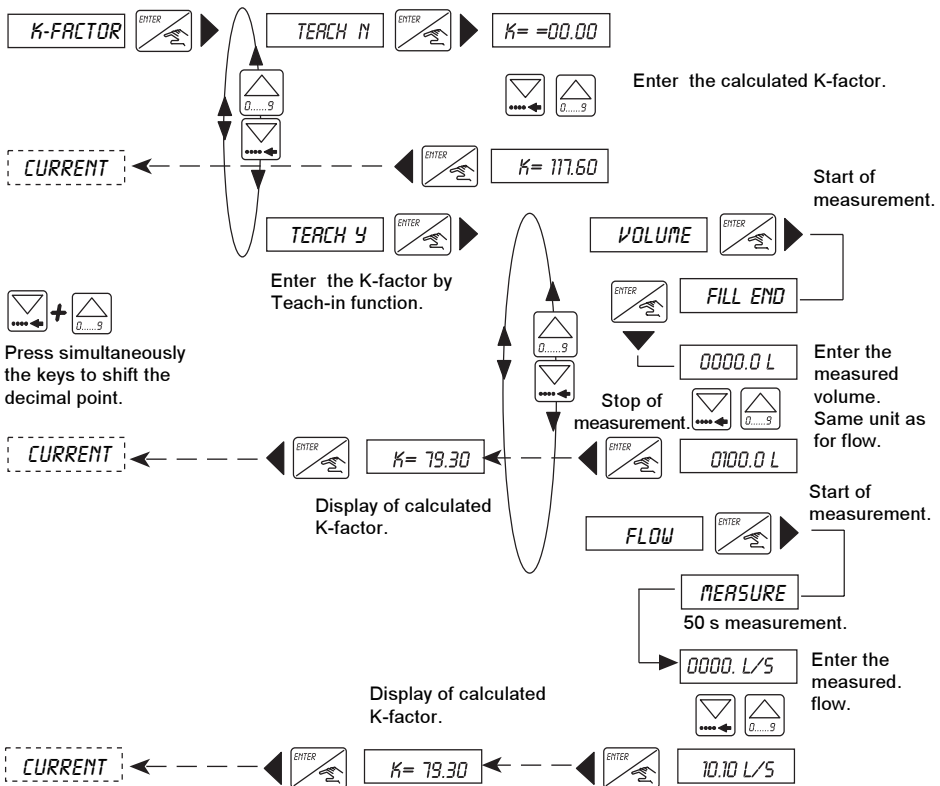

4.4.3 ENGLISH




4.4.4 OUTPUT CURRENT

Within this option the measuring range can be defined corresponding to the output current of 4-20 mA.



- The beginning of the measuring range might be higher than the end (inverted signal), eg/ 20 to 180 l/min corresponds to 20-4 mA.
- The adjustments (engineering unit and decimal point) selected for the flow will be valid within this option.
- The minimal difference between the flow rate at 4 mA and 20mA is dependent on the position of the decimal point.

Number of decimals	0	1	2	3
Minimal flow difference	2	0,2	0,11	0,101

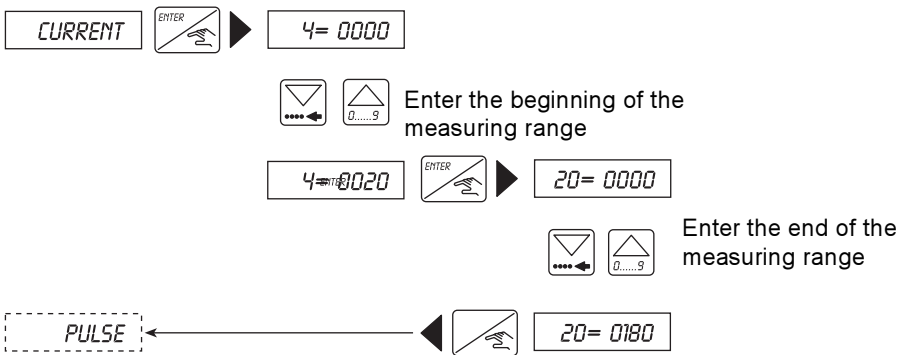

In case of electronic failure the device will emit an error signal of 22 mA.

The figure below shows an example of relationship between the 4-20mA output and the associated measuring range


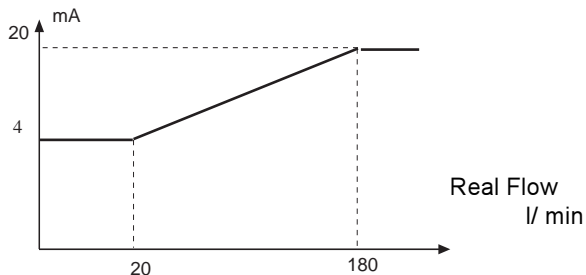


Figure 4.1 - Output Signal



CALIBRATION

4.4.5 PULSE OUTPUT

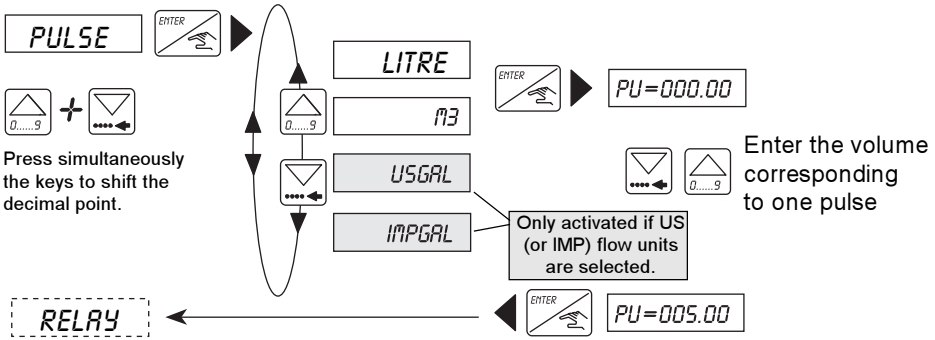


The parameters of the pulse output are defined. The volume inducing one pulse is determined. First enter the unit, then the value.

Ex 1 pulse corresponds to 100 l; Unit = litres and Pu = 100,00.



- The pulse frequency is given by $f = Q / Pu$; frequency must never exceed 250 Hz. Select the Pulse value in order to obtain a maximum frequency 0 200 Hz.
- If the pulse frequency is smaller than 2Hz, the pulse width will equal 250ms.
- For pulse frequencies higher than 2Hz the pulse width will decrease with increasing frequency to a minimum of 2ms.
- If $\frac{Q}{Pu}$ is greater than 250Hz the frequency pulse will equal 0.00Hz.

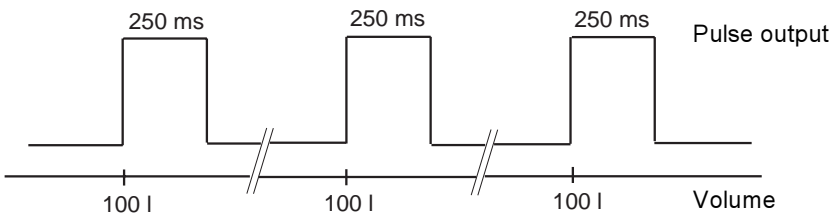



4.4.6 RELAY (OPTION)


The parameter definition of the limit contacts is completed within this mode. Two limit values are entered for each relay : 1 -, 1 + and 2 -, 2 +. The user also has the option to invert the relays.



- The following conditions must be observed: 1- - 1+, 2- - 2+.
- Ensure that security provisions are taken for the relay circuits (3A max).



- 1- and 2- = the low settings for both relays
- 1+ and 2+ = the high settings for both relays

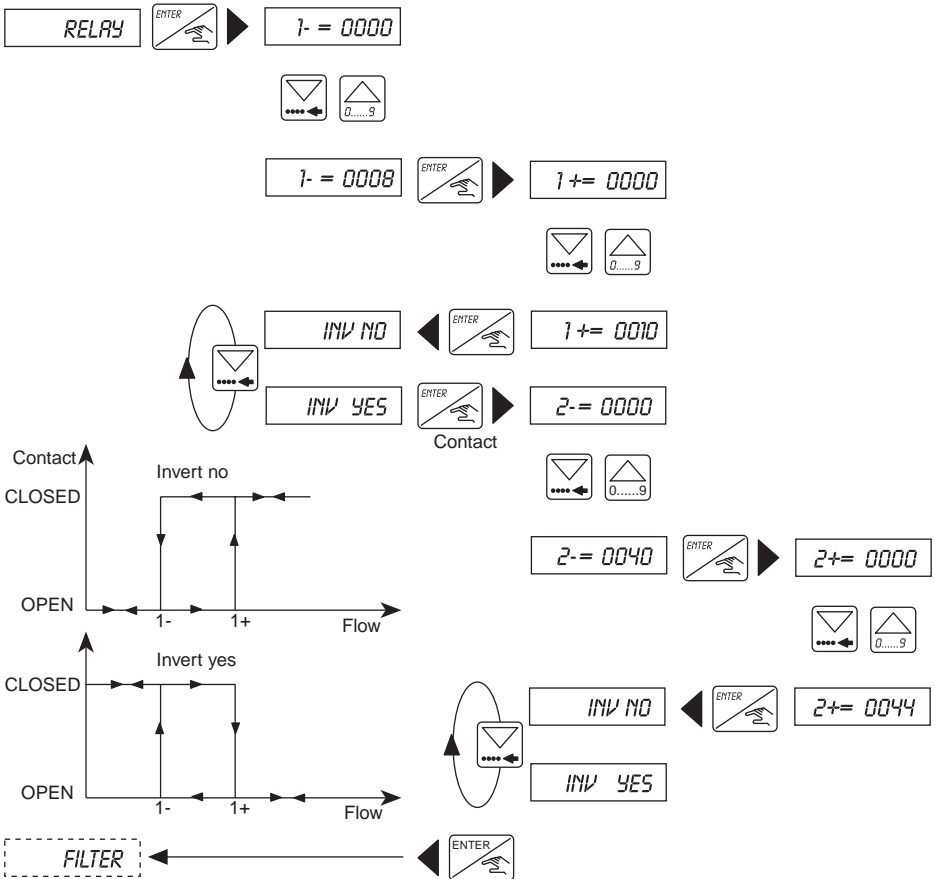



CALIBRATION

4.4.7 FILTER FUNCTION


The filter function provides a damping effect to prevent fluctuation within the output current and display. There are 2 types of filter (fast and slow) each with 10 levels of damping available from 0 to 9 with 0 having no damping effect.




The “Fast” filter is used when rapid changes within the varying flow can occur. (In cases of quick valve shut off the slow filter will take a few seconds to reach zero, while the fast filter will react immediately).



The “Slow” filter may be used in bad measuring conditions (e.g. in case of electrical or magnetical interference, earthing problems, air bubbles in the fluid, hard fluctuating flow, ...).

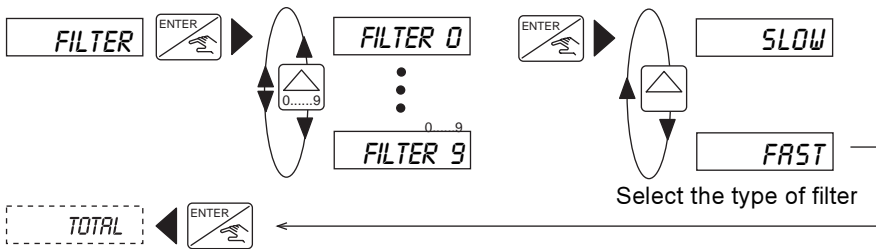

From the diagram below it is possible to see how the different filters influence the flow output over time.

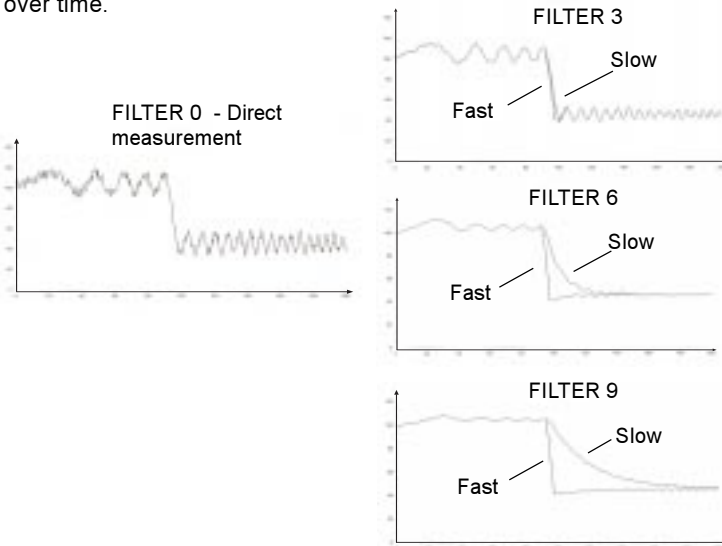




4.4.8 TOTALIZER

The main and daily totalizers are simultaneously reset within this menu. The reset procedure only starts when ENTER is pressed at the "END" position in the menu.




The transmitter totally resets both totalizers when the K-factor, or the units for flow and total are changed. The daily totalizer reset remains available in the main menu. (§ - 4.3)

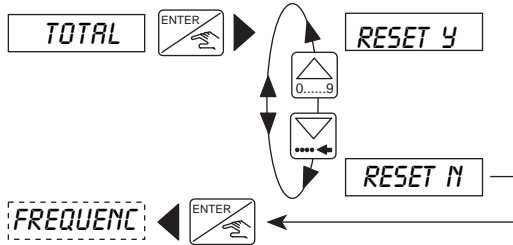

To avoid any accidental or unauthorised reset of the totalizer, set the internal Switch2 to the locked position (section 3.4.3).

4.4.9 50/60 HZ NOISE REJECTION

This function will filter any spurious signals carried by the power supply, although ensure that the device is not located near any large machinery as this can affect the measurement readings. To filter the spurious signals enter the frequency of the main power source.

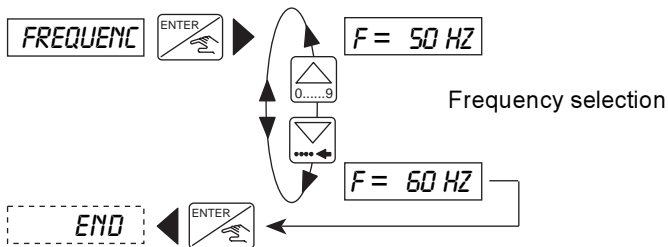

This function which cancels noises generated by the mains must be properly selected even if the transmitter is connected to a DC power supply.



TEST MENU

4.5 TEST MENU

PRESS    SIMULTANEOUSLY FOR 5 SECONDS



The internal Switch2 must be set in the unlocked position to enter parameters within this menu. (§ - 3.4.3)

The following parameters can be set within this menu:


SECTIONS

<i>OFFSET</i>	Offset adjustment (4 mA).	4.5.1
<i>SPAN</i>	Span adjustment (20 mA).	4.5.2
<i>CALIB Ø</i>	Flow zero-point adjustment.	4.5.3
<i>FLOW</i>	Entering the flowrate to be simulated. The outputs will react in accordance to this input.	4.5.4

END Return to the operation mode and storage of the new parameters for CALIB 0, OFFSET and SPAN. If the OFFSET/SPAN values are inappropriate the device will revert to "OFFSET" and new values must be entered.





4.5.1 OFFSET ADJUSTMENT

Within this option the user has the possibility of correcting the basic setting of 4 mA generated by the transmitter. The transmitter generates a value of 4mA by pressing  when "OFFSET" is displayed within the main test menu.


Measure the generated current with an ammeter. If the displayed value is incorrect it can be corrected by entering the measured value on the ammeter.

Adjustment range: + / - 0.5mA

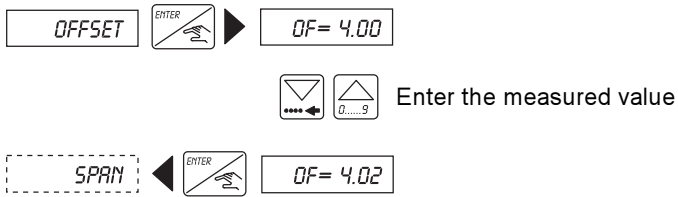


The corrected value of 4mA is calculated when  is pressed when at the 'END' position within the test menu.


4.5.2 SPAN ADJUSTMENT

Span compensation provides the option of changing the basic setting of 20 mA. The procedure is identical to that of the offset compensation above. The transmitter generates 20mA if the  key is pressed when "SPAN" is displayed within the main test menu.

Measure the generated current with an ammeter. If the displayed value is incorrect it can be corrected by entering the measured value on the ammeter.

Adjustment range: + / - 0.5mA

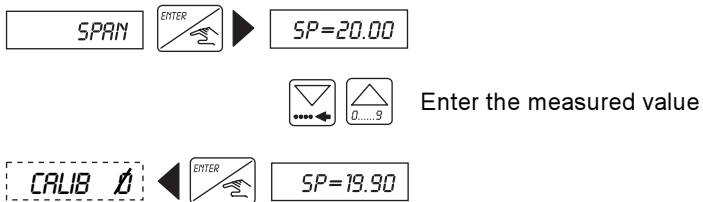

The corrected value of 20mA is calculated when  is pressed when at the 'END' position within the test menu.



TEST MENU

4.5.3 CALIBRATION OF THE ZERO POINT


Fill the pipe with the measured fluid and stop the flow. To calibrate the unit, press 'enter' when *CALIB 0* is displayed within the test menu and select *CALIB 4*. After selection the transmitter will automatically set the zero-point after 12 seconds.



The sensor must be immersed in fluid 24hrs before calibration. Ensure there are no air bubbles in the pipe and the fluid is not moving before commencing the calibration.




This calibration is only valid for the actual parameters (pipe, fitting and fluid characteristics) and must be completed before the determination of the K-Factor via the Teach-In method.

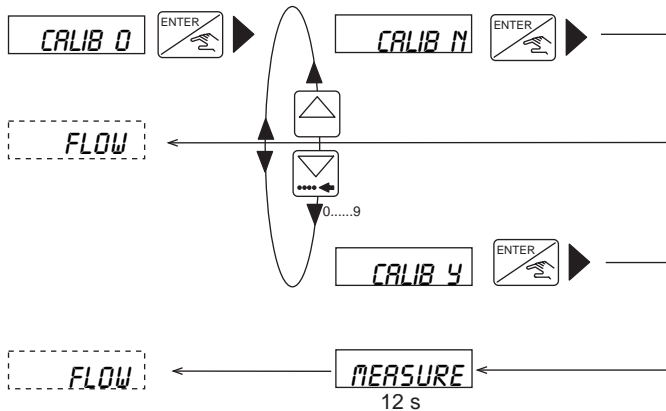



4.5.3 ENGLISH

4.5.4 FLOW SIMULATION

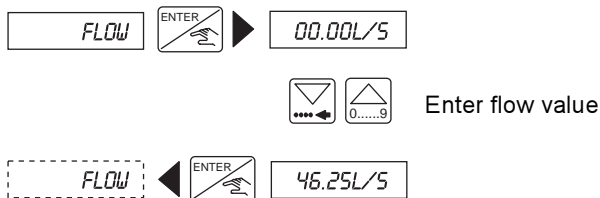A flow value can be simulated within this menu, allowing the user to test the system without any liquid being present. The simulated value influences all the outputs including the relays and pulse output.



Press  or  to stop the flow simulation.

4.6 8045 SETTINGS

4.6.1 TYPE 8045 FLOW TRANSMITTER ON DELIVERY

Language	English	Relay	1-:	00.00
Unit of flow	L/s		1+:	00.00
Unit of totalizers	L		Inverted:	No
Decimal Points	2		2-:	00.00
K factor	1		2+:	00.00
Current	4mA 00.00		Inverted:	No
	20mA 00.00	Filter	Filter 2 Slow	
Pulse output unit	L	Frequency	50 Hz	
PU:	00.00			

4.6.2 TYPE 8045 FLOW TRANSMITTER USER CONFIGURATION

IDENT NUMBER:

SERIAL NUMBER:

Language	Relay	1-:
Unit of flow		1+:
Unit of totalizers		Inverted:
Decimal Points		2-:
K factor		2+:
Current	4mA		Inverted:
	20mA	Filter	
Pulse output unit	FrequencyHz	
PU:			

Fluid temperature value at calibration:



MAINTENANCE

5.1 STORING AND CLEANING OF THE SENSOR

In correct installation conditions the 8045 flow transmitter is maintenance-free. If contamination or clogging should occur during operation the sensor can be cleaned with water or another cleaning agent compatible with the PVDF and SS316L.



It is highly recommended to perform a calibration of the zero point 24 hours after the cleaning of the electrodes, or in cases of changes of the fluid.



The current output is set to 22 mA in case of an electronic failure and at the start-up of the device all parameters are set to factory setting values (§ 4.6). The reasons for failure can be seen within "Display 'ERROR' - output current 22mA" in the trouble shooting guide below.

5.2 TROUBLE SHOOTING GUIDE



If any problems persist, please contact your local Bürkert subsidiary or return the product with a full explanation of the problem.

This section is designed to assist with problems which may occur during installation or operation. In if doubt please do not hesitate to contact you local Bürkert subsidiary.

Faults	Status	Actions	
The transmitter does not work			
Transmitter connected	No	Connect the device	3.3
Power supply on terminal + and - ok?	No	Check the connection	3.3
Power supply between 18-30VDC?	No	Change power supply	---
Power supply regulated (oscillations rate less than 5%)	No	Change power supply	---
Fuse OK (if any)	No	Change the fuses	---
Switch on (if any)	No	Set the switch ON	---
Transmitter programming/testing unavailable			
Internal switch 2 'Locked'?	Yes	Set switch 2 down.	3.4.3
Display 'ERROR' - output current 22mA			
Display at the start-up (EEPROM failure)?	Yes	Restart the device	---
Error at each start-up?	Yes	Return the device	---
Display after validation of the menu (EEPROM failure)	Yes	Configure the device again	4.4
Failure at each validation of the menu?	Yes	Return the device	---
Fluctuating display			
Inappropriate filter ?	Yes	Increase the filter or select slow mode filtering.	4.4.7
Air bubbles in the fluid	Yes	Set slow mode filtering	4.4.7
The electrodes are dirty	Yes	Clean the electrodes	5.1
Are the electrodes passivated	No	Install the transmitter into the fluid 24hr before use	3.1

5.1 ENGLISH



Faults	Status	Actions	
Is the flow rapidly fluctuating	Yes	Transmitter not suited for the application	----
Earth connection			
Is the earth connection good (No noise on the earth line)?	No	Use a non disturbed earth	----
Are metal pipes connected to the earth?	No	Connect the pipes to earth	----
Flow measurement incorrect			
Correct K-Factor?	No	Enter the correct coefficient or determine via Teach-In	4.4.3
The flow has stopped and the display does not equal zero	Yes	Perform a zero point calibration	4.5.3
Current output value			
Switch 1 correctly set? (Sinking or Sourcing)	No	Select appropriate position	3.4.3
Connection of the current output OK?	No	Reconnect the current output	3.3
Fixed current output value			
Parameters for current output OK?	No	Program the current output	4.4.4
The relays do not work			
Parameters OK?	No	Program the relay outputs	4.4.6
Relays correctly connected?	No	Connect relays	3.3
Connection of relays 1 and 2 inverted?	Yes	Connect relays accordingly	3.3
Protection fuses for the relays OK (If any)?	No	Change the fuses	----
Relay switches ON (if any)?	No	Switch ON	----

6.1 SPECIFICATIONS

Specification in relation to the process**Flow measurement**

Measurement type	Electromagnetical measurement
Measuring range	0,05 to 10 m/s (0.15 to 32.8 fps)
Measuring error	1) with individual works calibration (on request) or Teach-In: +/- 2 % o. R. (1-10 m/s) (*) 2) with standard mean K-Factor: +/- 4 % o. R. (1-10 m/s) (*)
Linearity	+/- (1 % o. R. + 0,1% o. F.S.) (*)
Repeatability	0.25 % of measured value

Piping installation

Pipes	Stainless steel, brass or plastic (PVDF, PP, PVC)
Connection	Solvent/fusion spigots, threaded ports (G, NPT, Rc), butt welding ends, flange, Tri-clamp - see instruction manual S020 - Ident. No.- 429633S
Pressure rating	PN 6
Fluid temperature	0 to 80 °C (32 to 176°F)
Conductivity of the fluid	min. 20 µS/cm
Materials contacting the fluid:	Sensor housing : PVDF Electrodes : Stainless-steel 316L (1.4404) Earth ring : Stainless-steel 316L (1.4404) Seals : FPM/EPDM

Specificaton in relation to the control outputs**Electrical connection**

Power supply	18-30 VDC regulated (oscillation rate \leq +/- 5%)
Consumption	8045 without relay : 60 mA 8045 with relays : 100 mA

Proportional output

Output type	Current output from 4-20 mA (error signal 22mA)
Accuracy	Dependent on the measuring error - Maximum of 4%
Wiring	Sinking or sourcing mode
Response time	0,5 s to 150 s depending on the filter to reach 95% of a variation
Maximum Load (current loop)	1300 Ω at 30 VDC 1000 Ω at 24 VDC 700 Ω at 18 VDC

Pulse output

Output type	Isolated NPN / PNP open collector
Specifications	30VDC max / 100mA max

Relay output

Output type	Normally open relays
Relay output	2 relays, freely adjustable AC : 250V / 3A DC : 30V / 3A (resistive load) Max. cutting power : 750 VA (resistive load)
Life expectancy	100 000 cycles (minimum)
Thresholds	Hysteresis programmable according to the temperature or flow

Specifications in relation to the user

User's interface

Display	15 x 60 mm LCD 8 digits, alphanumeric 15 segments, 9 mm high			
Flow units	<table border="0" style="display: inline-table; vertical-align: middle;"> <tr> <td style="border-right: 1px solid black; padding-right: 5px;">l m³ US gal Imp gal</td> <td style="padding: 0 5px;">} Per {</td> <td style="padding-left: 5px;">sec (except m³/sec.) min hr</td> </tr> </table>	l m ³ US gal Imp gal	} Per {	sec (except m ³ /sec.) min hr
l m ³ US gal Imp gal	} Per {	sec (except m ³ /sec.) min hr		
Display :				
Current output	Generated current indication : xx.xx mA			
Relay state	Red LED's on when contact is closed			
Programming	Menus with 3 programming keys			
Protection	Lockable switch for the 'Enter' key			

Processing

Filtering of the flow	10 levels of filtering (fast and slow) (filter 0 to 9)	
Temperature coefficient	DN15 =+ 0.2 %/°C	Kw= 1-(0,2 x (Tw °C- 20 °C)/100)
(for K-Factor determination)	DN20/25 =+ 0.1 %/°C	Kw= 1-(0,1 x (Tw °C- 20 °C)/100)
(cf § 4.4.3.1)	> DN25 = + 0.05 %/°C	Kw= 1-(0,05 x (Tw °C- 20 °C)/100)

Specifications in relation to the environment

Ambient conditions

Storing temperature	-20 to +60 °C (-4 to 140 °F)
Operating temperature	-20 to +60 °C (-4to 140 °F)
Relative humidity	max. 80 %
Enclosure rating	IP65

Construction

Dimensions maximum	166 x 88 x 116
Weight	550 g (maximum)

Materials in contact with the environment

Electronic housing	PC 20% glass reinforced fibre
Front plate	Polyester

Conformity to standards

Emission	According to generic norm EN 50081.1
Immunity	According of generic norm EN 50082.2

(*) Under reference conditions i.e measuring fluid = water, ambient and fluid temperature 20 °C, applying the minimum inlet and outlet pipes straights, matched inside pipe dimensions

o. R. = of Reading



o. F.S. = of Full Scale (10 m/s)

Kw = Temperature Coefficient

Tw = Temperature of the measured fluid

6.2 DIMENSIONS

6.2 ENGLISH

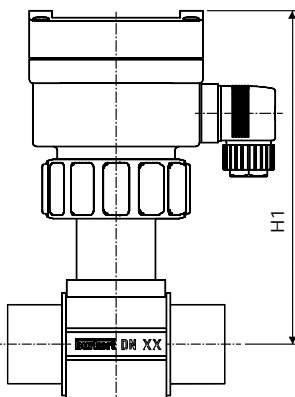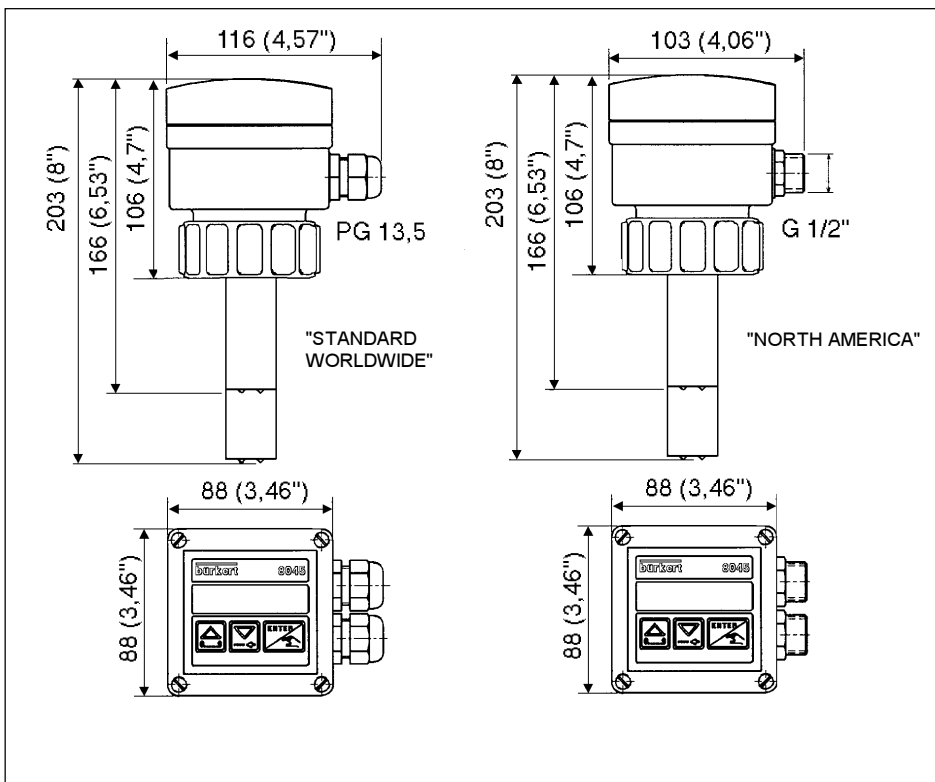

Variable dimensions (in mm)

DN	H1
15	173
20	171
25	171
32	177
40	178
50	184

6.3 DESIGN AND MEASURING PRINCIPLE

Design


The 8045 compact flow transmitter combines a flow sensor and a transducer with display within a splash-proof IP65 plastic enclosure.

- The base of the sensor finger contains a solenoid and 2 electrodes which are in contact with the fluid to detect the induced voltage.
- The electronic module converts the induced voltage into a flow value which can be displayed.
- The transducer uses a 3-wire circuit and requires a power supply of 18-30 VDC. The output signals are provided via one (transmitter without relay) or via two PG 13.5 (transmitter with relays).
- For additional control adjustable relays can be used (optional).

Measuring Principle

According to the induction law, a voltage is induced when a conductor is present within a magnetic field. By the magnetic-inductive principle of measurement the space between the 2 electrodes is filled with the conductive fluid creating a conductor.

- Through movement of the conductive fluid (min $20\mu\text{S}/\text{cm}$) perpendicular to the magnetic field which is provided by the solenoid produces a proportional voltage to the flow velocity which is induced within the fluid.
- This voltage is detected between the electrodes and can be converted and filtered according to the K-factor selected.
- The flow direction generates a positive or a negative value of the flow. The magnetic flow transmitter 8045 measures a flow velocity from 0.05 m/s (0.15 ft/s).
- A 4-20 mA standard signal, proportional to the flowrate is available as an output signal.
- In case of electronic failure a 22 mA signal is provided.

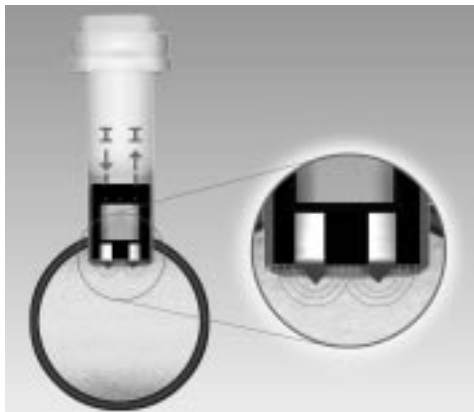



6.4 TYPE SPECIFICATION

8045 Electromagnetic Flow Transmitter

Worldwide types; PG 13.5 connection

4-20 mA output; pulse output; 2 totalizers

Power supply	Relays	Gasket	Sensor	PG 13.5	Ident N°
18-30 VDC	No	FPM	Short	1	426498R
18-30 VDC	No	FPM	Long	1	426499J
18-30 VDC	No	EPDM	Short	1	426500X
18-30 VDC	No	EPDM	Long	1	426501L
18-30 VDC	2	FPM	Short	2	426506R
18-30 VDC	2	FPM	Long	2	426507J
18-30 VDC	2	EPDM	Short	2	426508T
18-30 VDC	2	EPDM	Long	2	426509U

North America types; G 1/2" connection

4-20 mA output; pulse output; 2 totalizers

Power supply	Relays	Gasket	Sensor	G 1/2"	Ident N°
18-30 VDC	No	FPM	Short	1	426514G
18-30 VDC	No	FPM	Long	1	426515H
18-30 VDC	No	EPDM	Short	1	426516A
18-30 VDC	No	EPDM	Long	1	426517B
18-30 VDC	2	FPM	Short	2	426522G
18-30 VDC	2	FPM	Long	2	426523H
18-30 VDC	2	EPDM	Short	2	426524A
18-30 VDC	2	EPDM	Long	2	426525B

6.5 STANDARD DELIVERY


From a standard delivery you should have received the following:

- 1 8045 Electromagnetic Flow Transmitter
- 1 Instruction manual (3 languages)
- 1 Instruction manual for fitting S020/1500/1501

(If the transmitter is a relay version you should additionally receive 1 multiway seal).



6.6 LABEL TYPE 8045

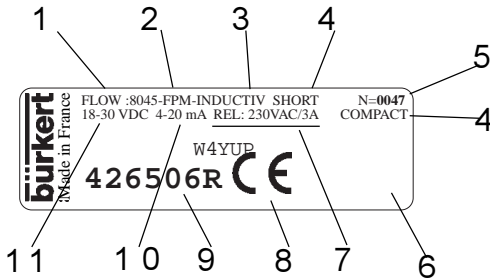

1. Transmitter type
2. Seal material
3. Function
4. Version
5. Serial number
6. (Factory internal No.)
7. Relay characteristics
8. CE Mark
9. Ident.No.
10. Output current
11. Power supply

6.7 SPARE PARTS LIST



For easy identification of the spare parts an exploded diagram is provided on the next page.

Position	Designation	Order N°
1	Sensor housing for 1 PG 13.5	425525A
2	Sensor housing for 2 PG 13.5	425526B
3	PG 13.5	418339G
4	PG 13.5 USA-version (G 1/2 ")	418340M
5	Cover with screws, sheeting and printed circuit board without relay	426530L
6	Cover with screws, sheeting and printed circuit board with 2 relays	426531H
7	Ring	619205L
8	Union nut	619204K
9	Sensor for DN 15 to 100 (1/4" - 4") short	426985H
10	Sensor for DN as from 100 (as from 5") long	426986A
	FPM seal kit	425554P
	EPDM seal kit	425555Q
	Instruction manual transmitter type 8045	426532A
	Instruction manual fitting type S020/1500/1501	429633S


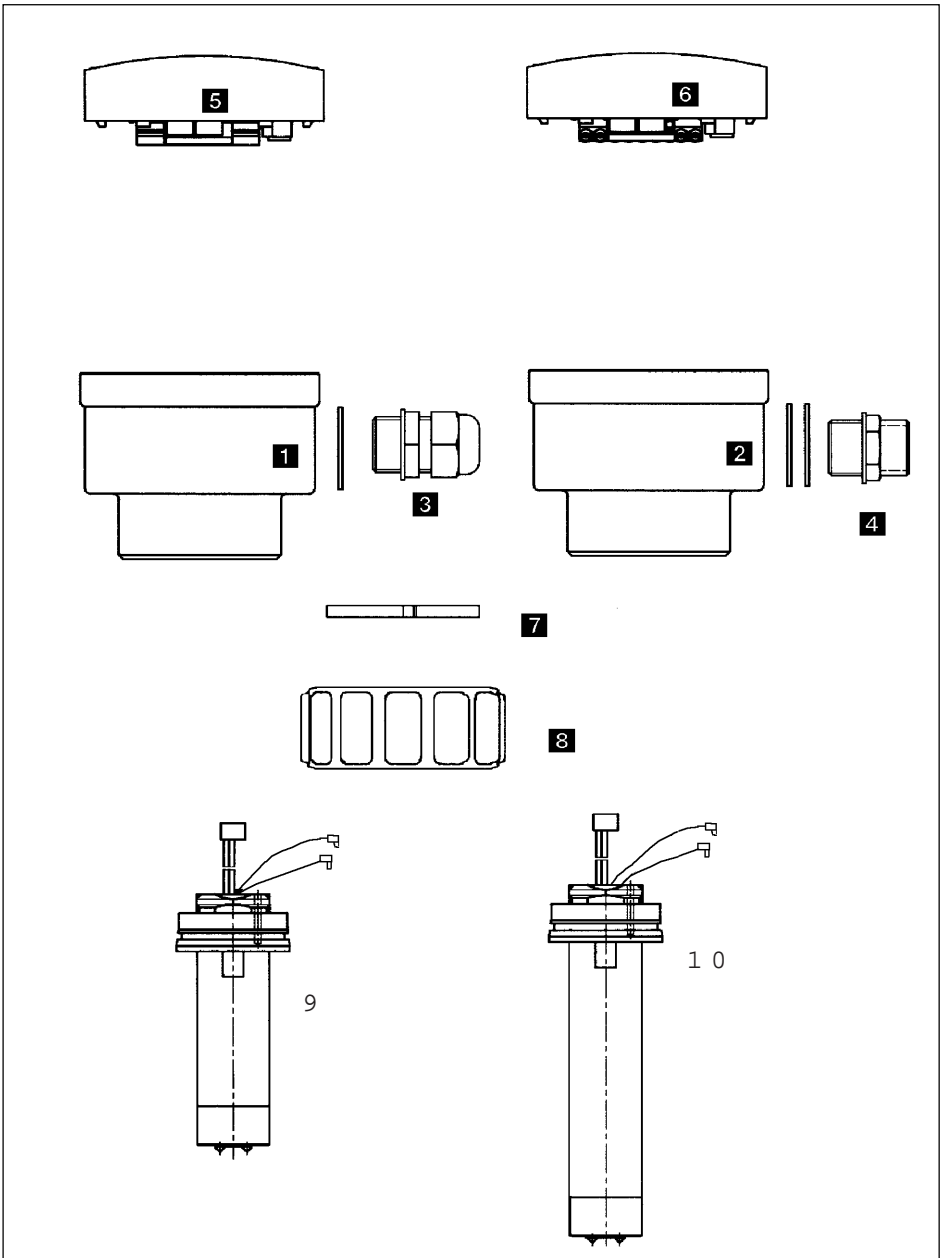


Fig. 6.1 Spare parts exploded view of the 8045 electromagnetic flow transmitter

FLOW CHART (L/MIN, DN IN MM AND M/S)

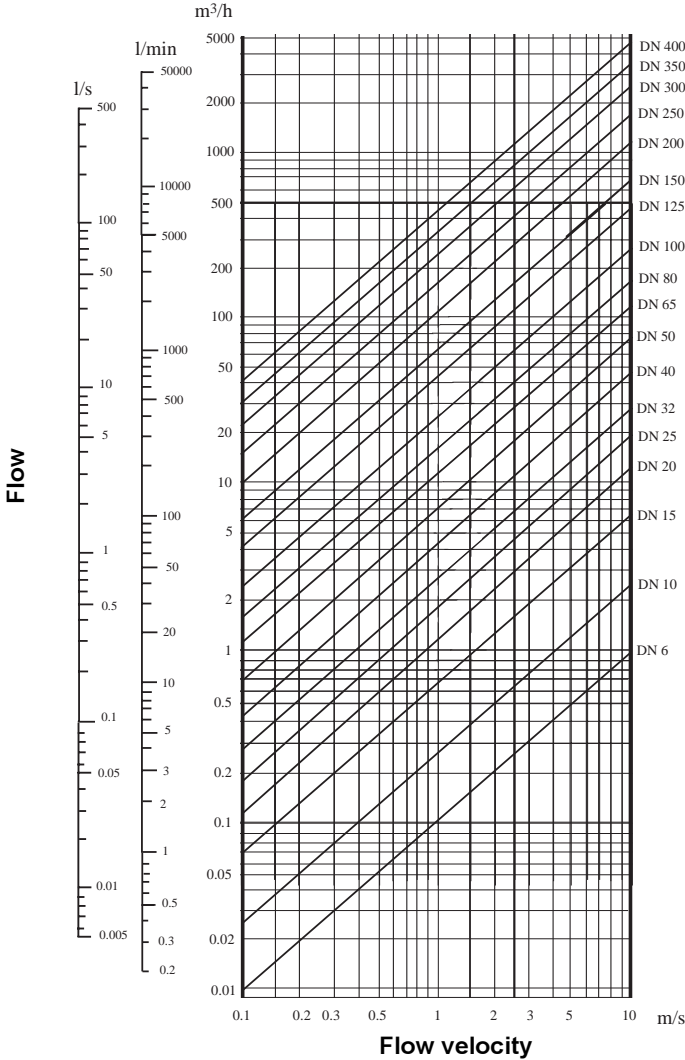

SELECTION EXAMPLE:


Specifications:

Nominal flow: 10 m³/h

Determination with

ideal flow velocity: 2-3 m/s

With these specifications, the required fitting diameter, as defined by the flow chart is DN 40.

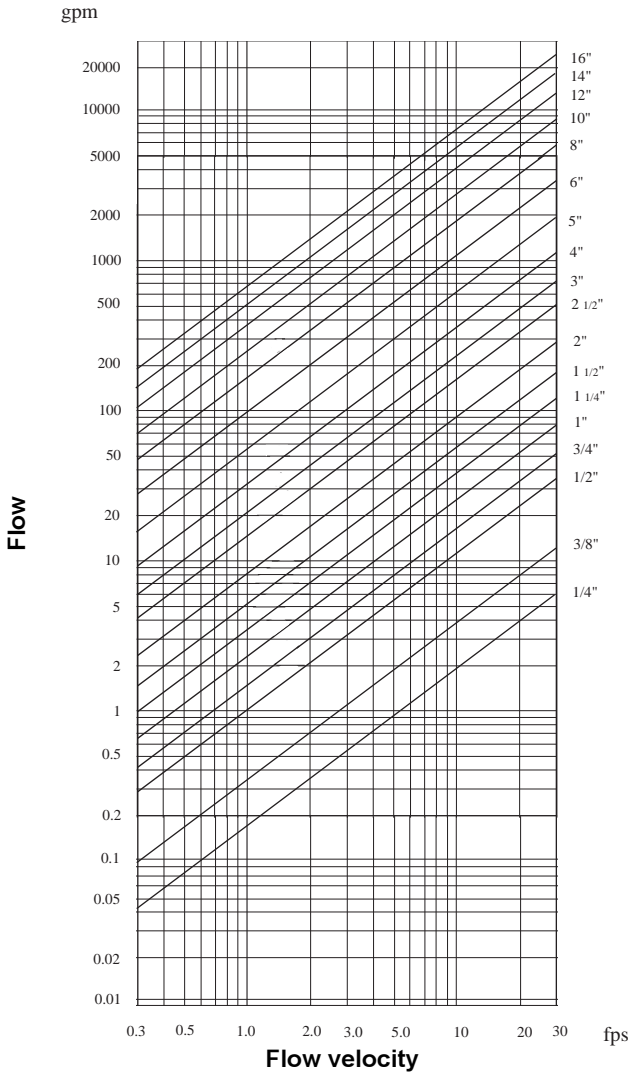FLOW CHART (GPM, DN IN INCH AND FPS)**SELECTION
EXAMPLE:****Specifications:**

Nominal flow: 50gpm

Determination with

ideal flow velocity: 8 fps

With these specifications, the required fitting diameter, as defined by the flow chart is 1 1/2".

SERVICE

Australia

Bürkert Fluid Control Systems
Unit 1 No.2, Welder Road
Seven Hills NSW 2147
Tel +61 2 967 461 66
Fax +61 2 967 461 67

Austria

Bürkert Contromatic GmbH
Central and Eastern Europe
Diefenbachgasse 1-3
Postfach 89
A-1150 Wien
Tel +43 1 894 13 33
Fax +43 1 894 13 00

Belgium

Bürkert Contromatic N.V./S.R
Middelmolenlaan 100
B-2100 Deurne
Tel +32 3 325 89 00,
Fax +32 3 325 61 61

Brasil

Conterval Ind. E. Com. Ltda.
Rua Pinheiros 358
Caixa Postal 11167
05422 San Paulo
Tel +55 11 852 93 77
Fax +55 11 852 95 61

Canada

Bürkert Contromatic Inc.
760 Pacific Road, Unit 3
Oakville, Ontario, L6L 6M5
Tel +1 905 847 55 66,
Fax +1 905 847 90 06

Chile

Termodinamica Ltd.
Av. Bulnes 195, Cas. 118
Santiago de Chile
Tel +56 2 635 39 50
Fax +56 2 635 39 47

China

Bürkert Contromatic
(Suzhou) Co. Ltd.
2/F, 71 Zhu Yuan Road
215011 Suzhou
Tel +86 512 808 19 16
Fax +86 512 824 51 06

Bürkert Contromatic
China/HK Ltd.
Rm. 1313
No. 103, Cao Bao Road
200233 Shanghai P.R.C
Tel +86 21 6484 7007
Fax +86 21 6484 7008

Bürkert Contromatic
China/HK Ltd.
Beijing Office
Rm. 808, Jing Tai Building
No. 24, Jianguomen
Waldajie
100022 Beijing P.R.C
Tel +86 10 6508 33 31
Fax +86 10 6592 86 29

Bürkert Contromatic
China/HK Ltd.
Cheng Du Representative Office
Rm. 502, Fujii Building
No. 26 Shududadao
Dongfeng Street
Chengdu P.R.C
Tel +86 28 443 1895
Fax +86 28 445 1341

Denmark

Bürkert-Contromatic A/S
Horkær 24
DK-2730 Herlev
Tel +45 44 50 75 00
Fax +45 44 50 75 75

Finland

Bürkert Oy
Atomitie 5
SF-00370 Helsinki
Tel +358 9 549 70 600
Fax +358 9 503 12 75

France

Bürkert Contromatic
B.P. 21
Triembach au Val
F-67220 Villé
Tel +33 (0) 388 58 91 11
Fax +33 (0) 388 57 09 61

Germany / Deutschland

Bürkert Steuer- und Regeltechnik
Christian-Bürkert-Straße 13-17
D-74653 Ingelfingen
Tel +49 7940 10-0
Fax +49 7940 10 361

Niederlassung NRW
Holzener Straße 70
D-58708 Menden
Tel +49 2373 96 81-0
Fax +49 2373 96 81-52

Niederlassung Frankfurt
Am Flugplatz 27
D-63329 Egelsbach
Tel +49 6103 94 14-0
Fax +49 6103 94 14-66

Niederlassung München
Paul-Gerhardt-Allee 24
D-81245 München
Tel +49 89 82 92 28-0
Fax +49 89 82 92 28-50

Niederlassung Berlin
Bruno-Taut-Straße 4
D-12524 Berlin
Tel +49 30 67 97 17-0
Fax +49 30 67 97 17-66

Niederlassung Dresden
Christian Bürkert Straße 2
D-01900 Großröhrsdorf
Tel +49 35952 3 63 00
Fax +49 35952 3 65 51

Niederlassung Hannover
Rendburger Straße 12
D-30569 Hannover
Tel +49 511 9 02 76-0
Fax +49 511 9 02 76-66

Niederlassung Stuttgart
Karl-Benz-Straße 9
D-70794 Filderstadt (Bernh.)
Tel +49 711 4 51 10-0
Fax +49 711 4 51 10-66

Greece

Tevox E.E
3 Xirogianni Straße
Zografos Athen
Tel +30 1-7 71 50 97
Fax +30 1-7 75 12 26

Great Britain

Bürkert Contromatic Ltd.
Brimmscombe Port Business Park
Brimmscombe, Stroud, Glos.
GL5 2QF
Tel. +44 (0) 1453 73 13 53
Fax +44 (0) 1453 73 13 43

Hong Kong

Bürkert Contromatic
(China/HK) Ltd.
Unit 708, Prosperity Centre
77-81 Container Port Road
Kwai Chung N.T.
Hong Kong
Tel +852 2480 1202
Fax +852 2418 1945

Indonesia

P.T. Fulkosindo
JLKH Hasyim Ashari No. 38-A
Jakarta 10140
Tel +62 21 386 24 85
Fax +62 21 386 24 85

SERVICE

Italy

Bürkert Contromatic Italiana S.p.A.
Centro Direzionale 'Colombiolo'
Via Roma 74
I-20060 Cassina De Pecchi (MI)
Tel +39 02 952 071
Fax +39 02 952 07 251

Japan

Bürkert Contromatic Ltd.
3-39-8 Shoan
Suginami-ku
Tokyo 167-0054
Tel +81 3 324 734 11
Fax +81 3 324 734 72

Korea

Bürkert Contromatic Korea Co. Ltd.
4-10 Yangjae-Dong
Secho-Ku
Seoul 137-130
Tel. +82 2 346 255 92
Fax +82 2 346 255 94

Malaysia

Bürkert Malaysia Sdn. Bhd.
N° 22 Lorong Helang 2
11700, Sunggai Dua
Penang
Tel. +60 4 657 64 49
Fax +60 4 657 21 06

Netherlands

Bürkert Contromatic BV
Computerweg 9
NL-3606 AV Maarssen
Tel. +31 346 58 10 10
Fax +31 346 56 37 17

New Zealand

Bürkert Contromatic Ltd.
Unit 5, 23 Hannigan drive
Mt Wellington
Auckland
Tel +64 9 570 25 39
Fax +64 9 570 25 73

Norway

Bürkert Contromatic A/S
Hvamstuppen 17
P.O. Box 243
N-2013 Skjetten
Tel +47 63 84 44 10
Fax +47 63 84 44 55

Philippines

Delrene EB Controls Center
2461 Uradaneta St. Guadelupe
Nuevo Makati Metro
Manila 3116
Tel +63 2 819 05 36
Fax +63 2 819 05 47

Poland

Bürkert Contromatic Sp.z.o.o.
1 Szpitalna Street
PL-00-684
Warszawa
Tel +48 22 627 47 20
Fax +48 22 627 47 20

Portugal

LA 2ª P Lda
Rua Almirante Sousa Dias
Loja D. Nova Oeiras
P-2780 Oeiras
Tel. +351 1 442 26 08
Fax +351 1 442 28 08

Singapore

Bürkert Contromatic Singapore
Pte.Ltd.
No.11 Playfair Road
Singapore 367986
Tel +65 383 26 12
Fax +65 383 26 11

Spain

Bürkert Contromatic Española S.A.
San Gabriel 40-44
E-08950 Esplugues de Llobregat
Tel +34 93 371 08 58
Fax +34 93 371 77 44

South Africa

Bürkert Contromatic Pty.Ltd.
P.O.Box 26260, East Rand 1452
Republic of South Africa
Tel +27 11 397 2900
Fax +27 11 397 4428

Sweden

Bürkert Contromatic AB
Skeppsbron 13 B, 5 tr.
S-21120 Malmö
Tel +46 40 664 51 00
Fax +46 40 664 51 01

Bürkert Contromatic AB

Havsörnstorget 21
Box 1002
S-12329 Farsta
Tel +46 40 664 51 00
Fax +46 8 724 60 22

Switzerland

Bürkert-Contromatic AG Schweiz
Bösch 65
CH-6331 Hünenberg / ZG
Tel +41 41 785 66 66
Fax +41 41 785 66 33

Taiwan

Bürkert Contromatic Taiwan Ltd.
3F No. 475 Kuang-Fu South Road
R.O.C - Taipei City
Tel +886 2 275 831 99
Fax +886 2 275 824 99

Thailand

Alpha Contromatic Co. Ltd.
259/13 Sukhvit 22
Bangkok 10110
Tel +420 641 22 61 80
Fax +420 641 22 61 81

Turkey

Bürkert Contromatic Ltd.
Kontrol Sistemleri Ticaret A.S
1203/8 Sok. No. 2-E
Yenisehir
Izmir
Tel +90 232 459 53 95
Fax +90 232 459 76 94

Tzechia

Bürkert Contromatic Spool.s.r.o
Prosenice c. 180
CZ - 751 21 Prosenice
Tel +42 0641 226 180
Fax +42 0641 226 181

USA

Bürkert Contromatic Corp.
2602 McGaw Avenue
Irvine, CA 92614, USA
Tel. +1 949 223 31 00
Fax +1 949 223 31 98

