



JUMO dTRANS T04

Four-wire Transmitter, settable via DIP switch/PC setup program

for connection to Pt100/Pt1000 resistance thermometer or potentiometer; rail-mounted for building into control cabinets

Brief description


These transmitters are designed for industrial applications and are used to measure the temperature or resistance through a Pt100 or Pt1000 resistance sensor or potentiometer in 2-wire or 3-wire circuit connection. The 0 – 20 mA, 4 – 20 mA or 0 – 10 V output signal is available linear with temperature/resistance. The continuous analog signal path enables a fast reaction of the output to a temperature change (analog continuous measurement instead of digital sampling rate). This results in a low-noise output signal that is immune to interference. High precision, even with small ranges, is ensured by the range-specific gain adjustment. The transmitter can be set either on the instrument itself, via DIP switch, or through the PC setup program.



dTRANS T04
Type 707040/...



Block structure

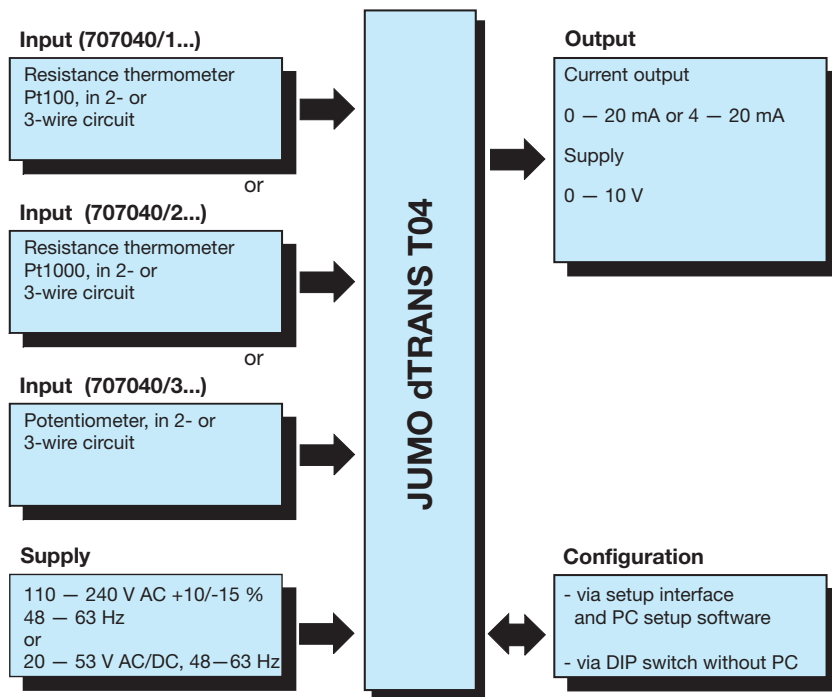

Key features

- Measuring range selectable via DIP switch or through the PC setup program
- Choice of signal output: 0 – 10V, 0 – 20mA or 4 – 20mA
- Fast response, thanks to continuous analog measurement
- Low-noise current signal, immune to interference
- Electrical isolation between input, output / mains supply
- Current/voltage output

Controls

| | |
|--|---|
| | <p>The chosen measuring range and output response can be set via DIP switch. Using the PC setup program, additional ranges and parameters are configurable.</p> |
|--|---|

Technical data

Input

| | | | |
|--|--|---|---------------|
| Measurement input | Pt100 EN 60 751 | Pt1000 EN 60 751 | Potentiometer |
| Range limits | -200 to +850°C | -200 to +850°C | 0 – 11000Ω |
| Connection circuit | 2- and 3-wire circuit | | |
| Configuration | through DIP switch or using the PC setup program | | |
| Shortest span | 25°C | 25°C | 250Ω |
| Largest span | 1050°C | 1050°C | 11000Ω |
| Range start for shortest span | -50°C to +20°C | -50°C to +20°C | 0 – 500Ω |
| Range start for other spans | see range organization on Page 5 and Page 6 | | |
| Unit | °C (°F settable through the PC setup program) | °C (°F settable through the PC setup program) | Ω |
| Sensor lead resistance for 3-wire connection | ≤ 11Ω per conductor | | |
| Sensor lead resistance for 2-wire connection | factory-set: 0Ω lead resistance, adjustable through the PC setup program | | |
| Sensor current | ≤ 0.5mA | ≤ 0.1mA | ≤ 0.1mA |
| Sampling rate | continuous measurement (analog signal path) | | |

Output

| | | | |
|--|---|---|-----------------------|
| Measurement input | Pt100 EN 60 751 | Pt1000 EN 60 751 | Potentiometer |
| Output signal - current: - voltage: | selectable through DIP switch or PC setup program proportional DC current 0 – 20mA or 4 – 20mA DC voltage 0 – 10V | | |
| Transfer characteristic - for resistance thermometer: - for potentiometer: | linear with temperature linear with resistance | | |
| Transfer accuracy | ≤ ± 0.1% ¹ | | |
| Residual ripple | ≤ ± 0.2% ¹ | | |
| Burden (with current output) | ≤ 750Ω | | |
| Burden error | ≤ ± 0.01% / 100Ω ¹ | | |
| Current limiting | > 21.6mA – < 28mA (24mA typical) | | |
| Load (with voltage output) | ≥ 10kΩ | | |
| Load error | ≤ ± 0.1% ¹ | | |
| Voltage limiting | > 11V – < 14V (12V typical) | | |
| Settling time on a temperature change | ≤ 40msec | | |
| Settling time after switch-on or reset | ≤ 200msec | | |
| Calibration conditions | 230V AC / 23°C (± 5°C) | | |
| Calibration accuracy | ≤ ± 0.3% ^{1,2} or ≤ ± 0.3°C ² | ≤ ± 0.3% ^{1,2} or ≤ ± 0.3°C ² | ≤ ± 0.3% ¹ |
| Supply voltage error | ≤ ± 0.05% ¹ | | |

1. All data refer to the range end value 10V or 20mA

2. The larger value applies

Measuring circuit monitoring

| | |
|--|---|
| Underrange: - current output 4 – 20mA - current output 0 – 20mA - voltage output 0 – 10V | falling to ≤ 3.6mA < 0mA (-0.05mA typical) < 0V -0.6V typical) |
| Overrange - current output 4 – 20mA - current output 0 – 20mA - voltage output 0 – 10V | rising to > 21.6mA – < 28mA (24mA typical) rising to > 21.6mA – < 28mA (24mA typical) rising to > 11V – < 14V (12V typical) |
| Probe short-circuit: - current output 4 – 20mA - current output 0 – 20mA - voltage output 0 – 10V | ≥ 1.5mA – ≤ 3.6mA (2mA typical) < 0mA (-0.05mA typical) < 0V (-0.6V typical) |

| | |
|---|--|
| Probe and lead break: - current output 4 — 20mA - current output 0 — 20mA - voltage output 0 — 10V | Signal is configurable. positive signal: > 21.6mA — < 28mA (24mA typical) negative signal: ≥ 1.5mA — ≤ 3.6mA (2mA typical) positive signal: > 21.6mA — < 28mA (24mA typical) negative signal: < 0mA (-0.05mA typical) positive signal: > 11V — < 14V (12V typical) negative signal: < 0V (-0.6V typical) |
|---|--|

Electrical data

| | | |
|----------------------|---|---|
| Supply voltage | 110 — 240V AC +10/-15%, 48 — 63Hz | 20 — 53V AC/DC, 48 — 63Hz |
| Power consumption | 4VA | 3VA |
| Electrical safety | to EN 61 010, Part 1 overvoltage category II, pollution degree 2, protection class I | to EN 61 010, Part 1 protection class III, for operation with SELV/PELV circuits |
| Test voltage | 3700V | 500V |
| Electrical isolation | The supply is electrically isolated from the input and the output. There is no electrical isolation between input, output and setup connector. | The supply is electrically isolated from the input and the output. There is no electrical isolation between input, output and setup connector. |

Environmental influences

| | |
|--|--|
| Operating temperature range | -25 to +55°C |
| Storage temperature range | -40 to +90°C |
| Storage temperature humidity | rel. humidity ≤ 85 %, no condensation |
| Temperature error | ≤ ± 0.01 % / °C ¹ |
| Climatic conditions | EN 60721-3-3 3K3 rel. humidity ≤ 85 % annual average, no condensation |
| Vibration strength | according to GL Characteristic 2 |
| EMC - interference emission - immunity to interference | EN 61 326 Class B to industrial requirements |
| IP enclosure protection | IP20 to EN 60 529 |

1. All data refer to the range end value 10V or 20mA

Housing

| | |
|------------------------|--|
| Material | polycarbonate |
| Flammability class | UL 94 V0 |
| Dimensions (W x H x D) | 22.5 x 93.5 x 60mm |
| Screw terminal | 2,5mm ² wire cross-section / 2.5mm wire dia. |
| Mounting | on 35mm x 7.5mm DIN rail to EN 60 715 A.1, for installation in control cabinets |
| Operating position | unrestricted |
| Weight | approx. 100g |

PC setup program

The PC setup program is used for configuration and fine adjustment of the transmitter from a PC (e.g. when the sensor drifts). Connection is through the PC interface with TTL/RS232 converter and adapter and the setup interface of the transmitter. In order to configure the transmitter, it must be connected to the supply.

Configurable parameters

- TAG number (14 characters)
- response to probe and cable break
- range start, range end
- output signal 0(4) – 20mA or 0 – 10V
- lead resistance for 2-wire circuit

Fine adjustment


Fine adjustment means correction of the output signal of a configured transmitter; systematic errors such as those caused by an unsuitable probe mounting can be compensated. The signal can be adjusted in the range $\pm 0.2\text{mA}$ for current output and $\pm 0.1\text{V}$ for voltage output. Fine adjustment can only be carried out through the setup program.

Hardware and software requirements

The following hardware and software requirements must be met for installing and operating the PC setup program:

- IBM-PC or compatible PC with Pentium processor or higher
- 64 MB main memory
- 15MB available on hard disk
- CD-ROM drive
- 1 free serial interface
- Win 98, ME or Win NT4.0, 2000, XP


DIP switch configuration
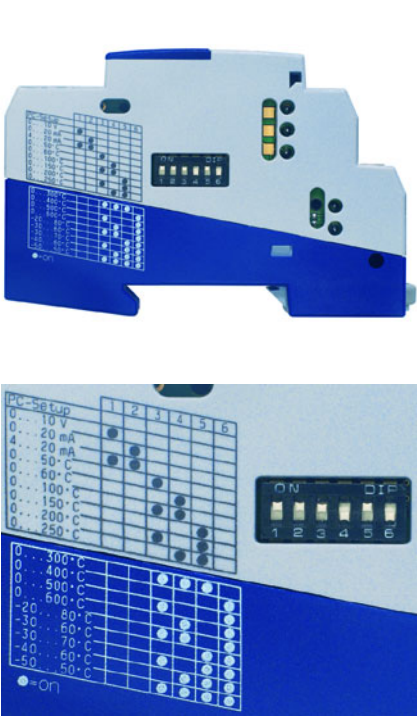
| | Function or measuring range for Pt100 and Pt1000 | Function or measuring range for potentiometer | DIP switch | | | | | |
|---|--|---|------------|---|---|---|---|---|
| | | | 1 | 2 | 3 | 4 | 5 | 6 |
|  | PC setup ¹ | PC setup ¹ | | | | | | |
| | Output 0 – 10V | Output 0 – 10V | • | | | | | |
| | Output 0 – 20mA | Output 0 – 20mA | | • | | | | |
| | Output 4 – 20mA | Output 4 – 20mA | • | • | | | | |
| | Range 0 to 50°C | Range 0 – 500Ω | | | • | | | |
| | Range 0 to 60°C | Range 0 – 1 kΩ | | | | • | | |
| | Range 0 to 100°C | Range 0 – 2 kΩ | | | • | • | | |
| | Range 0 to 150°C | Range 0 – 3 kΩ | | | | | • | |
| | Range 0 to 200°C | Range 0 – 4 kΩ | | | • | | • | |
| | Range 0 to 250°C | Range 0 – 5 kΩ | | | | • | • | |
| | Range 0 to 300°C | Range 0 – 6 kΩ | | | • | • | • | |
| | Range 0 to 400°C | Range 0 – 7 kΩ | | | | | | • |
| | Range 0 to 500°C | Range 0 – 8 kΩ | | | • | | | • |
| | Range 0 to 600°C | Range 0 – 9 kΩ | | | | • | | • |
| | Range -20 to +80°C | Range 0 – 10 kΩ | | | • | • | | • |
| | Range -30 to +60°C | Range 0 – 11 kΩ | | | | | • | • |
| | Range -30 to +70°C | | | | • | | • | • |
| | Range -40 to +60°C | | | | | • | • | • |
| | Range -50 to +50°C | | | | • | • | • | • |

• = ON

1. When configuring through the PC setup program, the input **and** output must be configured from the PC.

Measuring range organization (resistance thermometer)

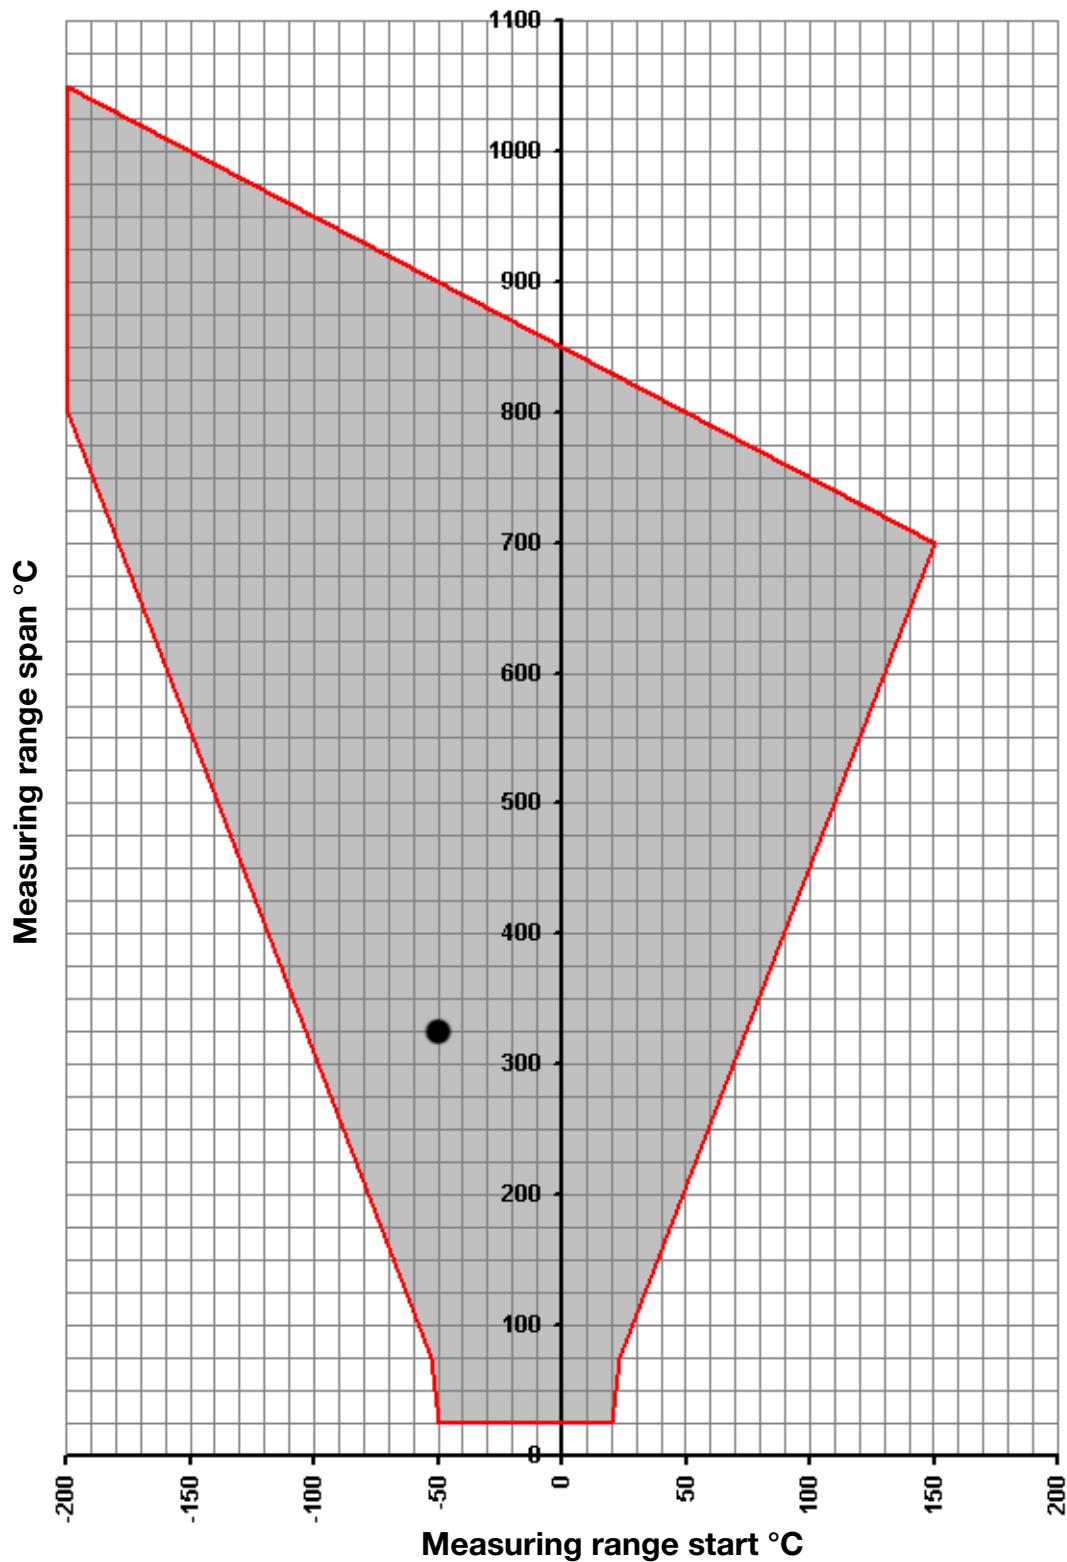


All the possible range-start values in relation to the range span are contained within the gray area.

$$\text{range span} = \text{range end} - \text{range start}$$

Example: range start = -50°C, range end = 275°C
 range span = range end - range start = 275°C - (-50°C) = 325°C

Please note: When selecting the range start, make sure it lies within the gray area.

Measuring range organization (potentiometer)

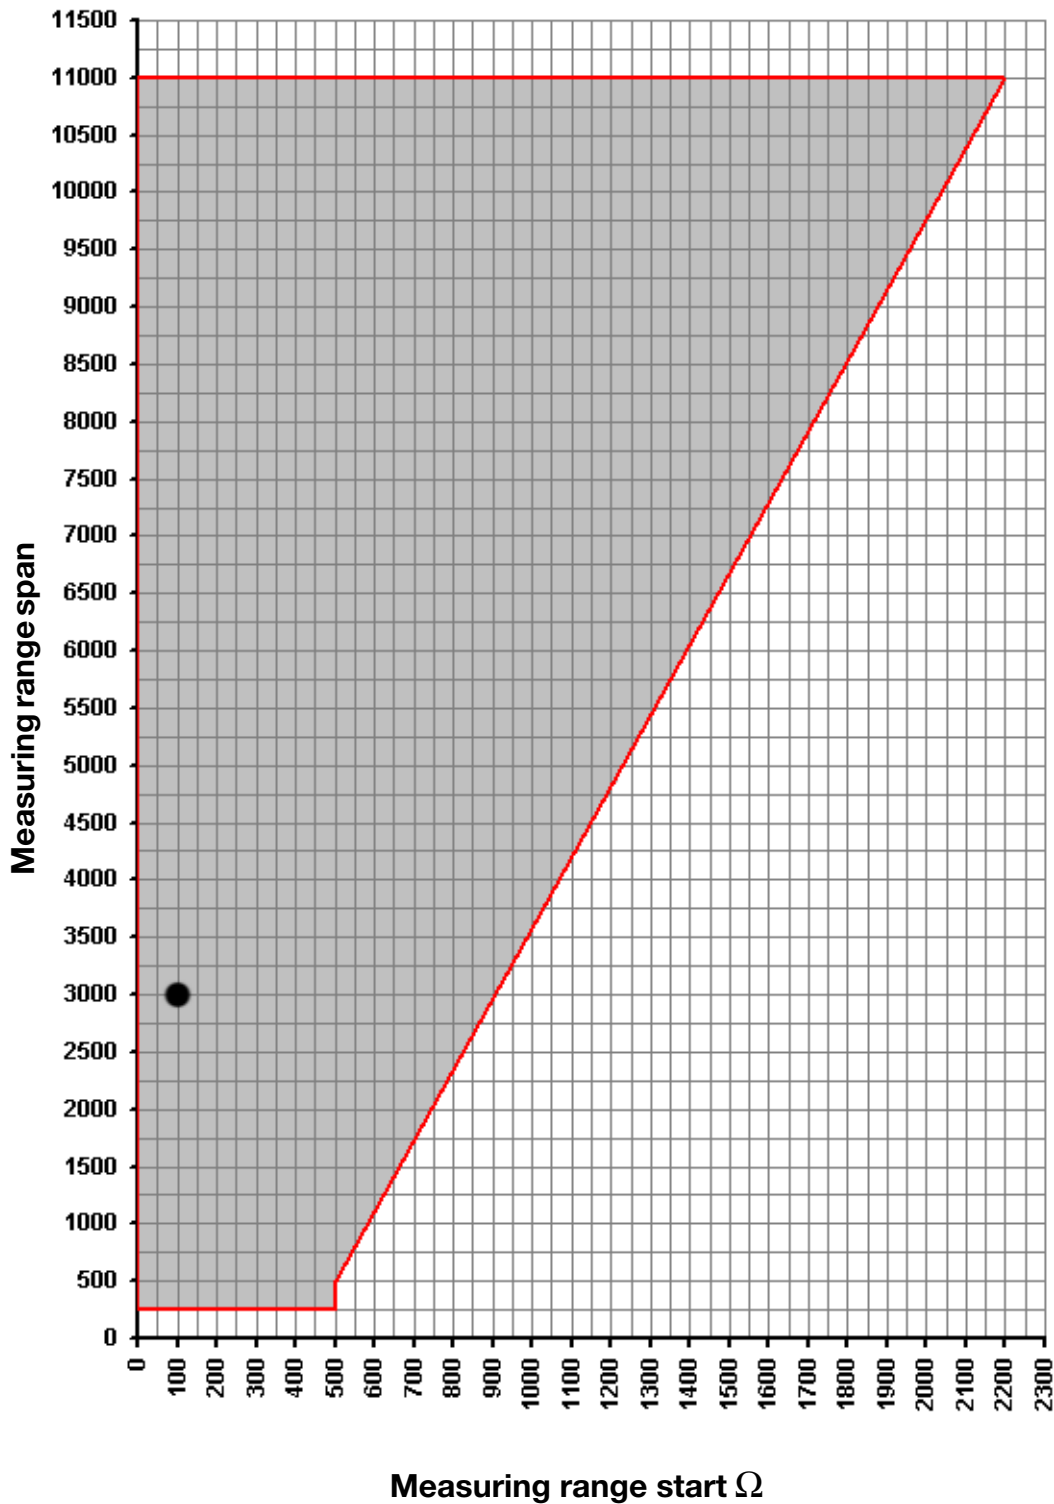


All the possible range-start values in relation to the range span are contained within the gray area.

$$\text{range span} = \text{range end} - \text{range start}$$


Example: range start = 100 Ω , range end = 3100 Ω
 range span = range end - range start = 3100 Ω - 100 Ω = 3000 Ω

Please note: When selecting the range start, make sure it lies within the gray area.

Connection diagram

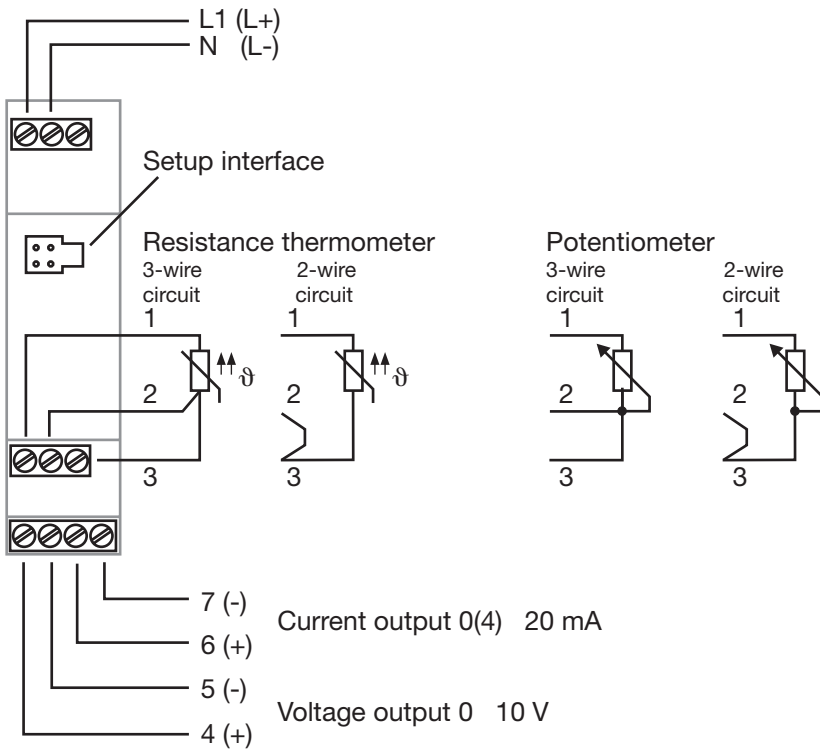

Dimensions

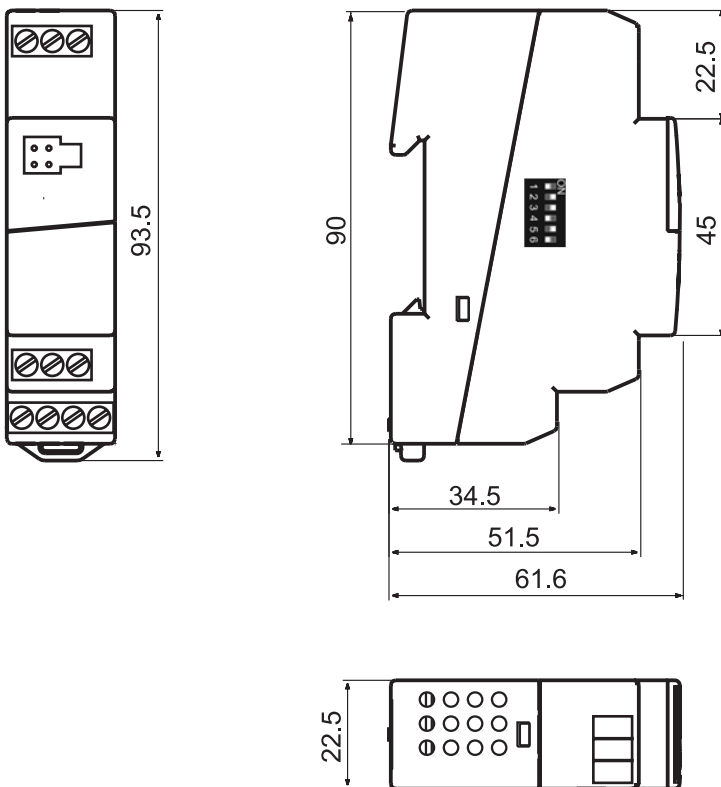

Order details: JUMO dTRANS T04

Four-wire transmitter, settable via DIP switch/PC setup program

(1) Basic version¹

| | | | |
|---|---|-------------------|---|
| | | 707040/1 | dTRANS T04 for Pt100 resistance thermometer |
| | | 707040/2 | dTRANS T04 for Pt1000 resistance thermometer |
| | | 707040/3 | dTRANS T04 for potentiometer |
| | | (2) Input | |
| x | x | 888 | factory-set ² (3-wire circuit, 0 to 100°C) |
| | | 888 | factory-set ² (3-wire circuit, 0 — 1 kΩ) |
| x | x | 999 | configuration to customer specification (please specify in plain text) ³ |
| | | (3) Output | |
| x | x | 888 | factory-set (0 — 20mA) |
| x | x | 999 | setting to customer specification (please specify in plain text) ³ |
| | | (4) Supply | |
| x | x | 22 | 20 — 53V AC/DC, 48 — 63Hz |
| x | x | 23 | 110 — 240V AC +10/-15%, 48 — 63Hz |

Order code (1) - (2) - (3) - (4)

Order example 707040/1 - 888 - 888 - 23

1. It is not possible to switch between the sensor types.
2. Additional measuring ranges are selectable via DIP switch or PC setup program (see Page 4).
3. Please check whether the required measuring range and output can be set via DIP switch. In such a case, "factory-set" can be ordered.

Standard accessory

- Operating Manual

Accessories

- PC setup program, multilingual
- PC interface cable with TTL/RS232 converter and adapter